

**GenFast™ Termination Bar**



**DESCRIPTION**

GenFast™ Termination Bar is a corrosion resistant aluminum material used for terminating and sealing membrane wall flashings to various approved substrates as outlined by current GenFlex Specifications and Details.

**PHYSICAL PROPERTIES**

PROPERTY	MINIMUM PERFORMANCE
Material	Corrosion Resistant Aluminum
Thickness	0.090" (2.3 mm)
Features	GenFlex logo on each section Reservoir channel for Termination Caulk on top
Holes	Pre-punched 0.28" x 0.38" (7 x 10 mm) Slotted Holes 3.93" (100 mm) O.C.

**PRODUCT DATA**

SIZE	CONTENTS	ITEM #
1.25" (32 mm) X 10' (3 m)	50 Bars per Tube	W590010088
1.25" (32 mm) X 5' (1.5 m)	50 Bars per Tube	W590051239

**INSTALLATION**

- Substrates must be free from dust, dirt, oil, water, and other contaminants (wall areas above termination bar must not pass water). Install per current GenFlex specifications.
- Apply GenFlex Waterstop behind flashing membrane.
- Install flat side of bar towards flashing so "lip" is facing upwards, and forms a wide reservoir for edge caulk.
- Anchor bar through pre-punched holes at a rate to maintain a seal to the wall against waterstop. (Max. 12" o.c. (304.8mm)).
- Remove excess flashing material above bottom of lap sealant reservoir channel.
- Install GenFlex Termination Caulk into reservoir channel.
- Consult GenFlex Roofing Systems specifications for specifics.

**APPLICATION PRECAUTIONS**

- Do not use as a bar anchor.
- Where field cutting is necessary, remove any burrs from bar.
- Clean up shavings, etc., that may occur from field cutting.
- Install flat side of bar towards flashing so "lip" is facing upwards, and forms a wide reservoir for edge caulk.
- Keep a space of ¼" (6mm) between each length of GenFlex Termination Bar.
- GenFlex Termination Bars must be installed directly to the wall surface, not existing sheet metal, flashings, etc.
- Install GenFlex Termination Bar on hard, smooth surfaces only. Do not install on substrates where seal is lost at mortar joints, etc.
- Install GenFlex Termination Bar vertically where base flashing(s) end.
- Do not install GenFlex Termination Bar to wood or other porous surfaces.
- At inside and outside corners, GenFlex Termination Bar must be cut and continued.
- GenFlex Termination Bar must be fastened a maximum of 1" (25 mm) from each end of all sections.

**LEED INFORMATION**

Recycled Content	
Post Consumer	0%
Post Industrial	0%

**STORAGE**

Termination Bar should be protected from moisture and kept dry at all times. If stored out of doors, place on skids in a dry area and cover with a breathable tarp.

**SHELF LIFE**

Not applicable

**PRECAUTIONARY DATA**

Eye protection is recommended when installing the appropriate fastener through the Termination Bar.

Refer to Material Safety Data Sheet for additional information.