


1" Min. (25.40 mm) Hot Air
Weld on Each Side of
Anchor or Poly Bar*

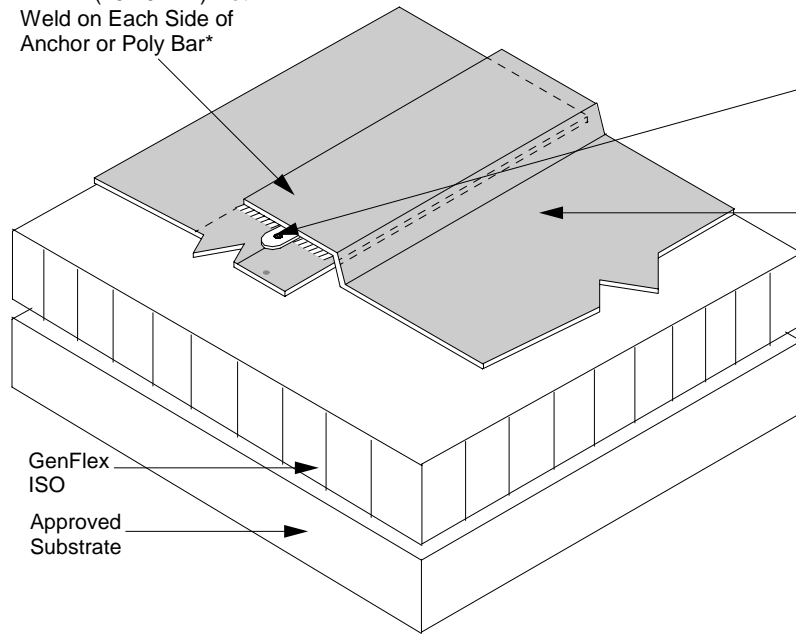

GenFlex Fasteners and Anchor or Poly Bar
Centered over **Solid Line**. See Detail T-6.05.
GenFlex Fasteners and Seam Plates or Anchor
Bar Centered Over Spacing Dots. See Detail
T-6.05. Refer to the GenFlex web site for the
most current GenFlex TPO Fastening Matrix for
fastener spacing requirements.

GenFlex TPO Membrane

GenFlex
ISO
Approved
Substrate

*Position adjacent membrane panels on the factory-applied dashed reference line, and install membrane securement (anchor or poly bar only) as required, centered directly over Adhered and Ballasted reference line **NOT OVER FASTENER DOTS**. This allows sufficient membrane on each side of the bar to achieve a minimum 1" (25.40 mm) hot air weld on each side.



Dual Weld Seam

Detail #: T-6.03

**TPO Mechanically
Attached Systems**