

SPECIFICATION 07541.6
GENFLEX TPO
METAL RECOVER
FULLY ADHERED SYSTEMS

General		Page
1.01	Description.....	1
1.02	Quality Assurance.....	1
1.03	Submittals.....	1-2
1.04	Product Delivery, Storage, and Handling.....	2
1.05	Job Conditions (Cautions and Warnings).....	2-3
1.06	Warranty.....	4-5
1.07	Codes.....	5
1.08	Acceptable Structural Roof Decks.....	6
1.09	Acceptable Roof System Substrates.....	6
1.10	Acceptable GenFlex Fasteners.....	7
1.11	Wood Nailers.....	8
Products		
2.01	General.....	8
2.02	Membrane.....	8
2.03	Related Materials.....	8-9
Installation		
3.01	Substrate Criteria.....	9
3.02	Substrate Preparation.....	9
3.03	Insulation Application.....	10
3.04	Insulation Securement.....	10
3.05	Membrane Application.....	11
3.06	Membrane Attachment.....	11
3.07	Seaming.....	11-12
3.08	Perimeter and Base Membrane Securement.....	12-13
3.09	Flashings.....	13-15
3.10	Walkways.....	15
3.11	Finished Roof Protection.....	16
 System Specific Supplemental Details.....		 17-24

SPECIFICATION 07541.6
GENFLEX TPO
METAL RECOVER
FULLY ADHERED SYSTEMS

PART 1 - GENERAL

1.01 DESCRIPTION

- A. GenFlex Roofing Systems recommends the use of a design professional to assure correct roof design for the roofing project, to address any non-standard conditions on the project, and to ensure compliance with applicable building codes.
- B. GenFlex specifications are designed to detail the minimum requirements to obtain a GenFlex warranty on a roofing project. Your roofing project may have additional requirements spelled out in the contract documents above and beyond the GenFlex requirements due to applicable building codes or design characteristics specified by the project designer.
- C. The GenFlex Roofing Systems TPO Metal Recover Fully Adhered System utilizes GenFlex TPO membrane bonded to a GenFlex approved insulation or structural substrate.
- D. One GenFlex Roofing Systems authorized applicator shall perform roof application and related work. A single firm is required so that there is undivided responsibility for the performance of the completed roofing system.
- E. Furnish and install the GenFlex Fully Adhered Roofing System in strict accordance with drawings and specifications approved by GenFlex Roofing Systems. Refer to the GenFlex web site to review any applicable technical updates.
- F. Related Work
The work includes, but is not necessarily limited to, the installation of:
 - 1. Vapor Retarders (where required)
 - 2. GenFlex Insulation
 - 3. GenFast Bar Anchors
 - 4. GenFlex Polyester Felt Underlayment
 - 5. GenFast Fasteners
 - 6. GenFlex Roof Membrane
 - 7. GenFlex Flashing
 - 8. GenFlex Metal Flashing
 - 9. Wood Nailer
 - 10. GenFlex Walkway Pads
 - 11. GenFlex Approved Sealants
 - 12. GenFlex Adhesives
 - 13. GenFlex Metal Edging and Coping per ANSI / SPRI ES-1 (as required)
 - 14. All metalwork to be fastened per Sheet Metal & Air Conditioning Contractors National Association (SMACNA) standards.

1.02 QUALITY ASSURANCE

- A. The roofing system must be installed by an authorized GenFlex Roofing Systems applicator for the project to be eligible to receive a manufacturer's system warranty.
- B. There shall be no deviation made from this specification or the detail drawings without written approval from GenFlex Roofing Systems fourteen (14) days prior to the start of the roofing project.
- C. Upon completion of the installation, an inspection shall be conducted by a Technical Representative of GenFlex Roofing Systems to ascertain that the roofing system has been installed according to GenFlex Roofing Systems most current published specifications and details. This inspection is not intended to be a final inspection for the benefit of the owner. It is for the benefit of GenFlex Roofing Systems to determine whether a warranty can be issued.
- D. It is the roofing applicator's responsibility to adhere to all applicable local and national building codes for roofing system installation requirements and limitations in his/her geographical area.
- E. For specific code and testing agency approvals achieved by GenFlex Roofing Systems, refer to the agency's published listings or call the GenFlex Roofing Systems Technical Department.

1.03 SUBMITTALS

- A. Submit a Pre-Job Survey form to the GenFlex Roofing Systems Technical Department for approval PRIOR to the job start. This enables the Technical Department to approve the intended assembly and assign a job number to the project. This submittal may include deviation request forms or pullout test results, depending on the project criteria.

1. The Pre-Job Survey MUST be filled out completely and accurately to include any prior deviations approved from this specification.
 2. The Pre-Job Survey must have a roof drawing or shop drawing attached for the project to be assigned a job number. The roof drawing must show: a) the dimensions of the roof system being submitted for warranty coverage, b) the location of all curbs installed during initial application, c) the type and thickness of insulation used in each area, d) the penetration count by either plotting or listing the penetrations installed during the initial application broken down into the various categories, e.g. pipes, drains, pourable sealer pockets, etc. This information is required in order to protect both GenFlex Roofing Systems and the installing contractor from additional liability for alterations performed to the roof system without GenFlex's knowledge or involvement. The Technical Department requests a separate roof drawing for each roof assembly type installed on a project. For example, a project consisting of an adhered and a ballasted system would require two separate roof plans. If the two different assemblies are on the same building, please indicate their proximity to one another on the roof plans for reference purposes.
- B. When material & workmanship or full systems warranties are desired, GenFlex Roofing Systems MUST receive the Pre-Job Survey or be contacted PRIOR to project bid and installation. Additional information may be required for the wind design of the system.
 - C. Upon completion of the project, the roofing contractor shall notify GenFlex Roofing Systems of the date of completion, and request a final inspection.
 - D. Upon completion of the roof inspection by GenFlex Technical Services Department, satisfactory completion of any punch list items, and receipt of applicable warranty fees, the warranty may be issued to the installing contractor.

1.04 PRODUCT DELIVERY, STORAGE AND HANDLING

- A. Deliver materials in original, unopened containers.
- B. Containers shall be labeled with manufacturer's product name and general information.
- C. All materials, excluding the membrane, should be stored between 60 °F (16 °C) and 80 °F (27 °C). If materials are exposed to lower temperatures, restore material to 60 °F (16 °C) minimum temperature before using.
- D. Store all materials, including membrane, in a dry, protected area. Damaged materials must not be used. Installed materials found to be damaged shall be replaced at contractor's expense.
- E. Protect the membrane from abuse or damage during storage.
- F. Protect all stored materials from inclement weather by covering with breathable tarpaulins until ready to install. Anchor or weigh down the weather protection properly to prevent wind-related damage.
- G. Improperly stored insulation that has been allowed to get wet shall not be used in a warranted roof system and shall be replaced at the contractor's expense. In cases where the wet insulation is isolated to only a few boards per bundle, only those boards that have been wet must be replaced. Failure to replace insulation boards that have been exposed to moisture can result in bowing or curling of the insulation because the material may dry unevenly while in the roof system. This may adversely affect the dimensional stability of the insulation material. In either case, the removal and replacement of the affected insulation shall be the responsibility of the installing contractor as a punch list item or under their two-year obligation if discovered after the initial inspection but within twenty-four (24) months of approved final inspection by GenFlex.
- H. Keep insulation tarped and protected from moisture until ready for installation. **DO NOT INSTALL MORE INSULATION THAN CAN BE ROOFED OVER IN THE SAME WORKDAY.**

1.05 JOB CONDITIONS (CAUTIONS AND WARNINGS)

NOTE: Prior to the use of any GenFlex Roofing Systems product, consult Material Safety Data Sheets for applicable cautions and warnings.

- A. Do not use oil or bituminous base roof cement with GenFlex materials.
- B. Do not install GenFlex membrane directly in contact with new or resaturated asphalt.
- C. Do not expose membrane or accessories to temperatures of 180 °F (82 °C) or above.
- D. Do not allow waste products, such as petroleum grease, oil, or solvents, or direct steam venting to come in contact with the GenFlex roofing system. Any exposures not typical for normal roofing installation must be presented to GenFlex Roofing Systems for assessment of any impact on the performance of the roofing system.
- E. Do not install GenFlex membrane directly in contact with coal tar roof surfaces.
- F. When using an insulation / underlayment attachment method other than mechanical securement with GenFlex fasteners of an approved type, size and length, there may be additional factors to take into consideration.

The primary issues to consider include:

1. The products involved and the performance of asphalt attachment or insulation adhesive by others will not be included in the GenFlex system warranty coverage because they are products supplied by others. Separate warranty coverage may be available from the manufacturer of the product being used, but it is separate from the GenFlex warranty coverage and may be pursued by the installing contractor or property owner.
 2. For insulation / underlayment attachment methods other than loose laid for ballasted systems and mechanically anchored to GenFlex specification for adhered and mechanically attached systems, the maximum allowed board size is 4' x 4' (1.22 m x 1.22 m).
 3. When using insulation adhesive, verify that the approved substrate has not been altered by coatings, sealants, or additives. **NOTE:** Unless the GenFlex Technical Department provides written approval of specific products and / or applications prior to the start of a roofing project, alteration of the bonding substrate (e.g. application of primers and / or sealants, etc.) voids warranty coverage for the insulation attachment.
- G. Do not tear off more roof than can be covered the same workday.
- H. Do not install more roofing insulation than can be roofed over and sealed the same workday.
- I. Do not phase roofing installation. Complete all details daily, and install night seals as required to ensure the installed roofing components are protected from moisture.
- J. Perform daily quality control checks of installed seams and details, and correct any identified deficiencies each and every workday to prevent moisture from entering the roof system.
- K. Cold weather application of GenFlex adhesives and sealants requires special consideration. As specified in the Product Delivery, Storage and Handling section above, the GenFlex roofing adhesives, solvents, caulks and sealants must be stored at service temperatures ranging from 60 °F (16 °C) to 80 °F (27 °C) prior to use.
1. If a room temperature storage environment is not available, the GenFlex products must be restored to serviceable temperatures before application by alternate means, such as hot boxes or pail warmers, and rotated as required to maintain a serviceable installation temperature throughout the application process.
 2. During periods of high humidity, especially at cooler temperatures, condensation may form on the surface of the adhesives and primer. This is referred to as “blushing.” It occurs when the dew point is near the ambient outside temperature and is caused by the evaporation cooling process inherent in the flashing of solvents. Blushing is more prevalent on foggy or overcast days. **ONCE BLUSHING BEGINS, WORK MUST BE STOPPED UNTIL CONDITIONS IMPROVE.** During cold weather, work in smaller areas, allow longer flash-off times, and limit application of solvent-based adhesives and sealants to the warmest hours of the work period possible.
 3. Solvent-based adhesives tend to surface-flash during cold weather, forming an outer skin on the surface before the entire adhesive layer has had sufficient time to flash-off. To correct the application condition when this occurs, allow the adhesive layer to flash-off properly. To determine if the applied adhesive has surface-flashed, conduct a “push” test of the prepared surface by touching the adhesive film with your finger (away from any seam edges), and push to see if your finger slides through any un-flashed adhesive. If a surface skin condition is identified, allow extra time for the adhesive film to properly flash-off before retesting. In extreme cases of surface curing, it may be necessary to allow the adhesive film to cure completely overnight and to start over when better working conditions exist. Adhering two surfaces that have suffered surface curing of the adhesive will result in blisters and bubbles in the membrane application, caused by the trapped solvent from the uncured adhesive.
 4. Under no circumstances should laying of membrane, or application of adhesives, primers, or caulks take place during periods of any form of precipitation.
- L. Cold weather application of GenFlex TPO membranes requires special consideration.
1. Thermoplastic membrane roofs are assembled with hot air welded seams, using electric powered hot air welders. Cold weather applications require extra attention to ambient conditions because fluctuations in temperature and wind can adversely affect the welding parameters established at the beginning of the workday.
 2. During a cold weather application, it is important to reestablish welding parameters after every break in hot air welding, e.g. lunch, at the beginning of each workday, etc. Conduct a welding test on some scrap membrane, and set up the welding equipment correctly for the current conditions.

1.06 WARRANTY

GenFlex Roofing Systems offers several levels of warranty coverage on roofing systems installed using GenFlex brand products. Available coverage ranges from membrane only warranties to full system material and labor warranties. Full system warranties include coverage for ALL GenFlex brand materials used in a new roof assembly and the workmanship used to install the GenFlex products.

The level of warranty coverage sought on the project is indicated by the installing contractor on the Pre-Job Survey form submitted during the project registration process. The project registration information submitted by the contractor is then validated against the requirements for the type and length of warranty sought during the project review process before a job number is issued on a project. Listed below are some of those requirements for consideration. Additional system specific and warranty specific requirements apply and are subject to change at any time through the technical update bulletin notification process. Review the latest technical updates on the GenFlex web site for the most current information.

Because each warranty type and term carries specific requirements, requests from the installing contractor and / or property owner to change the warranty type or term after installation may or may not be honored, depending on the actual installed roofing assembly and components.

- A. A project is eligible for warranty coverage by GenFlex Roofing Systems, including workmanship for those materials supplied by GenFlex Roofing Systems, when the project is completed according to the most current GenFlex specification by a GenFlex Roofing Systems authorized applicator. Sub-contracting installation labor to a non GenFlex authorized contractor without GenFlex's explicit written authorization renders the roofing project non-warrantable. If a project is rendered non-warrantable due to non-authorized installation labor, a membrane only warranty will be issued instead of the requested system or labor and material warranty.
- B. When a full system warranty or a warranty that exceeds ten years of coverage is specified for a project, a complete tear-off to the structural deck is required. On a deviation basis, subject to GenFlex review and acceptance, an independent moisture survey may be submitted instead of a tear-off. For a moisture survey to be considered, the survey must have documented core cuts with findings fully specified. All wet insulation identified during the core cut process must be removed prior to reroofing and replaced with an acceptable new material. GenFlex's acceptance of the moisture survey does not indicate the insulation is suitable for recover, and GenFlex does not accept any liability for the performance of the existing insulation. Any existing insulation left in place and recovered is expressly excluded from warranty coverage and remains the responsibility of the building owner.
- C. Upon approved inspection of the completed installation by a GenFlex Roofing Systems Technical Representative and receipt of the appropriate warranty fees, a warranty may be issued to the installing contractor.
- D. The workmanship warranty is available for roofing systems installed on commercial, industrial, or institutional buildings only and is not available for single family residences, walking decks, terraces, patios or areas subjected to conditions not typically found on roofing systems.
- E. The warranty period is expressed on the warranty certificate, which reflects the inclusive dates of coverage.
- F. GenFlex insulation and fasteners are required on all full system warranted projects and on projects with warranty terms greater than ten years.
- G. If the metalwork on a project is specified by the designer to be included in a full system warranty, use GenFlex brand edge metal and coping products. Contact your Sales Agent for information.
- H. If a metal flashing product by others is submitted via a deviation request for inclusion in the warranty coverage, the following are minimum requirements for consideration:
 - 1. The metalwork must be shop or factory formed or extruded.
 - 2. The metalwork must be configured and installed in accordance with SMACNA guidelines and NRCA installation instructions.
 - 3. Minimum requirements regarding metalwork material are, 24 ga (0.61 mm) G-90 Kynar pre-finished steel or 0.040" (1.02 mm) aluminum (mill finished, pre-finished or anodized).
 - 4. A deviation request for metalwork inclusion in warranty coverage must accompany the Pre-Job Survey form submitted by the installing contractor.
 - 5. The deviation request must include shop drawings of the metalwork to be included and a roof plan showing the installed location and linear dimension for each profile.

6. Should the deviation request be granted, the installing contractor will be responsible to GenFlex Roofing Systems for materials and installation labor performance for a period of two-years from the date of the approved final inspection by GenFlex under their installers agreement.

NOTE: The approval of metalwork for inclusion in warranty coverage is conditional upon acceptance by GenFlex Roofing Systems, and, if approved, is subject to the “terms, conditions and limitations” of the requested warranty. Under no circumstance will any warranty coverage for metalwork exceed the wind speed limitation of the warranty issued for the roof system. Aesthetic appearance is expressly excluded from warranty coverage. Metalwork by others is **NOT** permitted on projects warranted for wind speeds of 90 mph (144.84 km/h) or higher.

- I. Contact GenFlex Roofing Systems for additional warranty information.
- J. When it is anticipated that GenFlex membranes will be exposed to animal fats, petroleum grease or other grease products, the owner or owner’s representative is responsible for specifying that a sacrificial sheet, sand trap, or grease trap type containment product must be used to protect the waterproofing roof membrane.
- K. It shall be the owner’s responsibility to expose the membrane in the event that warranty service is required when access is impaired. Such impairment could include, but is not limited to:
 1. Design features, such as window washer systems, which require the installation of traffic surface units in excess of 80 lb (36.29 kg) per unit.
 2. Any equipment, ornamentation, building service units, or other rooftop surfacing materials which are not defined as part of the roofing system.
 3. Rooftop equipment that does not provide GenFlex with reasonable access to the membrane system for purposes of warranty investigation and related repairs.
 4. Standing water, snow, ice, or other materials unrelated to the roof system.
- L. Warranty coverage is limited to the maximum wind speed indicated on the warranty document as measured 30’ (9.14 m) above ground level and does not cover damage that results from failure of other building components, such as dislodged metalwork, wood nailers, rooftop units, or other materials not included in the GenFlex warranty coverage.

1.07 CODES

- A. GenFlex Roofing Systems has successfully tested its systems at UL and Factory Mutual testing facilities in order to qualify for specific codes and ratings used by designers in the specification of the various roofing systems.
- B. This testing is conducted in strict accordance with the industry recognized standardized testing procedures established and managed by each organization. The purpose of testing assemblies and materials is to evaluate performance capability for each individual component of the roofing system, as well as the performance of the combined assembly.
- C. Because codes and ratings are routinely updated and revised, it is important to consult with a GenFlex Technical Advisor or Sales Agent before quoting a project requiring compliance to a specific code rating. Please visit www.genflex.com for the most current published list of code ratings.
- D. It is the contractor’s responsibility to ensure compliance with designer specified code requirements on a project. GenFlex Roofing Systems does not inspect for compliance to code required enhancements to roof systems.

1.08 ACCEPTABLE STRUCTURAL ROOF DECKS

GenFlex Roofing Systems strongly recommends that you review its requirements and restrictions PRIOR to each roofing project. For steel decks, 24 to 28 gauge (0.61 mm to 0.38 mm) requires submission of pullout test results in order to determine acceptability. Steel decks less than 28 gauge (0.38 mm) are not acceptable.

1.09 ACCEPTABLE ROOF SYSTEM SUBSTRATES

An acceptable substrate will provide a smooth surface capable of fully supporting a GenFlex roof assembly and anticipated roof loads. When used to support an adhered roof system with either mechanically attached or bonded insulation to the deck, the acceptable insulation substrate must also possess sufficient structural integrity to secure the roofing membrane to the structure when the membrane is bonded to it. Thermal value to the roof assembly, when applicable, must also be considered when choosing an insulation substrate. When insulation is used as a roof substrate, the insulation must be capable of being supported by the structural deck. For example, a typical steel deck would not support wood fiber alone but would support an isocyanurate insulation board with a wood fiber overlay. On steel decks with 22 Gauge (0.76 mm) minimum thickness, an approved minimum thickness insulation board must be used. Insulation shall be mechanically fastened with appropriate fasteners and plates. Contact the GenFlex Technical Department for alternative methods to attach insulation to metal decks. A suitable substrate can be an existing roof surface, a structural deck, or insulation as detailed in the following table.

TABLE 1.09

Acceptable Insulations			
Insulation Type	Manufacturer Names	Minimum Thickness	Acceptable for use on these systems:
Isocyanurate	GenFlex Roofing Systems^A Atlas, Hunter Panels, Johns Manville, R-Max	1" (25.40 mm) min. 1 1/2" (38.10 mm) min.	All (1)
Wood Fiber	GenFlex Roofing Systems^A Knight Celotex, Georgia Pacific	1" (25.40 mm) min. for Std. 1/2" (12.70 mm) min. for High Density	All (1)
Perlite	GAF, Johns Manville	3/4" (19.05 mm) min.	Ballasted Only (1)
Polystyrene (Expanded or Extruded)	<i>Dow Chemical, Premier Industries^B</i> (Insulfoam EPS)	1" (25.40 mm) min.	All (1 & 2)
Gypsum Board	<i>Georgia Pacific (DensDeck)^B</i>	1/4" (6.35 mm) 1/2" (12.70 mm)	All (1)

NOTES:

- Insulation thickness must be minimum thickness required by manufacturer to span openings in the deck. In some cases, it may be necessary to use a support layer of insulation.
- Except ballast, expanded and extruded polystyrene insulation must be 1 lb minimum density and be overlaid with acceptable cover board. Contact GenFlex for other options with expanded and extruded polystyrene insulations.

^A**Products in bold are covered by the GenFlex warranty when installed in a warranted system.**

^B***Products in bold italic are covered by the GenFlex warranty when purchased through GenFlex Roofing Systems.***

1.10 ACCEPTABLE GENFLEX FASTENERS

Warranted GenFlex roof systems must be assembled using GenFast fasteners of appropriate type and length installed at the rate specified in the insulation attachment, and if applicable, the membrane attachment portion of the Installation Section of this specification. The application rate of fasteners specified in the sections mentioned above is based on an approved deck providing 300 lb (1 334.47 N) minimum pullout resistance. For projects with decks requiring pullout testing, a completed pullout test result form is required with the Pre-Job Survey Form in order to register the project with GenFlex.

TABLE 1.10

GenFlex Fastener Application Guide														
GenFlex Fastener Type	Approved Accessories	Insulation Attachment	Membrane Attachment	Deck Types										
GenFast #12 Fastener	1	Yes	No	Steel, Wood										
GenFast #14 Fastener	1,4,5,6	Yes	Yes	Steel, Wood										
GenFast #15 (WH) Fastener	1,5,7	Yes	Yes	Steel, Wood, Concrete										
GenFast #16 Max Fastener	7,10	No	Yes	Steel, Wood,										
GenFast #12 Preassembled Fastener & Plate	N/A	Yes	No	Steel, Wood										
GenFast #15 Preassembled Fastener & Plate	N/A	Yes	Yes	Steel, Wood, Concrete										
GenFast CD-10 Concrete Fastener	1,4,5,6	Yes	Yes	Concrete										
GenFast Lite-Deck Fastener	2,8	Yes	Yes	Gypsum, Cementitious Wood Fiber										
GenFast Purlin Fastener	5,6	Yes	Yes	Steel Purlins										
GenFast NTB Fastener (w/ or w/o wire)	3,9	Yes	Yes	Gypsum, Cementitious Wood Fiber										
Insulation Plate Options:		1) GenFast Insulation Plate 3) GenFast NTB Insulation Plate												
Membrane Securement Options:		2) GenFast Lite-Deck Plate 4) GenFast 2" Seam Plate 6) GenFast Bar Anchor 8) GenFast Lite-Deck Bar 10) GenFast 3" Max Seam Plate												
		5) GenFast (WH) 2 3/8" Seam Plate 7) GenFast Polymer Batten Strip 9) GenFast NTB Seam Plate												
<p>This is only a partial representation of GenFlex Roofing Systems codes. Please contact the GenFlex Technical Department if you have any code related questions regarding assemblies not referenced.</p>														
<p>NOTE: GenFlex fasteners are required on all full system and 15 & 20 year warranties. 1. GenFlex fasteners shall be corrosion resistant coated and comply with Factory Mutual Standard 4470. 2. Insulation fasteners shall be suitable for the insulation used. 3. All screw type fasteners shall be a minimum #14 shank diameter for membrane securement. 4. No hex head fasteners are permitted for insulation or membrane securement in GenFlex warranted systems.</p>														
<p>GenFlex Roofing Systems requires a pullout test to be conducted by an independent agency on the following types of decks: gypsum, cementitious wood fiber, oriented strand board, lightweight concrete, concrete plank, and any metal decks lighter than 22 gauge (0.76 mm). The results must be submitted to the GenFlex Technical Department prior to project bid. Fully adhered applications on decks providing less than the required 300 lb (1 334.47 N) of pullout resistance may still qualify for warranty coverage, provided the insulation is secured in accordance with the supplemental securement table on the following page and approved by the GenFlex Technical Department.</p>														
		<table border="0"> <thead> <tr> <th><u>Roof Size</u></th> <th><u>Pullout Test Requirements</u></th> </tr> </thead> <tbody> <tr> <td>Less than 10,000 ft² (929.03 m²)</td> <td>6</td> </tr> <tr> <td>10,000 ft² - 50,000 ft² (929.03 m² - 4 645.15 m²)</td> <td>10</td> </tr> <tr> <td>50,000 ft² - 100,000 ft² (4 645.15 m² - 9 290.30 m²)</td> <td>20</td> </tr> <tr> <td>Over 100,000 ft² (9 290.30 m²)</td> <td>1 per 5,000 ft² (464.52 m²)</td> </tr> </tbody> </table>			<u>Roof Size</u>	<u>Pullout Test Requirements</u>	Less than 10,000 ft ² (929.03 m ²)	6	10,000 ft ² - 50,000 ft ² (929.03 m ² - 4 645.15 m ²)	10	50,000 ft ² - 100,000 ft ² (4 645.15 m ² - 9 290.30 m ²)	20	Over 100,000 ft ² (9 290.30 m ²)	1 per 5,000 ft ² (464.52 m ²)
<u>Roof Size</u>	<u>Pullout Test Requirements</u>													
Less than 10,000 ft ² (929.03 m ²)	6													
10,000 ft ² - 50,000 ft ² (929.03 m ² - 4 645.15 m ²)	10													
50,000 ft ² - 100,000 ft ² (4 645.15 m ² - 9 290.30 m ²)	20													
Over 100,000 ft ² (9 290.30 m ²)	1 per 5,000 ft ² (464.52 m ²)													
<p>CAUTION: Use appropriate fastener for substrate.</p>														

1.11 WOOD NAILERS

Wood nailers provide a termination point for roofing insulation as well as a securement point to tie the roof system into the building shell. Wood nailers are not covered by the GenFlex warranty because they are a product by others and considered part of the building structure. Following are GenFlex's requirements for wood nailers:

- A. Wood nailers are required at all roof edges where metalwork, drip edges, or gutter systems are specified. The width of the nailer must exceed the width of the flange of any metalwork mounted to it and be of equal thickness to the roof insulation in order to protect the edge of the insulation and provide a substrate to which the metalwork can be anchored, without impeding drainage. Wood nailers are also required under any rooftop curbs that are not mounted directly to the structural deck with the same width and thickness requirements stated above.
- B. Wood Nailers must be #2 Grade or better lumber. Wood treated with preservatives containing creosote, asphalt, pentachlorophenol, copper naphthenate, copper 8-quinolinolate, and alkaline copper quaternaries (ACQ) have an adverse effect on single-ply roofing membranes and are not acceptable for use in a GenFlex roofing system.
- C. In all cases, the wood nailer must be anchored to the deck in an industry accepted method to the designing architect's specification. As a minimum standard, the wood nailers must be anchored sufficiently to resist 200 lb (889.64 N) of force per linear foot in any direction with fasteners spaced not more than 24" (609.60 mm) apart. Refer to the Perimeter Flashing portion of Factory Loss Prevention Data 1-49 (June 1985) for nailer securement recommendations. Wood nailers are not part of the GenFlex roofing system and are not covered by the GenFlex warranty.

PART 2 – PRODUCTS

2.01 GENERAL

- A. The components of the GenFlex TPO Roofing System are to be products of GenFlex Roofing Systems or approved by GenFlex Roofing Systems as compatible and acceptable. Unless specifically included in the warranty coverage by GenFlex Roofing Systems, products by others are excluded from coverage.

2.02 MEMBRANE

- A. GenFlex TPO membrane is available in a variety of membrane thickness and sheet width combinations that are illustrated in the table in Section 2.02 of the GenFlex Roofing Systems Design Criteria. Not all sheet widths shown are stock items. Consult your GenFlex Customer Service Representative regarding lead time for nonstock sheet length / width combinations.

2.03 RELATED MATERIALS

The following list contains the names of other GenFlex products and accessories that could be required in order to complete the roofing system. With the exception of walkway pads, which are considered maintenance items, GenFlex manufactured or supplied material is covered in the limited warranty, provided a warranty is purchased for the project.

NOTE: Prolonged exposure of adhesives and sealants to temperatures greater than 80 °F (27 °C) will reduce their shelf life. Shelf life is indicated on the product label or in the product information data for the particular product item which can be found at www.genflex.com.

TPO

A. TPO Non-Reinforced Flashing	24" x 50' (609.60 mm x 15.24 m)
B. TPO Coated Metal	4' x 10' (1.22 m x 3.05 m) sheets
C. Bonding Adhesive	60 ft ² /gal (1.47 m ² /L) / 5 gallon (18.92 L) pail
D. TPO Cover Tape Kit	5" x 100' (127.00 mm x 30.48 m) / 2 rolls per ctn
E. Clear Primer	350 lf/gal (28.18 m/L) / 3 gallon (11.35 L) pail
F. TPO Edge Caulk	15 lf to 20 lf (4.57 m to 6.10 m) per tube / 10 per carton
G. TPO Edge Sealant	115' (35.05 m) per bottle / 12 bottles per carton
H. TPO Heat Weldable Walkway Pad	30" x 60' x 5/32" (762.00 mm x 18.29 m x 3.97 mm)
I. Cleaner	5 gal (18.93 L) pails / 5 gallon (18.92 L) pail
J. TPO Inside Corner	10 per box
K. TPO Outside Corner	10 per box
L. TPO Reinforced Outside Corner	10 per box
M. TPO Pipe Boot	1" (25.40 mm) to 6" (152.40 mm) / 10 per ctn

N. Peel & Stick TPO Pipe Boot	1" (25.40 mm) to 6" (152.40 mm) / 8 per ctn
O. TPO Reinforced Pipe Boot	1" (25.40 mm) to 6" (152.40 mm) / 10 per ctn
P. TPO T-Joint Cover	4 1/2" (114.30 mm) round / 100 pieces per carton
Q. TPO Flashing Kit	9" x 50' (228.60 mm x 15.24 m) Peel & Stick Flashing, 1 qt (0.95 L) Clear Primer, 4 Scrub Pads, 1 Scrub Handle, 1 Wooden Flashing Roller on Handle
R. TPO Coating Kit	1 qt (0.95 L) White Ace Coating, 2 ea. 4" (101.60 mm) Roller Covers, 1 ea. 4" (101.60 mm) Roller Cage
S. White Seam Tape	3" x 100' (76.20 mm x 30.48 m) / 4 rolls per ctn
T. Scrub Pad & Handle	3" x 5" (76.20 mm x 127.00 mm) / 30 pads & 4 handles per ctn

MULTI-SYSTEM ACCESSORIES

Insulation	ISO, ISO-Fiber, Nailboard, Wood Fiber
GenFast Fastener	#12, #14, #15 (WH), #16 Max, CD-10, Purlin, Lite-Deck, NTB / quantity per ctn varies
GenFast Insulation Plate	3", Lite-Deck, NTB
GenFast Seam Plate	2", (WH) 2 3/8", 3" Max., NTB / 1,000 per ctn
GenFast Bar Anchor	1" x 10' (25.40 mm x 3.05 m) / 50 per ctn
GenFast Polymer Batten Strip	1" x 250' (25.40 mm x 76.20 m)
GenFast Lite-Deck Bar	1" x 10' (25.40 mm x 3.05 m) / 500' (152.40 m) per tube
GenFast Preassembled Fastener & Plate	#12, #15 / 250 pcs per ctn
Low Rise Insulation Adhesive	500 to 600 ft ² per 3 gal pail (46.45 to 55.74 m ² per 11.36 L pail)
One Step Insulation Adhesive	200 to 600 ft ² per 4 pk ctn of 1.58 qt cartridges) (18.58 to 55.74 m ² per 4 pk carton of 1500 mL cartridges)
All Purpose Water Based Bonding Adhesive	120 ft ² /gal (2.95 m ² /L) / 5 gallon (18.92 L) pail
Pourable Sealer (A & B)	1 ft ² /gal (0.02 m ² /L) at 2" (50.80 mm) thick
Water Stop	15 lf (4.57 m) per tube / 25 per ctn
Termination Caulk	25 lf (4.57 m) per tube / 25 per ctn
GenFast Termination Bar	1.25" x 10' (31.75 mm x 3.05 m) / 50 per ctn
GenFast 1 1/4" Zinc Masonry Anchor	1 1/4" (31.75 mm) / 1000 per ctn
Ace Coating	100 ft ² /gal (2.45 m ² /L) / 5 gallon (18.92 L) pail
Polyester Felt Underlayment	4 oz (113.40 g) / 12' x 100' (3.66 m x 30.48 m)

CONSULT THE PRODUCT DATA SHEETS AVAILABLE ON-LINE AT WWW.GENFLEX.COM FOR ADDITIONAL PRODUCT INFORMATION.

PART 3 – INSTALLATION

3.01 SUBSTRATE CRITERIA

- A. The building owner or owner's representative is responsible for providing and determining that the substrate is suitable to receive the GenFlex TPO Roofing System. The GenFlex authorized contractor should not proceed until all defects have been corrected. If possible, begin roof installation at the high point of the roof, and work toward the lowest point.

3.02 SUBSTRATE PREPARATION

- A. Typically, metal recover substrates are less than 22 gauge (0.76 mm) steel and require fastener pullout testing to be performed prior to submittal. The proper fastener assembly pattern is based on the pullout values achieved. See table 3.04A.
- B. A positive slope is recommended to provide adequate drainage. Per NRCA guidelines, there should be no ponding water on the roofing system 48 hours after it has stopped raining.
- C. Any existing sprayed-in-place urethane foam roofs **MUST** be removed prior to the installation of this roofing system.
- D. Sweep the area of roof being covered to remove any loose dirt and debris.
- E. Cut the filler nailer boards to fit snugly between the metal roof ribs, and build up using multiple layers to equal the metal roof rib height. Install one continuous nailer board over the installed layers of filler nailer boards. Secure the nailers through the metal roof panels and into the building framework, e.g. purlin, to achieve a minimum of 200 lb (889.64 N) of pullout resistance per linear foot of nailer assembly.

3.03 INSULATION APPLICATION

- A. Fill the metal roof area between the high ribs with a filler insulation board either supplied or field cut to span from rib to rib equal in thickness to the rib height. The rib top must be beneath the surface level of the fill insulation.
- B. Overlay the fill insulation with a GenFlex approved cover board. Apply the cover board perpendicular to the metal roof panels. The cover board must be of sufficient thickness to span any gaps remaining between fill panels.
- C. Stagger all insulation joints the maximum amount possible, and lay out with all joints tightly butted. Any gaps greater than 1/4" (6.35 mm) wide must be filled with matching insulation material.
- D. When installing insulation thicker than 2 1/2" (63.50 mm), use multiple layers to maximize insulation thermal efficiency.
- E. When using multiple layers of insulation on a project, install each subsequent layer with the long axis running perpendicular to the layer below it with all joints staggered and tightly butted.
- F. Fit insulation tightly to roof penetrations, wood nailers, transitional walls, and parapets with any gaps greater than 1/4" (6.35 mm) filled with like material prior to membrane application.

3.04 INSULATION SECUREMENT

- A. Insulation attachment defined below is based on 300 lb (1 334.47 N) pullout resistance or greater, for pullout values less than 300 lb (1 334.47 N) per fastener, refer to the following table titled "Supplemental Securement Table".

NOTE: In the event the insulation is installed over an air barrier, the insulation securement must be in accordance with FM I-90 criteria for GenFlex Fully Adhered Roof Systems.

- 1. All insulation must be mechanically attached to the approved structural deck using GenFlex fasteners of appropriate type and length and insulation plates installed at the rate of one fastener and plate per 2 ft² (0.19 m²), or 16 fastener assemblies per 4' x 8' (1.22 m x 2.44 m) board for 22 ga (0.76 mm) steel decks or structural concrete. Other decks require pull testing and may require additional securement. See details TMR-11.02 and TMR-11.07. When installing insulation thicker than 1.5" (38.10 mm), a reduced fastening pattern may be applicable. Refer to the table, "Insulation Attachment Rates for Fully Adhered Systems," in the GenFlex Roofing Systems standard TPO details, or contact the GenFlex Technical Department.

TABLE 3.04A

Supplemental Securement Table for Use on Fully Adhered Projects with Fastener Pullout Values Less Than 300 lb (1 334.47 N) Pullout Resistance	
Minimum Average Pullout Value per Fastener	Fastener & Plate Assembly Spacing
300 lb or greater (1 334.47 N or greater)	1 every 2 ft ² (0.19 m ²) (16 per bd.)*
250 to 299 lb (1 112.06 to 1 330.02 N)	1 every 1.75 ft ² (0.16 m ²) (18 per bd.)
225 to 249 lb (1 000.85 N to 1 107.61 N)	1 every 1.50 ft ² (0.14 m ²) (21 per bd.)
175 to 224 lb (778.44 N to 996.40 N)	1 every 1.25 ft ² (0.12 m ²) (26 per bd.)
150 to 175 lb (667.23 N to 778.44 N)	1 every 1.0 ft ² (0.09 m ²) (32 per bd.)
<p>* This value may be reduced by 50% when the top layer of GenFlex insulation is a min. 2" (50.80 mm) or greater in thickness.</p> <p>NOTE: For fully adhered applications, the top layer of insulation shall not exceed 2.5" (63.50 mm). This table is NOT appropriate for extended wind speed warranties.</p> <p>Submit actual pullout test results to the GenFlex Technical Department for evaluation, and provide a roof drawing indicating the location and value of each pullout test result. The number of pullout tests required are as follows:</p> <ul style="list-style-type: none"> A. Less than 10,000 ft² (929.03 m²) - 6 pullout tests B. 10,000 ft² to 50,000 ft² (929.03 m² to 4 645.15 m²) - 10 pullout tests C. 50,000 ft² to 100,000 ft² (4 645.15 m² to 9 290.30 m²) - 20 pullout tests D. 100,000 ft² (9 290.30 m²) and over - 1 pullout test per 5,000 ft² (464.52 m²) <p>Pullout tests are required on any steel metal deck under 22 ga (0.76 mm) thickness.</p>	

3.05 MEMBRANE APPLICATION

A. Membrane

1. Position the GenFlex TPO membrane over the approved substrate without stretching.
2. Allow the membrane to relax a minimum of one-half (1/2) hour prior to any seaming or flashing.
3. Position all adjoining sheets in a manner that all sheets overlap a minimum of 2 1/2" (63.50 mm).

3.06 MEMBRANE ATTACHMENT

A. Adhering Membrane

1. The TPO fully adhered system may be installed on roofs up to 50' (15.24 m) in height. For heights exceeding 50' (15.24 m), contact the GenFlex Roofing Systems Technical Department. This design can be used for roofs requiring the Zone 1 and Zone 2 wind uplift criteria as contained in Loss Prevention Data 1-28 as published by the Factory Mutual Research Corporation. **NOTE:** This does not mean these systems are approved by the Factory Mutual Research Corporation. Contact GenFlex Roofing Systems or consult the Factory Mutual Approval Guide for approved assemblies.
2. Fold sheet back without creasing, so one-half (1/2) of the underside of the sheet is exposed. Be sure the sheet fold is smooth with no wrinkles or buckles.
3. Stir GenFlex bonding adhesive thoroughly. Achieve a uniform mix with no marbling and no sediment on the bottom of the pail. **DO NOT THIN.**
4. Apply bonding adhesive to the substrate and the membrane with a 9" (228.60 mm) medium nap roller, approved spray equipment (spray applied bonding adhesive must be back-rolled) or power roller equipment. The membrane and substrate must have 100% adhesive coverage. Do not apply bonding adhesive to the splice area. Avoid globs or puddles of adhesive. Refer to Section 2.03 of this specification for coverage rates of GenFlex bonding adhesives.
5. Allow adhesive to dry to the point that it feels tacky to the touch but does not transfer to a clean, dry finger when you conduct a "push" test. **DO NOT ALLOW TO OVER DRY.** If the surface dries to the point that it no longer feels tacky, reapply bonding adhesive to both surfaces at the prescribed application rate, and allow to flash-off again to the proper drying condition.
NOTE: Do not allow adhesive to come into contact with areas that will be hot air welded. If contamination occurs, remove any contaminates prior to hot air welding seams.
6. Roll the adhesive-coated membrane onto the adhesive-coated substrate, avoiding wrinkles.
7. Using a push broom and positive downward pressure, brush down the bonded half of the membrane sheet to achieve maximum contact.
8. Fold back the un-adhered half of the sheet, without creasing, and repeat bonding procedure.
9. Apply adjoining sheets in same manner, lapping edges a minimum of 2 1/2" (63.50 mm).
10. Any wrinkles found in the splice area or that impede the flow of water drainage must be cut out, laid flat, and repaired using TPO membrane and standard hot air seam welding procedures.

3.07 SEAMING (See Detail T-6.01)

A. **NOTE: IT IS VERY IMPORTANT THAT BOTH SURFACES ARE CLEAN AND NO MOISTURE IS PRESENT ON THE SPLICING SURFACES.**

1. Unroll the membrane and allow to relax as long as possible. (Minimum 1/2 - 1 hour)
2. Position the top membrane to overlap the bottom membrane by 2 1/2" (63.50 mm).
3. If seam area has become contaminated with dirt or debris, use a clean rag saturated with GenFlex cleaner and thoroughly clean an area on both sheets at least 4" (101.60 mm) wide. Change rags frequently to avoid depositing previously removed materials. Allow cleaner to flash-off completely prior to seaming.
4. Using an approved automatic heat welding machine or hand held heat gun and silicone roller, continuously weld a minimum 1 1/2" (38.10 mm) wide seam. GenFlex recommends that only approved automatic walker welders be used to weld all field seams. See Hot Air Welder Specifications. Special attention must be paid to areas where multiple layers (3 or more) of TPO field membrane come together (T-joints).

- a. T-Joint Covers are **recommended** for applications involving 45 mil (1.14 mm) membrane if probing reveals the presence of voids or cold welds and are **REQUIRED** for applications involving 60 mil (1.52 mm) membrane regardless of probing results. T-joint covers are marketed by GenFlex in packages of pre-cut covers or can be field formed by cutting 4" (101.60 mm) round disks from a roll of GenFlex TPO Non-Reinforced Flashing.
 - b. A GenFlex TPO T-Joint Cover or 4" (101.60 mm) round field cut of GenFlex TPO Non-Reinforced Flashing shall be used in areas where three (3) or more layers of TPO membrane intersect (T-Joints).
 - c. Clean the area where the T-joint cover will be applied thoroughly with GenFlex Cleaner. The area should be 6" (152.40 mm) round and have the intersection of the T-joint at its center point.
 - d. Position the T-joint cover so that it is centered on the T-joint.
 - e. Hot air weld the T-joint cover into place in accordance with GenFlex hot air welding requirements.
 - f. Allow the hot air welded T-joint cover to cool thoroughly, and then probe its edges to be certain of a solid weld.
 - g. Repair voids or cold welds as necessary to obtain a solid weld between T-joint cover and the underlying TPO membrane layers.
5. All welded seams must be manually checked for voids or seal deficiencies after the seam has cooled. Probe the entire seam area with a dull cotter key extractor. In addition, there must be destructive testing performed at the beginning of every workday and every time there is an interruption in the welding process. (E.g. Power failure, welder shut down, change in job site conditions, or after lunch). All deficiencies must be repaired.
 6. All TPO membrane cut edges with exposed reinforcement scrim require an application of GenFlex TPO Edge Sealant by the end of the workday in which the membrane with the raw edge is installed in the roofing system. Failure to seal the raw membrane edge before moisture wicks into the scrim may result in an inferior hot air weld if not already welded, and/or a leak source, depending on the location of the cut edge in relation to fasteners penetrating the membrane. Issues relating to unsealed edges will be corrected by the installing contractor at the contractor's expense as either a punch list item or under their two-year obligation if identified by GenFlex within twenty-four (24) months of approved final inspection.

3.08 PERIMETER AND BASE MEMBRANE SECUREMENT

- A. Regardless of the method used to secure the field of the roofing membrane, some points on every roof require additional membrane securement. These areas include roof perimeters (parapets, transitional walls and edges), deck angle changes in excess of 2"/12" (including drain sump areas), all curb-type roofing penetrations, pipe-type penetrations greater than 12" (304.80 mm) in diameter, both sides of expansion joints and other areas where the membrane must be anchored to prevent movement, stress or damage to the roofing membrane. Refer to the TPO standard details in this manual for securement requirements.
Perimeter Attachment
 1. GenFlex Roofing Systems offers several different types of attachment methods. Consult the appropriate GenFlex standard detail section of this manual.
 2. Base attachment is required at each roof level, curb skylight, expansion joint and roof penetration over 12" (304.80 mm) in diameter or any angle change in slope or combined slopes that exceed 2" (50.80 mm) in 12" (304.80 mm).
- B. Wood nailers provide a termination point for roofing insulation as well as a securement point for base flashing securement. Wood nailers are not covered by the GenFlex warranty because they are a product by others and considered part of the building structure. Following are GenFlex's requirements for wood nailers:
 1. Wood nailers are required at all roof edges where metalwork, drip edges, or gutter systems are specified. The width of the nailer must exceed the width of the flange of any metalwork mounted to it and be of equal thickness to the roof insulation in order to protect the edge of the insulation and provide a substrate to which the metalwork can be anchored, without impeding drainage. Wood nailers are also required under any rooftop curbs that are not mounted directly to the structural deck with the same width and thickness requirements stated above.
 2. Wood Nailers must be #2 Grade or better lumber. Wood treated with preservatives containing creosote, asphalt, pentachlorophenol, copper naphthenate, copper 8-quinolinolate, and alkaline copper quaternaries (ACQ) have an adverse effect on single-ply roofing membranes and are not acceptable for use in a GenFlex roofing system.

3. In all cases, the wood nailer must be anchored to the deck in an industry accepted method to the designing architect's specification. As a minimum standard, the wood nailers must be anchored sufficiently to resist 200 lb (889.64 N) of force per linear foot in any direction with fasteners spaced not more than 24" (609.60 mm) apart. Refer to the Perimeter Flashing portion of Factory Loss Prevention Data 1-49 (June 1985) for nailer securement recommendations. Wood nailers are not part of the GenFlex roofing system and are not covered by the GenFlex warranty.

3.09 FLASHINGS (REVIEW THE APPROPRIATE FLASHING DETAIL IN DETAIL SECTION OF THIS MANUAL.)

- A. Roof perimeter flashing and flashing around vents, skylights and miscellaneous roof projections must utilize GenFlex pre-molded TPO flashings to the greatest extent possible. Field fabricated detail flashings using GenFlex TPO Non-Reinforced Flashing are acceptable only when a pre-molded flashing is unfeasible, such as on pipes without top access.
GenFlex Roofing Systems offers numerous options for flashing. See our standard details.
 1. Vertical Membrane Flashings (Parapets, Transitional Walls, Curbs, etc.)
Wall, parapet, and/or curb flashings may be completed using standard TPO membrane or Peel & Stick TPO membrane equal in gauge (thickness) to the deck membrane.
 - a. Complete seams between the flashing membrane and the field membrane according to GenFlex hot air welding procedures.
 - b. Stir GenFlex bonding adhesive thoroughly. Achieve a uniform mix with no marbling and no sediment on the bottom of the pail. **DO NOT THIN.**
 - c. Apply GenFlex bonding adhesive to both the flashing material and the vertical substrate to which it is being bonded. See Section 2.03 of this specification for coverage rates of GenFlex bonding adhesives.
 - d. Allow adhesive to flash-off until the surface of the adhesive-coated membrane flashing feels tacky but does not transfer to a clean dry finger or "slide" when a push test is performed.
 - e. Roll the prepared flashing membrane into the angle change, avoiding both sharp creases and excessive bridging, and continue up the vertical substrate without wrinkles, creases or trapped air, while smoothing the flashing to the substrate with a sweeping motion of your hand to promote a positive bond. **NOTE: Allow flashing membrane to bridge slightly at the deck to vertical substrate junction equal to the amount that will still allow a rubber or silicone hand seam roller to make contact with both the vertical and horizontal membrane surfaces simultaneously.**
 - f. Once the flashing has been preliminarily bonded to the vertical substrate by hand, sweep the flashing material with a medium-stiff bristle broom to finish the bonding process.
 - g. Terminate top edge of flashing per GenFlex Roofing Systems standard TPO details.
 2. Flashing penetrations passing through the roofing membrane.
 - a. Flash all pipes with GenFlex pre-molded pipe boots to the greatest extent possible. Field fabricate pipe flashings with GenFlex TPO Non-Reinforced Flashing per standard GenFlex Roofing Systems details when a pre-molded flashing is not feasible. **NOTE: All existing flashings MUST be removed before applying a new flashing.**
- B. Expansion Joints and Building Control Joints.
 1. Consult GenFlex Roofing Systems standard details for various application methods: T-11.01, T-11.02, T-11.03, and T-11.04.
- C. Pitch Pans
 1. Fill pitch pans in accordance with GenFlex Roofing Systems standard details: T-9.01, T-9.02, and T-9.03.
- D. Roof Drains
 1. Consult GenFlex Roofing Systems standard details T-8.01 and T-8.02.
 2. Prepare substrate around each roof drain to prevent membrane bridging or distortion and to provide a smooth transition from the roof surface to the drain clamping ring.
 3. The surface between the clamping ring and the drain must be clean and smooth. Remove all existing flashing, cement or lead on retrofit projects down to bare clean metal.
 4. Apply one (1) complete tube of GenFlex Water Stop between drain bowl compression flange and the underside of the new membrane before compressing the new membrane to drain bowl assembly, with the compression ring mounted on the top surface of the new membrane. The detail is only complete when the water stop is fully compressed between the new membrane and the flange of the drain bowl, forming a solid seal between the two. Be careful to compress the assembly evenly to avoid cracking

or breaking the drain compression ring. Cracked or broken drain compression rings may result in a reinspection of the finished roof system to make certain corrective measures have been made before GenFlex will accept the roof system for warranty coverage.

5. All bolts and/or clamps must be in place in order to provide constant, even compression. Missing drain bolts may result in a reinspection of the finished roof system to make certain corrective measures have been made before GenFlex will accept the roof system for warranty coverage.
6. Do not run seams through roof drains or sumps. If a seam is run through a drain sump, cut the membrane with the assembled seam outside of the drain compression ring area, and install a target patch of new membrane extending a minimum of 3" (76.20 mm) outside of the sump area and seamed into the field membrane, using GenFlex standard seam tape seaming procedures. Apply T-joint covers as required at the target patch to seam intersections in accordance with GenFlex standard T-joint application procedures.

E. Scuppers

1. Scuppers are to be constructed according to criteria detailed in the Sheet Metal and Air Conditioning Contractors National Association (SMACNA) Manual.
2. As a minimum, GenFlex requirements regarding scuppers are as follows: the scupper assembly must be fabricated from a minimum of 24 ga (0.45 mm) G-90 steel, 0.040" (1.02 mm) aluminum, or GenFlex TPO Coated Metal and be sized to fit snugly through the wall opening. All joints must be sealed according to SMACNA standards, and the scupper must include a continuous 3" (76.20 mm) wide interior face flange with continuous rounded corners. The scupper must also be of sufficient length to extend through the exterior wall by at least 1/2" (12.70 mm), and be capable of being sealed on the exterior of the building to prevent backflow into the roof system or wall cavity.
3. In addition to the above, if a scupper is to be mounted at the deck to wall or parapet junction, a wood nailer of equal thickness to the roofing insulation must be secured to the structural deck below the scupper flange to provide a suitable mounting surface for the scupper.
4. Cut the flashing membrane tightly to the scupper opening in the wall.
5. Apply a heavy bead of Water Stop around the scupper opening (15 lf (4.57 m) per tube).
6. Insert the scupper sleeve into the scupper opening, and press the mounting flange into the Water Stop.
7. Secure the flange to the substrate with an appropriate fastener.
8. Flash scupper in accordance with the appropriate current GenFlex scupper detail.

F. Metalwork

1. No roof system is complete until all the edges are terminated in such a way as to prevent water infiltration into the roofed structure. This typically involves the use of manufactured or shop fabricated metal detailing, such as coping caps, gravel stops, roof edging, flashing and counter-flashing components. All metalwork should be fabricated and installed according to SMACNA and National Roofing Contractors Association (NRCA) guidelines. Unless specifically agreed to in writing by the GenFlex Technical Department prior to installation, metalwork manufactured by others is not included in the GenFlex warranty coverage.
2. The designer and roofing contractor should be aware that many municipalities and states are beginning to enforce metal codes that, until recently, were merely used as guidelines. These metal codes relate to minimum standards on material, fabrication, and testing of roof related metalwork. It is the contractor's responsibility to review and know the building codes relating to their roofing projects in order to avoid costly remedial work to bring a project into compliance.
3. If the metalwork on a project is specified by the designer to be included in a full system warranty, use GenFlex brand edge metal and coping products. Contact your sales agent for information.
4. If a metal flashing product by others is submitted via a deviation request for inclusion in the warranty coverage, the following are minimum requirements for consideration:
 - a. The metalwork must be shop or factory formed or extruded.
 - b. The metalwork must be configured and installed in accordance with SMACNA guidelines and NRCA installation instructions.
 - c. Minimum requirements regarding metalwork material are, 24 ga (0.61 mm) G-90 Kynar pre-finished steel or 0.040" (1.02 mm) aluminum (mill finished, pre-finished or anodized).
 - d. A deviation request for inclusion of metalwork in warranty coverage must accompany the Pre-Job Survey form submitted by the installing contractor.

- e. The deviation request must include shop drawings of the metalwork to be included and a roof plan showing the installed location and linear dimension for each profile.
 - f. Should the deviation request be granted, the installing contractor will be responsible to GenFlex Roofing Systems for a period of two-years from the date of GenFlex inspection and acceptance under their installers agreement.
5. Metalwork installation, regardless of material source, must be according to the metalwork manufacturers instructions available from the manufacturer or supplier.
- a. Metalwork formed by roofing contractors must be fabricated and installed in accordance with SMACNA and NRCA recommendations. All flange-mounted metalwork must be flashed according to the appropriate GenFlex material type's standard details. Metalwork formed by contractors is not eligible for warranty coverage unless the conditions listed under item "C" above are met and GenFlex accepts the metalwork for warranty coverage in writing.
 - b. Metalwork by roofing contractors must have metal joints stripped-in to the uppermost edge of the metal dam on the roof side.
 - c. TPO projects with cover tape flange strip-in of metalwork with a gravel dam (or a formed configuration that is capable of holding water on the edge of the installed cover tape) must have GenFlex TPO Edge Caulk applied on both sides of the cover tape.
 - d. Gravel stop style metalwork on TPO roof systems may be fabricated from GenFlex TPO Coated Metal in order to provide a suitable welding surface to seal the roof system to the metalwork. As an alternative on some TPO applications, it may be appropriate and permissible to use a two-piece snap on fascia assembly instead of clad metal. Consult your GenFlex Technical Advisor for options.
6. The approval of metalwork for inclusion in warranty coverage is conditional upon acceptance by GenFlex Roofing Systems, and, if approved, is subject to the "terms, conditions and limitations" of the requested warranty. Under no circumstance will any warranty coverage for metalwork exceed the wind speed limitation of the warranty issued for the roof system. Aesthetic appearance is expressly excluded from warranty coverage.
7. Metalwork by others is **NOT** permitted on projects requiring full system warranties and wind speed coverage equal to, or greater than, 90 mph (144.84 km/h).
- G. Night Seal
- 1. Consult GenFlex Roofing Systems standard detail T-19.03 .
 - 2. At the completion of each day's work, a watertight seal must be established at any loose edge of membrane with an appropriate sealant. Care must be used to guarantee that no water flows beneath any completed sections of roof. Consult GenFlex Roofing Systems standard night seal detail for method of attachment. Membrane contaminated with the sealant used as a night seal must be cut out and discarded prior to resumption of work.

3.10 WALKWAYS

- A. Consult GenFlex Roofing Systems standard detail T-16.04.
- B. Walkways are required at all access points to the roof system and recommended anywhere routine (routine is defined as once a month or more) traffic on the membrane surface is anticipated. Walkway pads are used to protect the weatherproofing membrane from damage or excessive wear and tear. Traffic-related roof damage is not covered by the GenFlex warranty. In areas of extreme traffic, contact GenFlex for options to enhance the roof system in order to prevent or mitigate traffic-related insulation damage. Walkway maintenance is the responsibility of the building owner because walkway pads are not part of the warranted waterproofing assembly.
- C. Should access to the roofing membrane be required in order to perform warranty service to the roof system, only GenFlex brand walkway pads will be moved and replaced as necessary to perform service at GenFlex's expense. Pavers, walkway systems, patio surface components and other products neither manufactured or supplied by GenFlex Roofing Systems that impede roof system service must be removed and replaced at the building owner's expense. Should the obstacle removal and replacement be performed by the GenFlex contractor servicing a leak call under building owner authorization and/or purchase order, GenFlex assumes no responsibility or liability for the performance of the contractor in performing that service.

3.11 FINISHED ROOF PROTECTION

- A. When it becomes necessary for other trades to work over a completed area of new roof, the roofing membrane and flashing must be protected from physical damage. Proper and adequate protection includes installing a slip-sheet in the work area overlaid with plywood or OSB, in order to dissipate the effects of traffic on the finished roof surface and to prevent impact damage to the system caused by dropped tools and/or equipment. If damage does occur to the roof system, it must be repaired immediately in order to preserve the integrity of the roof system. If membrane is damaged in more than six (6) locations within a 100 ft² (9.29 m²) area, new membrane extending 6" (152.40 mm) beyond the border of the damaged areas must be installed over existing membrane in accordance with GenFlex specifications. For fully adhered and mechanically attached applications, the membrane must be fully bonded with the existing underlying membrane with a GenFlex approved adhesive. Contact the GenFlex Technical Department with any questions on how to address comprehensive damage.

INSULATION ATTACHMENT RATES FOR FULLY ADHERED SYSTEMS

Insulation	Rating	Minimum Thickness	Frequency # per 4' x 8' bd. (1.22 m x 2.44 m)	Fastener & Plate	Pattern
GenFlex Iso 1	I-90 ^C	2.0" (50.80 mm)	8	GenFast #12, #14, #15 and GenFast Insulation Plate	1
GenFlex Iso 3	I-90 ^C	1.3" (33.02 mm)	16	GenFast #12, #14, #15 and GenFast Insulation Plate	6
	I-90 ^C	1.5" (38.10 mm)	11		4
	I-90 ^C	2.0" (50.80 mm)	8		2
GenFlex Iso 5	I-90 ^C	1.4" (35.56 mm)	16	GenFast #12, #14, #15 and GenFast Insulation Plate	5
	I-90 ^C	1.5" (38.10 mm)	11		4
	I-90 ^C	2.0" (50.80 mm)	8		1
GenFlex Wood Fiber Board	I-90 ^C	1.0" (25.40 mm) ^A	16	GenFast #12, #14, #15 and GenFast Insulation Plate	5
GP DensDeck	I-60 ^B	1/4" (6.35 mm)	12	GenFast #12, #14, #15 and GenFast Insulation Plate	5
	I-75 ^B	1/4" (6.35 mm)	15		6
	I-60 ^B	1/2" (12.70 mm)	10		3
	I-75 ^B	1/2" (12.70 mm)	15		6
	I-60 ^B	5/8" (15.88 mm)	8		2
	I-75 ^B	5/8" (15.88 mm)	8		2
GP DensDeck Prime	I-60 ^B	1/4" (6.35 mm)	12	GenFast #12, #14, #15 and GenFast Insulation Plate	5
	I-60 ^B	1/2" (12.70 mm)	10		3
	I-60 ^B	5/8" (15.88 mm)	8		2

NOTES:

^A 1/2" (12.70 mm) High density wood fiber board (Roof Rite & Weather Guard) manufactured by International Buildrite approved for FM I-90

^B On I-60 and I-75 systems, for all mechanically fastened insulations or thermal barriers, the number of fasteners per board should be increased over the FMRC-approved field of roof spacing by:

50% In the roof perimeter

100% In the roof corners

Round up to the next whole number of fasteners.

^C For I-90 systems, refer to the Loss Prevention Data Sheet 1-29.

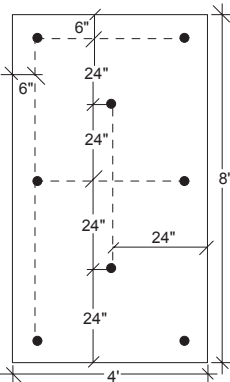
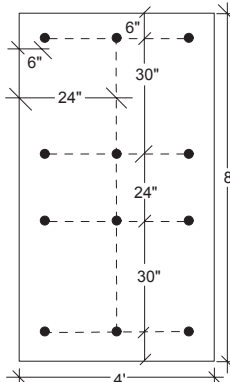
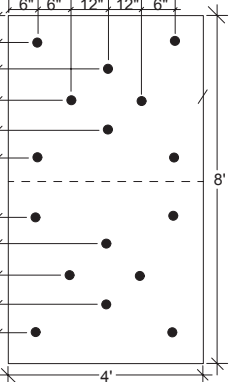
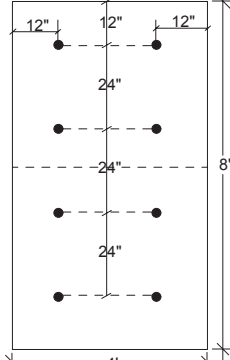
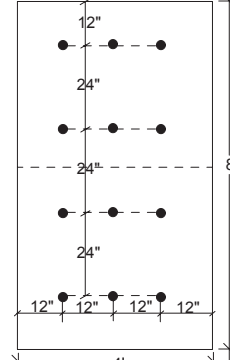
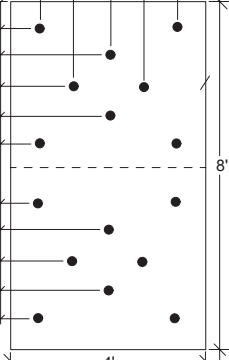
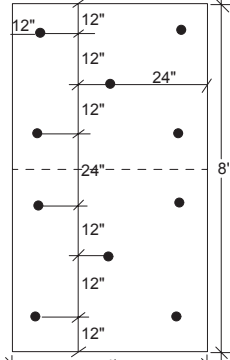
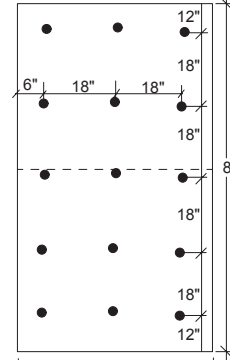
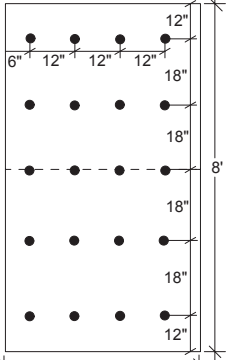
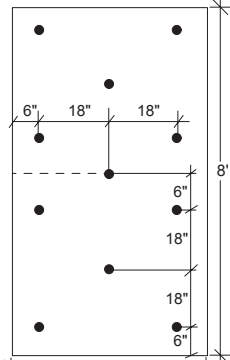
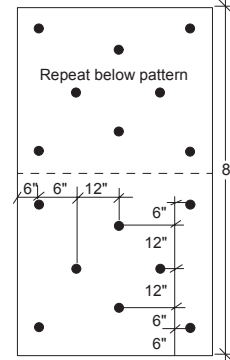
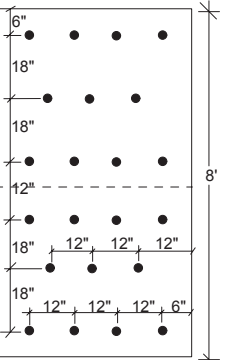

The width of the roof corners and perimeter is defined as the smaller of:

0.1 Times the building lesser plan dimension

0.4 Times the eave height

Subject to a minimum width of 4' (101.60 mm)

On recover systems, Factory Mutual limits the insulation thickness to a maximum of one (1) inch (25.40 mm). Contact the GenFlex Technical Department for approvals over deck types other than metal or concrete, e.g. cementitious wood fiber, gypsum, etc.

<p>Pattern #1 For use with 2" Min. (50.80 mm) GenFlex ISO 1 & 5</p> <p>Metric Conversions: 6" = 152.40 mm 12" = 304.80 mm 18" = 457.20 mm 21" = 533.40 mm 24" = 609.60 mm 30" = 762.00 mm 4' = 1.22 m 8' = 2.44 m</p>	<p>Base Pattern</p> 	<p>Perimeter + 50%</p> 	<p>Corner + 100%</p> 
<p>Pattern #2 For use with 2" Min. (50.80 mm) GenFlex ISO 3 and 5/8" (15.88 mm) DensDeck & DensDeck Prime</p> <p>Metric Conversions: 12" = 304.80 mm 24" = 609.60 mm 4' = 1.22 m 8' = 2.44 m</p>	<p>Base Pattern</p> 	<p>Perimeter + 50%</p> 	<p>Corner + 100%</p> 
<p>Pattern #3 For use with 1.4" Min. (35.56 mm) GenFlex ISO 5 and 1/2" (12.70 mm) DensDeck & DensDeck Prime</p> <p>Metric Conversions: 6" = 152.40 mm 12" = 304.80 mm 18" = 457.20 mm 24" = 609.60 mm 4' = 1.22 m 8' = 2.44 m</p>	<p>Base Pattern</p> 	<p>Perimeter + 50%</p> 	<p>Corner + 100%</p> 
<p>Pattern #4 For use with 1.5" Min. (38.10 mm) GenFlex ISO 3 & 5 and 2" Min. (50.80 mm) GenFlex ISO 2</p> <p>Metric Conversions: 6" = 152.40 mm 12" = 304.80 mm 18" = 457.20 mm 4' = 1.22 m 8' = 2.44 m</p>	<p>Base Pattern</p> 	<p>Perimeter + 50%</p> <p>Repeat below pattern</p> 	<p>Corner + 100%</p> 
<p>Use this visual reference in conjunction with the Insulation For Fully Adhered Systems table located in the Design Criteria section of this manual and in the back of the Fully Adhered Application Specification.</p>			
<p>Insulation Securement Patterns</p>	<p>Detail #: ISP 1 - 4</p>	<p>All Adhered Systems</p>	

<p>Pattern #5 For use with 1/4" & 1/2" (6.35 mm & 12.70 mm) DensDeck & DensDeck Plus</p> <p>Metric Conversions: 6" = 152.40 mm 12" = 304.80 mm 18" = 457.20 mm 24" = 609.60 mm 4' = 1.22 m 8' = 2.44 m</p>	<p>Base Pattern</p>	<p>Perimeter + 50%</p>	<p>Corner + 100%</p>
<p>Pattern #6 For use with 1.3" Min. (33.02 mm) GenFlex ISO 3, 1.4" (35.56 mm) GenFlex ISO 1 & 5, 1.25" (31.75 mm) GenFlex Wood Fiber Board and 1/4" (6.35 mm) DensDeck</p> <p>Metric Conversions: 6" = 152.40 mm 12" = 304.80 mm 18" = 457.20 mm 4' = 1.22 m 8' = 2.44 m</p>			
<p>Pattern #7 For use with 1/4" (6.35 mm) DensDeck</p> <p>Metric Conversions: 6" = 152.40 mm 12" = 304.80 mm 18" = 457.20 mm 4' = 1.22 m 8' = 2.44 m</p>			

Use this visual reference in conjunction with the **Insulation For Fully Adhered Systems** table located in the **Design Criteria** section of this manual and in the back of the **Fully Adhered Application Specification**.



10/06

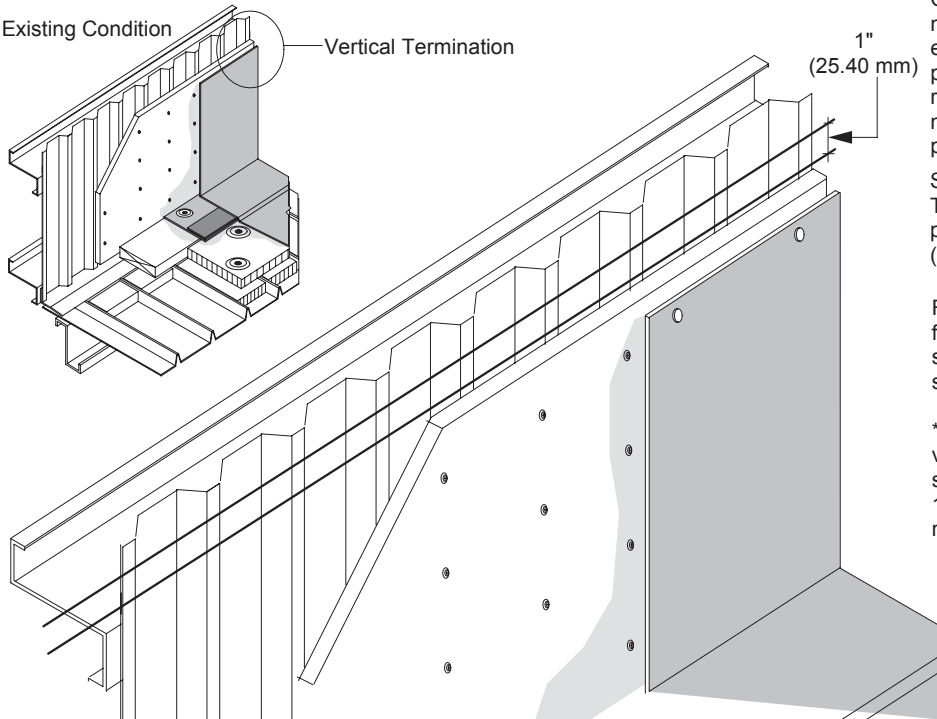
Insulation Securement Patterns

Detail #: ISP 5 - 7

All Adhered Systems

Existing Condition

Vertical Termination




1"
(25.40 mm)

Cut a 1" (25.40 mm) strip out of the metal siding, starting at the upper edge of the purlin. Sand, prime, and paint the raw metal edge to prevent rust. Contact metal siding manufacturer for proper primer and paint types.


Secure the top edge of the GenFlex TPO with roofing nails into the plywood substrate, spaced at 8" o.c. (203.20 mm).

Fabricate a counter-flashing enclosure from 24 gauge (0.61 mm) pre-finished steel in an owner-approved color as shown below.

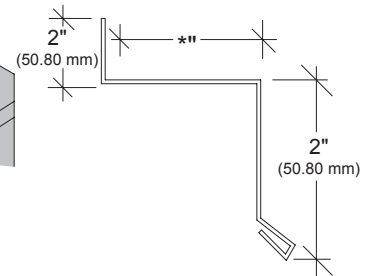*= as required to span from behind vertical siding, over plywood vertical substrate and membrane flashing with 1/4" (6.35 mm) of clearance from membrane.



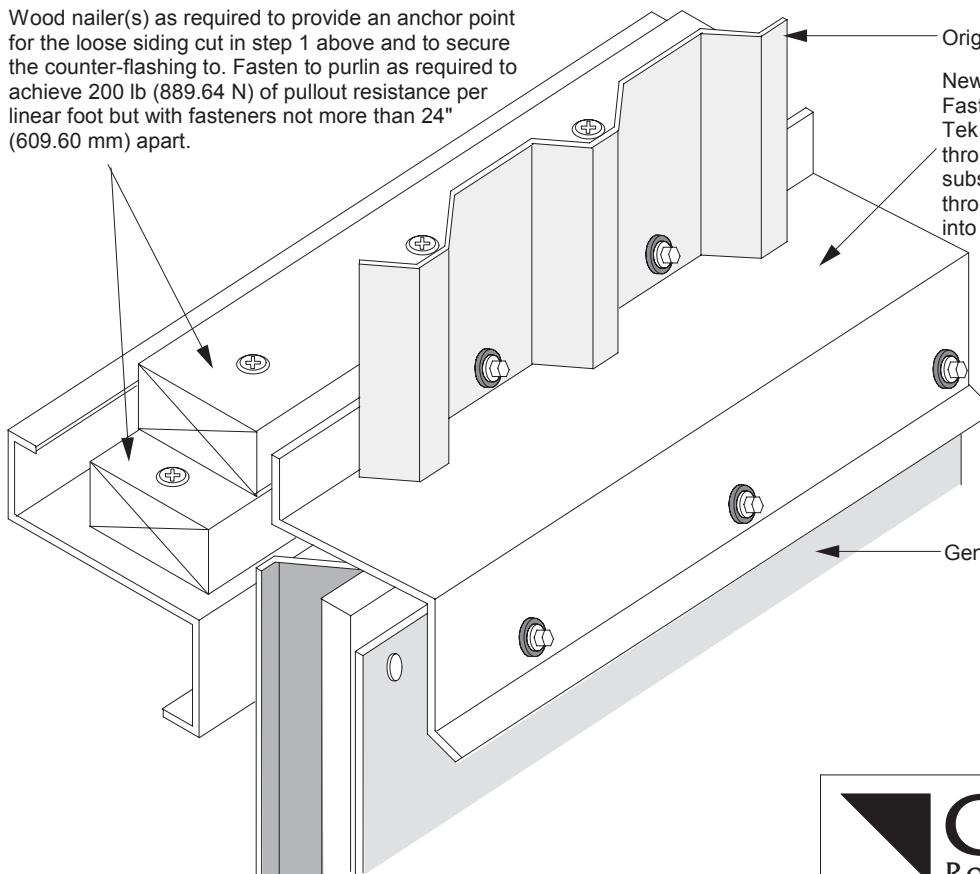Wood nailer(s) as required to provide an anchor point for the loose siding cut in step 1 above and to secure the counter-flashing to. Fasten to purlin as required to achieve 200 lb (889.64 N) of pullout resistance per linear foot but with fasteners not more than 24" (609.60 mm) apart.



Original Metal Siding

New Counter-Flashing Enclosure Fastened with Neoprened Washed Tek Screws 12" o.c. (304.80 mm) through membrane into vertical substrate and at every recessed rib through siding and counter-flashing into wood nailers.

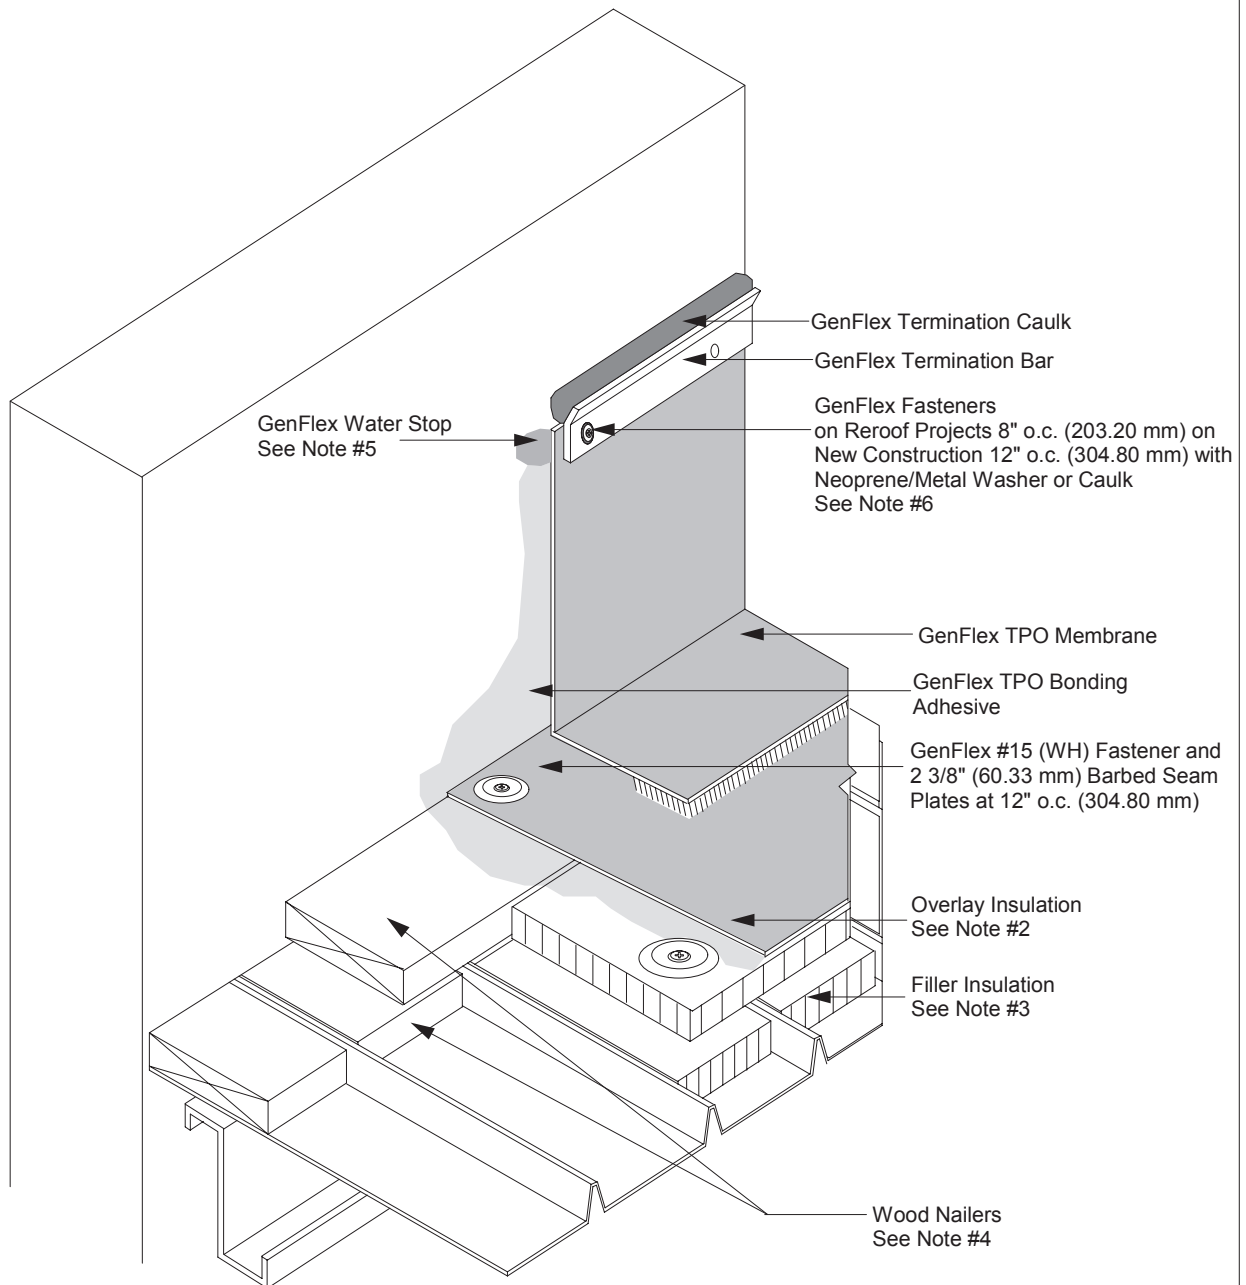
GenFlex TPO



Metal Roof to Metal Siding - Vertical Termination and Counter-Flashing

Detail #: TMR-1.13

TPO Metal Roof Recover Systems



1. Secure acceptable vertical substrate material to metal siding, and ensure structural attachment (purlin) along at least two lines of securement.
2. Overlay insulation must comply with minimum requirements called for to span openings in filler insulation and to comply with GenFlex Fully Adhered System requirements. Secure at the rate of one GenFlex #15 (WH) Fastener and Insulation Plate per 2 ft² (0.19 m²), i.e. 16 per 4' x 8' (1.22 m x 2.44 m).
3. Filler insulation should be sized to fit snugly between ribs and of equal thickness to rib height.
4. Wood nailers must be secured to purlins as required to achieve 200 lb (889.64 N) of pullout resistance per linear foot.
5. Compression fit details that incorporate Water Stop must have all existing flashing removed to the bare substrate, e.g. masonry block.
6. Any approved pre-drilled fastener for curb and parapet terminations must have a minimum 125 lb (556.03 N) pullout. See approved fastener list.

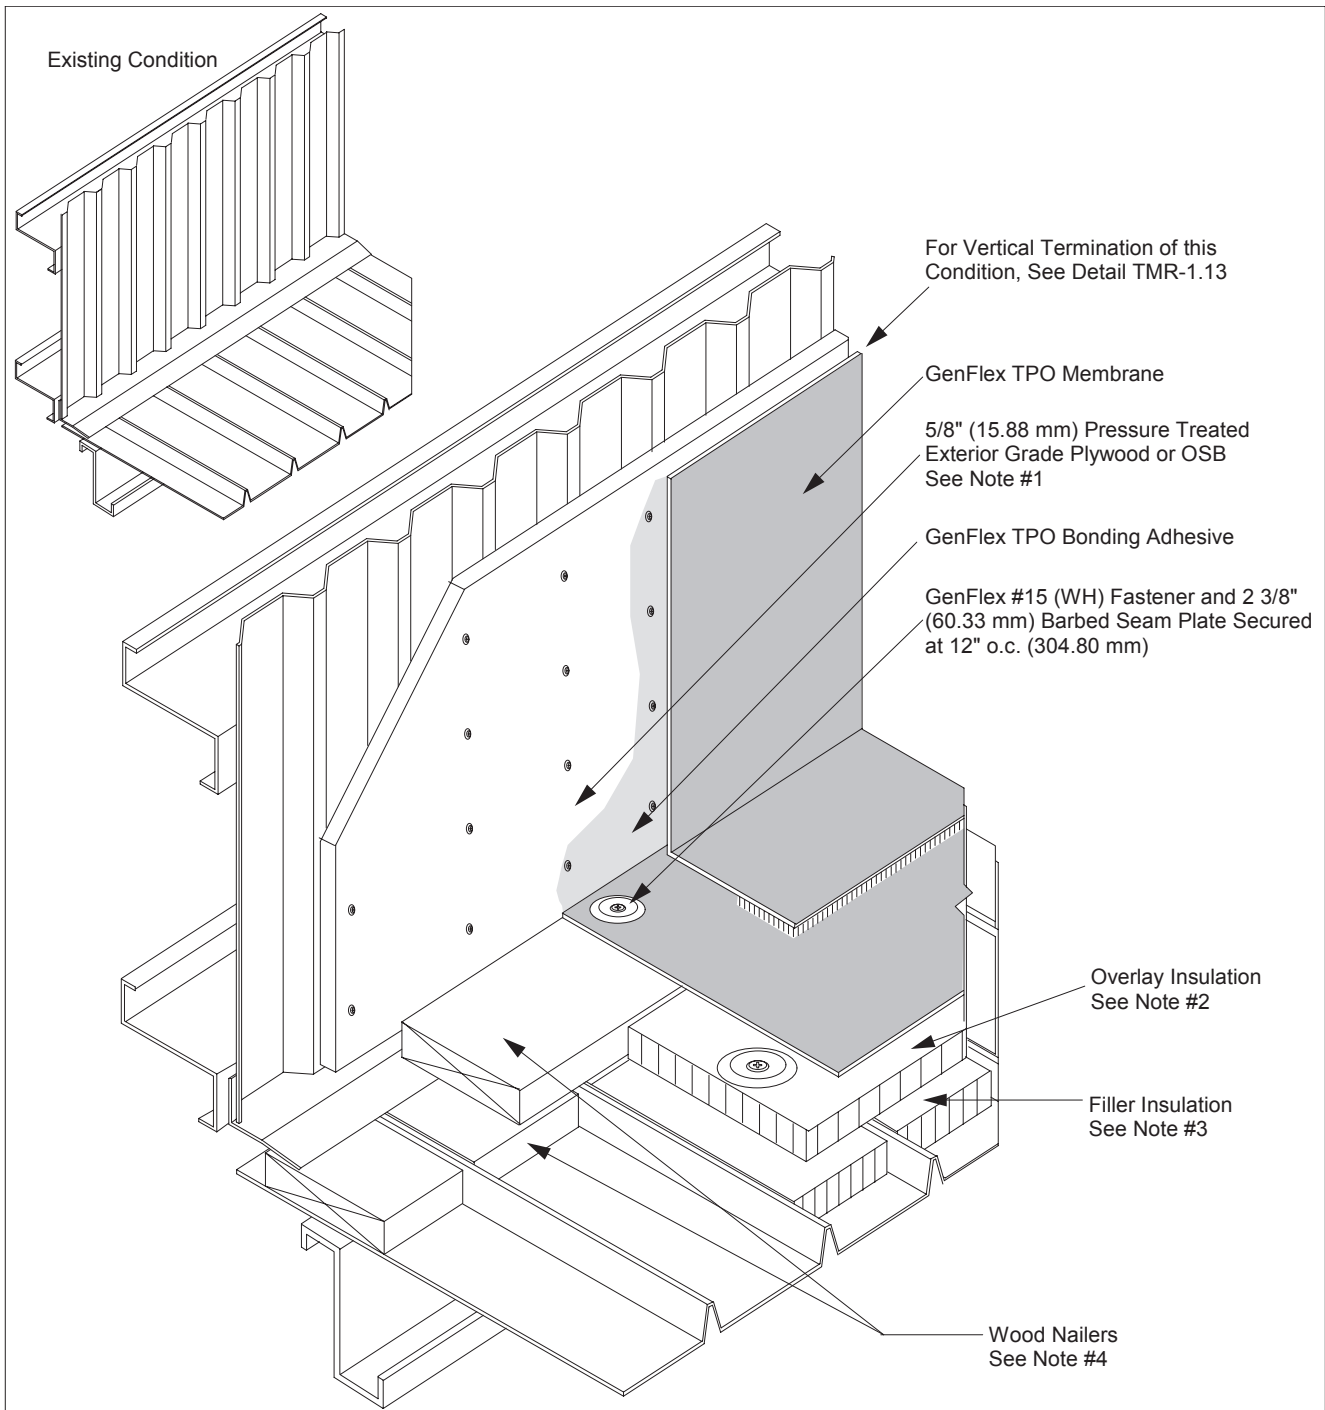


10/06

**Metal Roof
Base Flashing**

Detail #: TMR-2.08A

**TPO Metal Roof
Recover Systems**




1. Secure acceptable vertical substrate material to metal siding, and ensure structural attachment (purlin) along at least two lines of securement.
2. Overlay insulation must comply with minimum requirements called for to span openings in filler insulation and to comply with GenFlex Fully Adhered System requirements. Secure at the rate of one GenFlex #15 (WH) Fastener and Insulation Plate per 2 ft² (0.19 m²).
3. Filler insulation should be sized to fit snugly between ribs and of equal thickness to rib height.
4. Wood Nailers must be secured to purlins as required to achieve 200 lb (889.64 N) of pullout resistance per linear foot.



10/06

Metal Roof to Vertical Siding Base Flashing	Detail #: TMR-2.08B	TPO Metal Roof Recover Systems
--	----------------------------	---

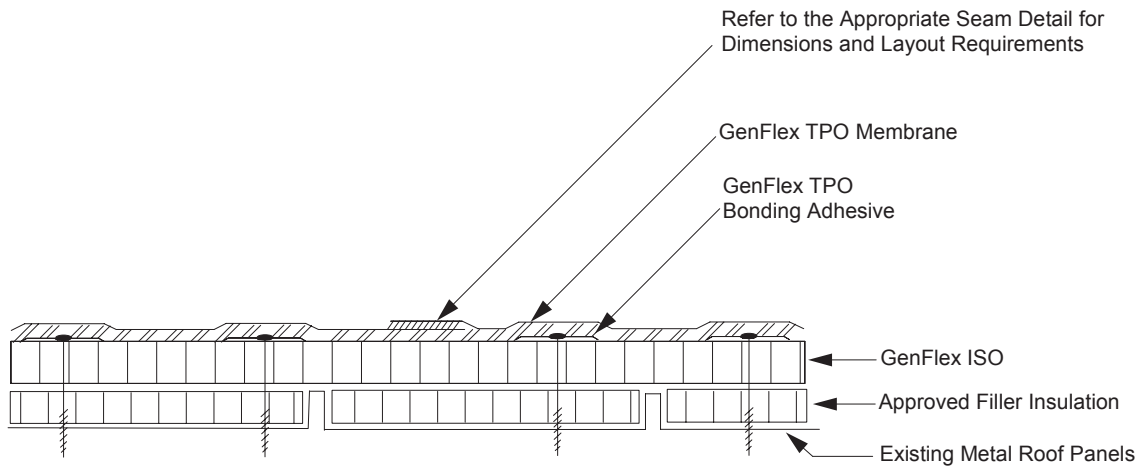


Position insulation to enable securement into the steel roofing panels to ensure positive attachment. Do not attach to the ribs. For fastener spacing criteria on projects with less than 300 lb (1 334.47 N) of pullout resistance, refer to the **Pullout Value Matrix Table** within the **Metal Recover Specification**. On projects with greater than 300 lb (1 334.47 N) of pullout resistance, reduced securement patterns may be applicable if minimum insulation thickness requirements are also met. Contact the GenFlex Technical Department for information on reduced fastening patterns.



Insulation Cross Section

Detail #: TMR-11.02

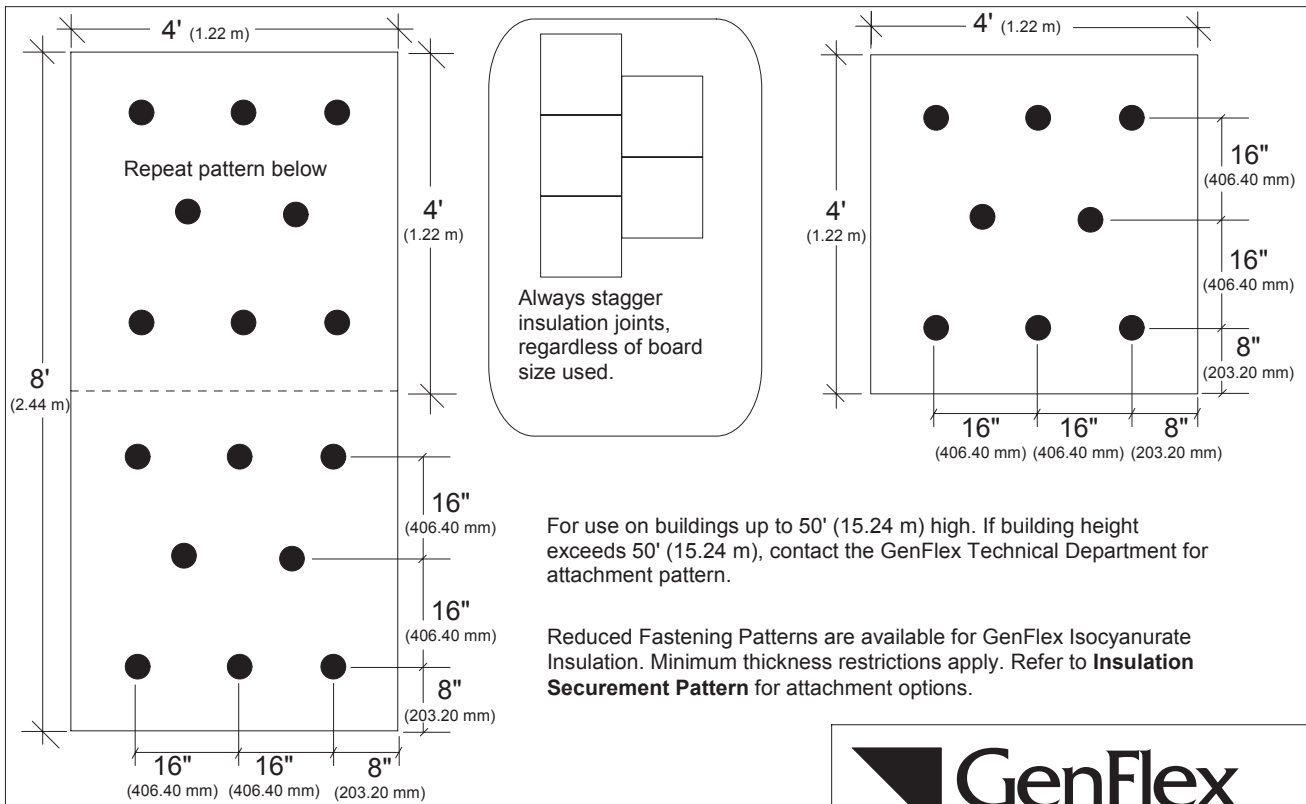TPO Metal Roof Recover Systems



For use on buildings up to 50' (15.24 m) high. If building height exceeds 50' (15.24 m), contact the GenFlex Technical Department for attachment pattern.

Reduced Fastening Patterns are available for GenFlex Isocyanurate Insulation. Minimum thickness restrictions apply. Refer to **Insulation Securement Pattern** for attachment options.



Insulation Securement

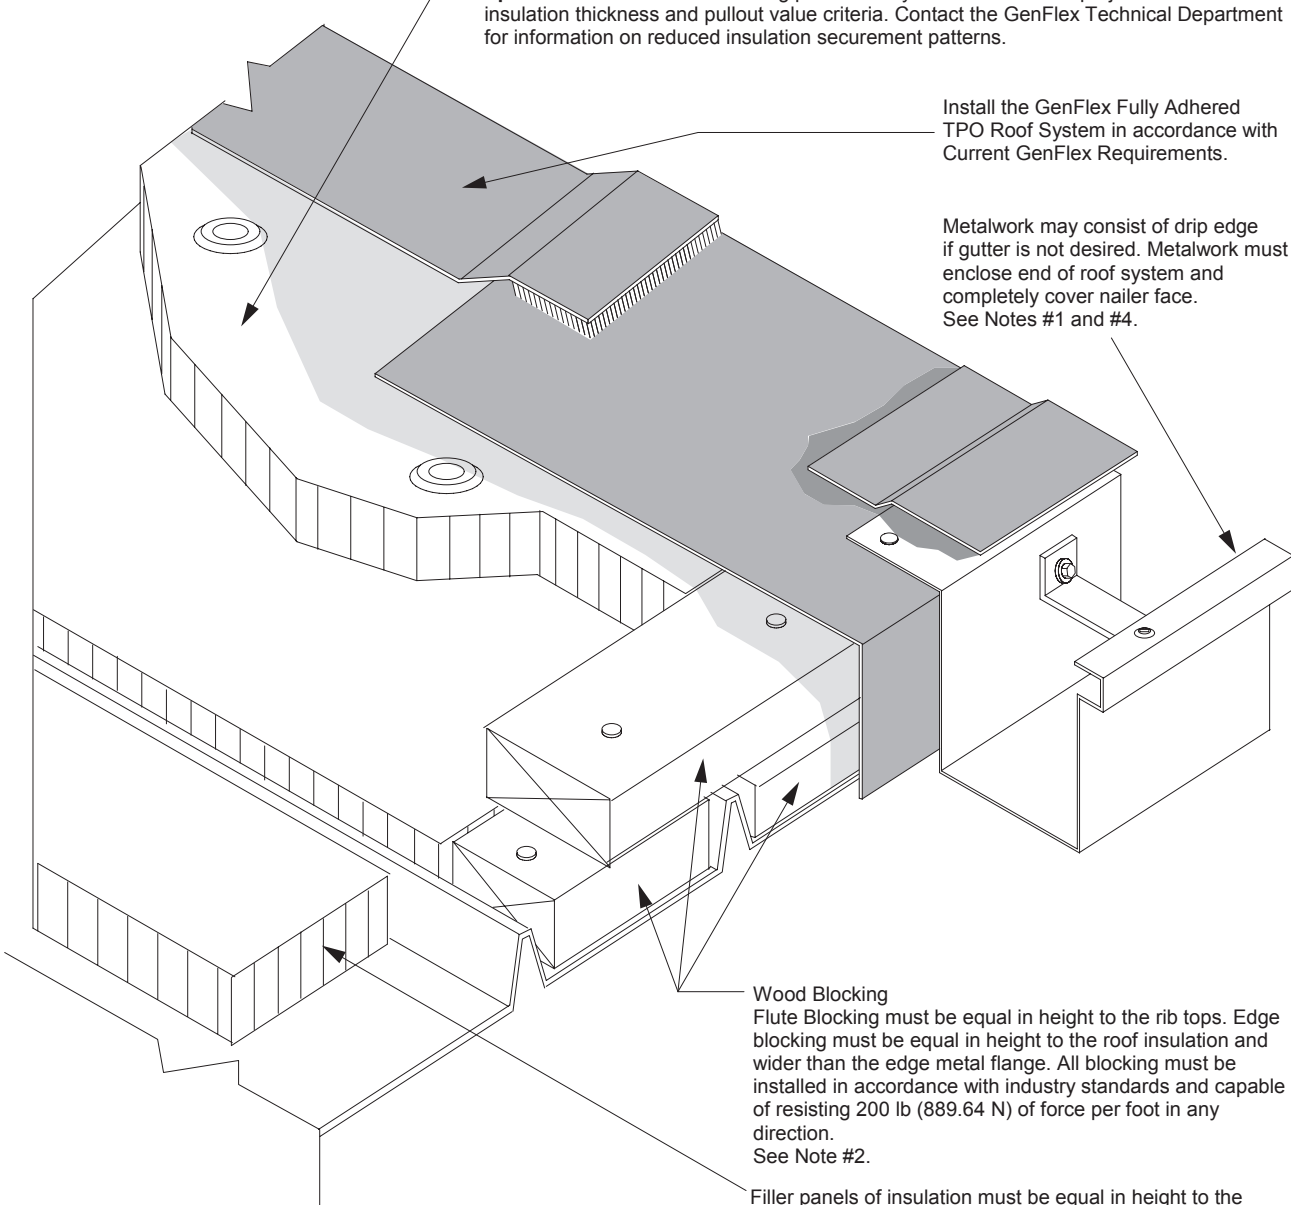
Detail #: TMR-11.07

TPO Metal Roof Recover Systems

GenFlex Isocyanurate as required secured to the 26 gauge (0.45 mm) minimum steel roof panels at the rate of one #15 fastener and insulation plate per 2 ft² (0.19 m²), i.e. 16 per 4' x 8' (1.22 m x 2.44 m) board. Fastener spacing is contingent upon metal roof achieving 300 lb (1 334.47 N) of pullout resistance. For pullout values less than 300 lb (1 334.47 N), refer to **Pullout Value Matrix Table** in the **Metal Recover Fully Adhered System Specification**. Reduced fastening patterns may be available if the project meets minimum insulation thickness and pullout value criteria. Contact the GenFlex Technical Department for information on reduced insulation securement patterns.

Install the GenFlex Fully Adhered TPO Roof System in accordance with Current GenFlex Requirements.

Metalwork may consist of drip edge if gutter is not desired. Metalwork must enclose end of roof system and completely cover nailer face. See Notes #1 and #4.



Wood Blocking
Flute Blocking must be equal in height to the rib tops. Edge blocking must be equal in height to the roof insulation and wider than the edge metal flange. All blocking must be installed in accordance with industry standards and capable of resisting 200 lb (889.64 N) of force per foot in any direction. See Note #2.

Filler panels of insulation must be equal in height to the metal roof ribs and provide a smooth, supporting surface for the overlay insulation board.

1. Metalwork must be fabricated and installed in accordance with SMACNA and NRCA recommendations and include continuous metal cleats where applicable. Metalwork will completely enclose roof assembly ends and extend below the wood nailer face.
2. Wood nailers are to be secured to the structural steel members as required to resist 200 lb (889.64 N) minimum of pullout force per linear foot.
3. Additional metalwork may be required to effectively seal off the roof edge to prevent wind, birds, and pests from entering roof assembly.
4. Metalwork may be fabricated from SMACNA approved material and stripped-in with TPO Cover Tape set in Primer or GenFlex TPO Coated Metal with a fully hot air welded strip-in application of TPO Field Membrane with edges sealed.

*NOTE: This assembly does not meet Factory Mutual Rating Criteria.



10/06

Metal Edge Flashing

Detail #: TMR-14.01

TPO Metal Roof Recover Systems