


NOTE:

1. REFER TO GENFLEX™ WEBSITE FOR THE MOST CURRENT INFORMATION.
2. APPLY EDGE CAULK AS SHOWN. REFER TO EZE-PS-LS-05 FOR SEAM EDGE TREATMENT.
3. USE GENPRIME PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF PEEL & STICK PRODUCTS.
4. STRIP IN EXPOSED P&S ADHESIVE WITH 6" PEEL & STICK COVER TAPE.
5. APPLY EDGE CAULK AT CUT ENDS OF 6" PEEL & STICK COVER TAPE.
6. 6" PEEL & STICK COVER TAPE (6"x6" MIN. WITH ROUNDED CORNERS) MAY BE USED IN LIEU OF PEEL & STICK T-JOINT COVER. REFER TO EZE-PS-LS-05 FOR SEAM EDGE TREATMENT.

EZ EPDM PEEL & STICK MEMBRANE (NO SELVAGE EDGE)

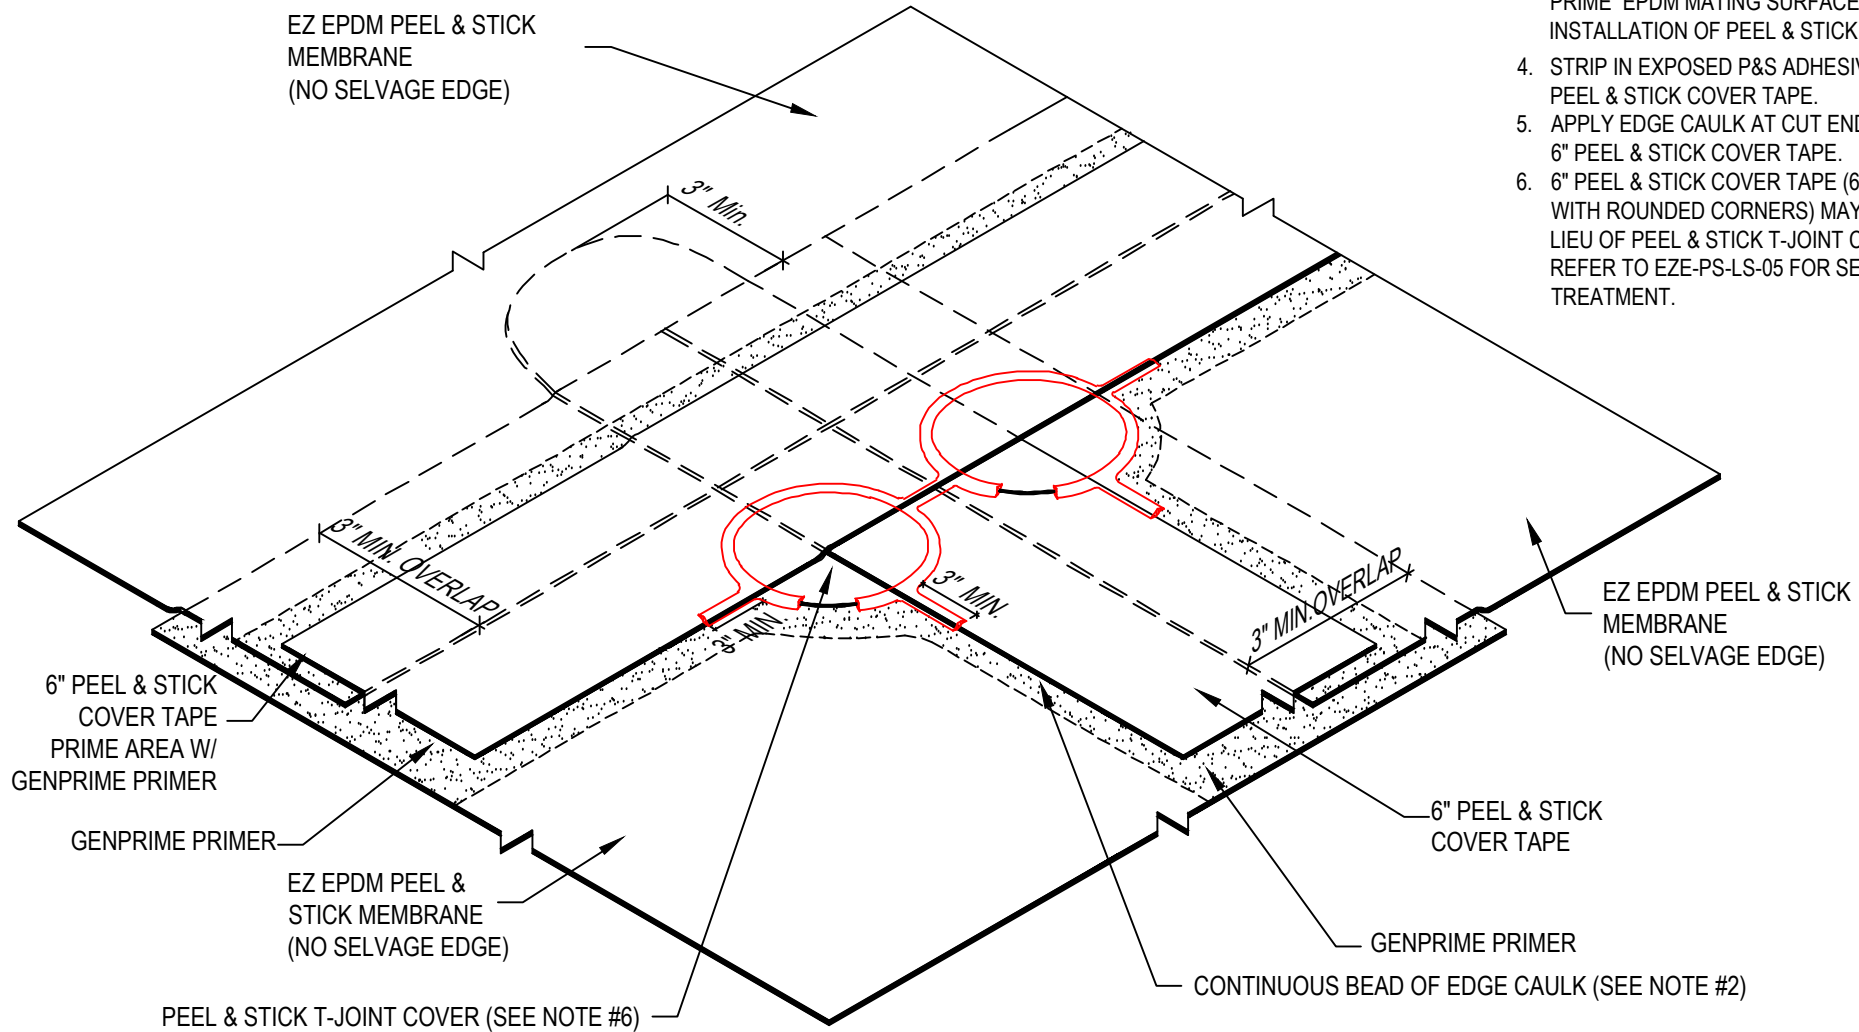

EZ EPDM PEEL & STICK MEMBRANE (NO SELVAGE EDGE)

6" PEEL & STICK COVER TAPE

GENPRIME PRIMER

CONTINUOUS BEAD OF EDGE CAULK (SEE NOTE #2)

PEEL & STICK T-JOINT COVER (SEE NOTE #6)

EZ EPDM PEEL & STICK MEMBRANE (NO SELVAGE EDGE)

GENPRIME PRIMER

6" PEEL & STICK COVER TAPE  
PRIME AREA W/  
GENPRIME PRIMER

**PEEL & STICK ADHESIVE LAP SPLICE WITH HEADLAP UNDER FIELD SEAM USING 6" P&S COVER TAPE**



ACCEPTABLE SYSTEMS: EZ EPDM PEEL & STICK™ SELF ADHERED

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION DATE:

07/28/2023

DETAIL NO.

EZE-PS-LS-04

(800) 443-4272 www.genflex.com

NOT TO SCALE