


Apply GenFlex Primer to the EPDM Membrane, and allow to properly flash-off. Position the GenFlex Peel & Stick Walkway Pad as required to line up the Seam Tape and the primed areas of the membrane.

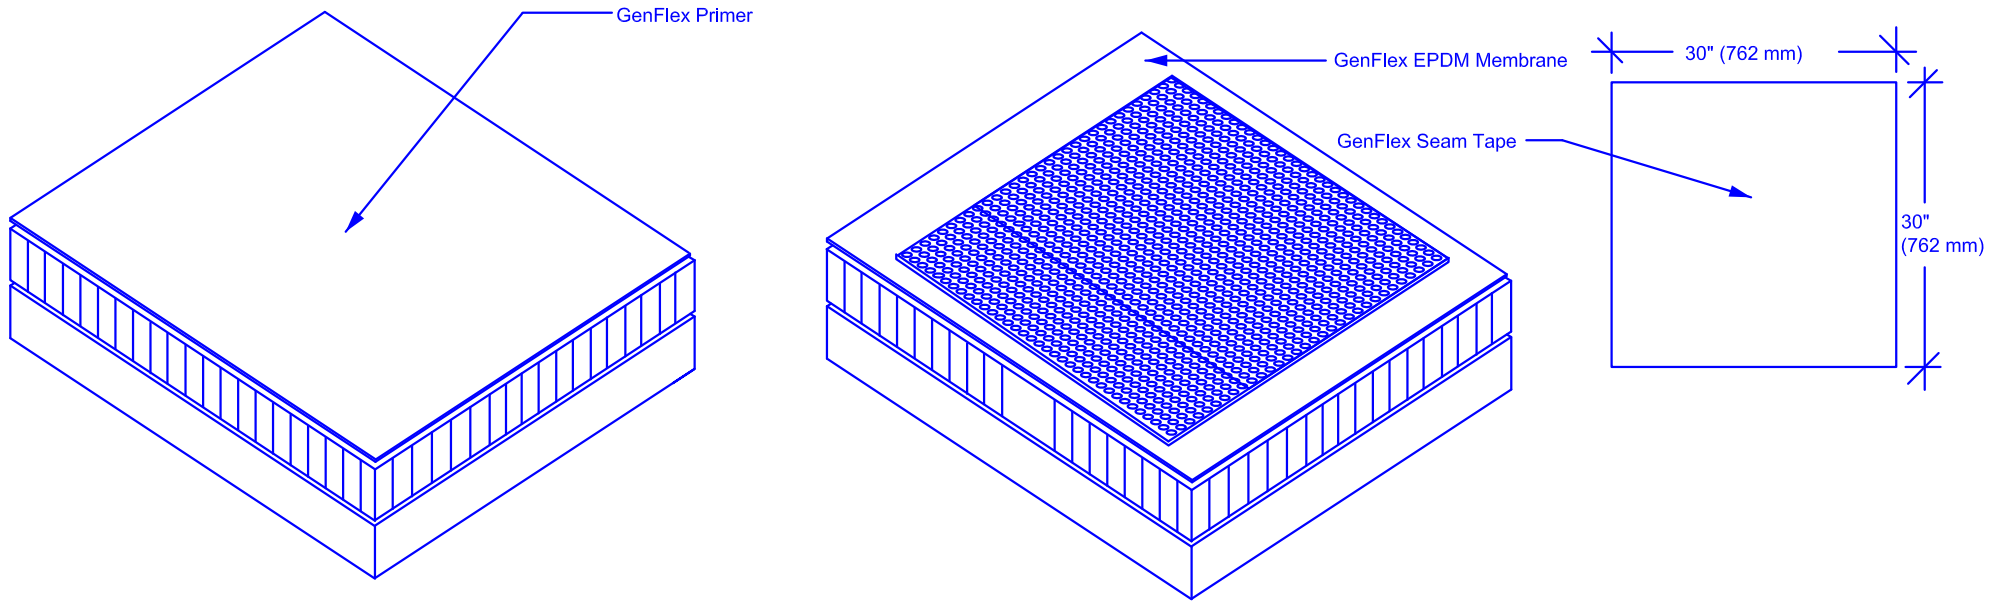

Remove the release paper from the seam tape, and mate the walkway pad to the prepared surface in a smooth motion, avoiding buckles in the walkway pad. Walk the walkway pad into place, or roll with a suitable roller.

Walkway pads are recommended at all permanent points of roof access and points on the roof requiring once-a-month or more service. Molded Walkway pads will reduce wear on the roofing membrane but will do little to mitigate the effects of "heavy" traffic, which can cause insulation damage if a suitable walk substrate is not designed to handle heavy traffic.

MAXIMUM WARRANTY: **20 Years**



Molded EPDM with Pre-Applied Seam Tape Walkway Pad Installation

EPDM Systems

ACCEPTABLE SYSTEMS:
All Systems

ISSUE / REVISION
DATE:
6-25-2015

NOT TO SCALE

DETAIL NO.

E-16.05