


1. All parapet walls and roof curbs must be suitable for flashing, i.e. clean, tight, smooth, no cracks, etc.
2. Polymer batten strips cannot be used for attachments into masonry wall substrates. Use only on smooth surfaces, e.g. wood or insulation.
3. Any approved pre-drilled fastener for curb and parapet terminations must have a minimum 125 lb (556 N) pullout. See approved fastener list.
4. When cured flashing is used on wall or curb flashing, vertical seams must be stripped-in at the base of angle change with a 6" (152 mm) strip of Uncured EPDM Flashing, or 7" (178 mm) Peel & Stick. See Detail E-3.01.
5. When using GenFlex Seam Tape and GenFlex Bar Cover Tape, first clean the membrane with GenFlex EPDM Cleaner. Then apply GenFlex Primer.

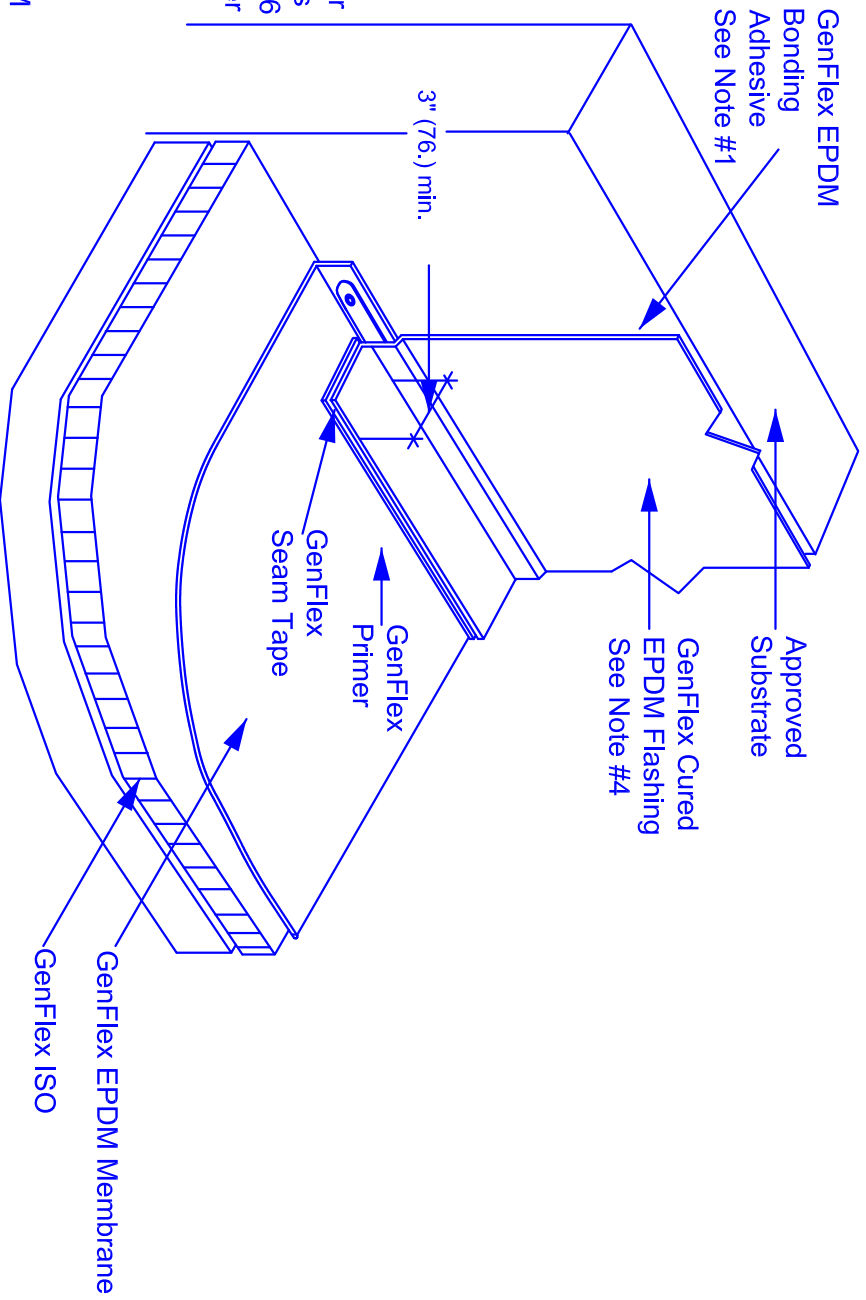

Vertical Secured Wall Base Flashing

EPDM Systems

ACCEPTABLE SYSTEMS:
All Roof Systems

MAXIMUM WARRANTY: 10 Years	
ISSUE / REVISION DATE: 6-22-2015	DETAIL NO. E-2.02
NOT TO SCALE	