


Membrane Panel Edge

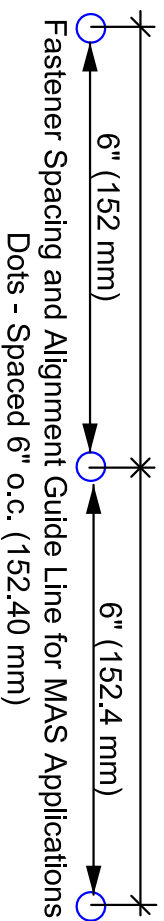

Adhered & Ballasted Layout Line
Solid Line

Mechanically Attached Layout Line
Dashed line

Refer to Details T-6.01 through T-6.04 and the Mechanically Attached TPO Matrix in the design section of this manual to determine proper securement type, alignment, and spacing. **Special alignment procedures are in effect for FM 1-90 compliant systems using 8' (2.4 m), 10' (3 m), or 12' (3.67 m) wide TPO panels.**