


GenFlex EZ TPO Membrane

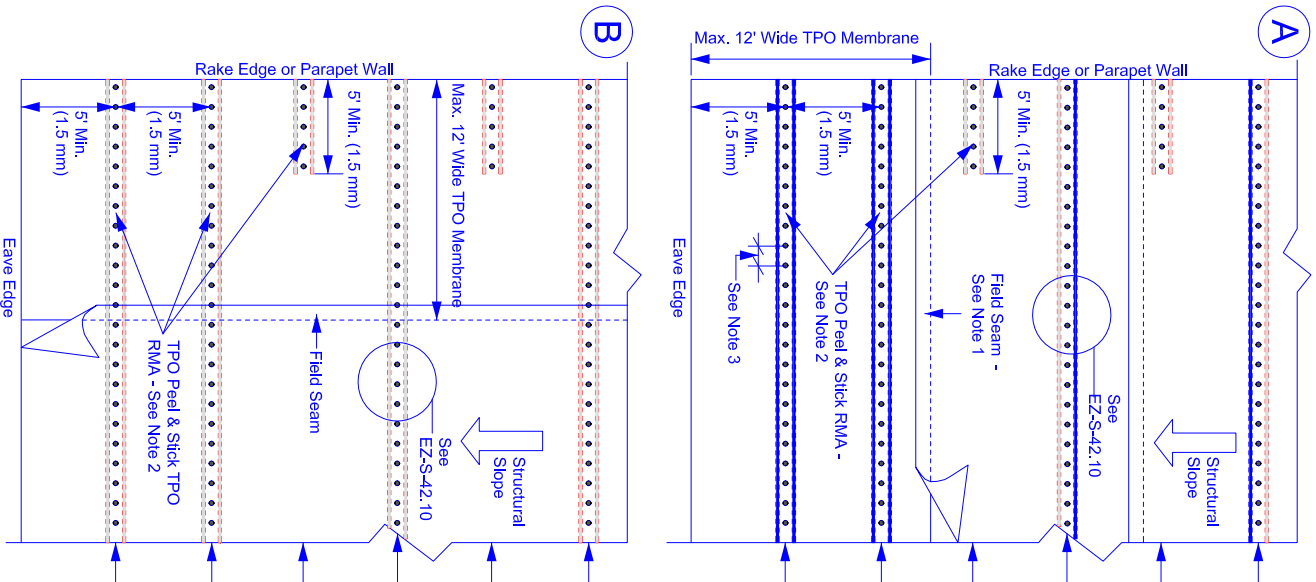

1. When membrane sheets are positioned perpendicular to the roof slope, all field splices must be stinkled. See GenFlex standard EZ TPO details for seaming options. For structural slopes of 3/12 or greater, GenFlex recommends positioning membrane panels parallel to slope. See B below.
2. GenFlex EZ TPO Peel & Stick RMA must be secured along the entire length of the first two structural purlins adjacent to the eave edge, and every second purlin after that. Use GenFlex Purlin Fasteners and GenFast 2 3/8" (60 mm) Seam Plates or Bar Anchor. GenFlex EZ TPO Peel & Stick RMA Slip must be fastened to every purlin along the rake edge / parapet wall, extending a minimum of 5' (1.5 m) into the roof from the edge / wall as shown.
3. If structural purlins are spaced every 5' (1.5 m) (as shown), fastener spacing is not to exceed 12" o.c. (305 mm o.c.) If structural purlins are spaced every 6' (1.8 m), fastener spacing is not to exceed 6" o.c. (152 mm o.c.)
4. If the building has any of the following conditions, contact the GenFlex Technical Department for assistance in determining half sheet requirements:
 - A) Large wall openings totaling 10% or more of any wall area.
 - B) Canopies open below the roof deck.
 - C) In the immediate vicinity of large bodies of water or coastline.
 - D) Building height in excess of 50' (15 m).
 - E) Vapor barrier included in assembly.
5. This system does not qualify for wind speeds warranties in excess of 54 mph or 15 years in length.

Perimeter Securement Layout

EZ TPO Systems

ACCEPTABLE SYSTEMS:
Metal Building Recover

MAXIMUM WARRANTY: 15 Years

ISSUE / REVISION
DATE:
10-28-2015

DETAIL NO.
EZ-S-42.11

NOT TO SCALE

