


PLAN VIEW

PIPE FLASHING OVER FIELD OR FACTORY SEAM

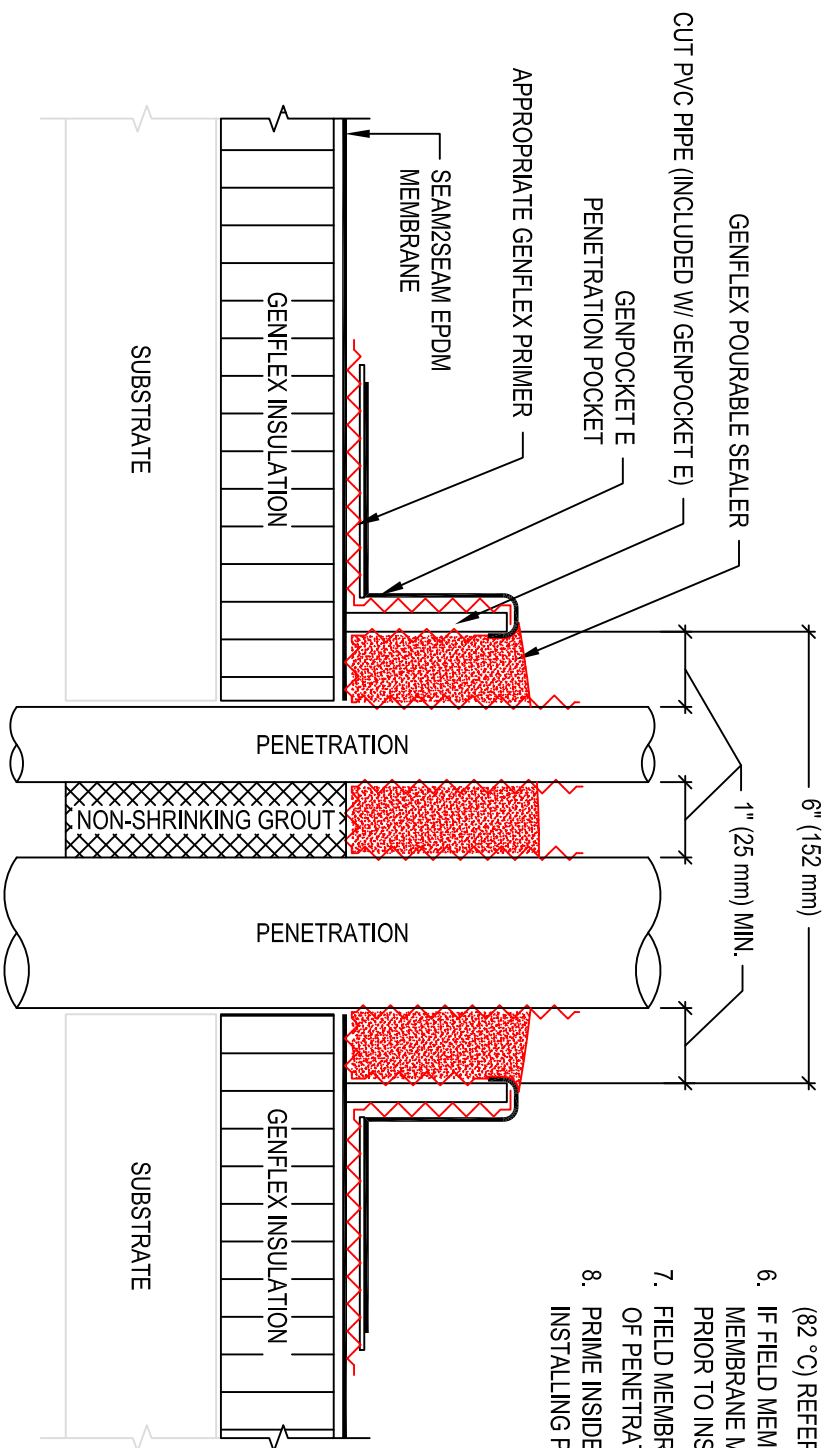

- NOTE:**
1. REFER TO GENFLEX WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. REMOVE ALL EXISTING FLASHING, LEAD, ETC. PIPE SURFACE MUST BE FREE OF ALL RUST, GREASE, INSULATION, ETC.
 3. GENFLEX POURABLE SEALER MOUNDED TO SHED WATER TO MINIMUM DEPTH OF 2" (51 mm). REMAINDER OF POCKET MAY BE FILLED WITH NON-SHRINKING GROUT.
 4. DO NOT USE OVER EXISTING PENETRATION POCKETS.
 5. DO NOT USE WHEN SERVICE LINE TEMP. EXCEEDS 180 °F. (82 °C) REFER TO S2S-P-4.
 6. IF FIELD MEMBRANE IS CUT FOR INSTALLATION, THE MEMBRANE MUST BE REPAIRED WITH EPDM MEMBRANE PRIOR TO INSTALLATION OF THE PENETRATION POCKET.
 7. FIELD MEMBRANE MUST BE INSTALLED WITHIN 1/2" (13 mm) OF PENETRATION
 8. PRIME INSIDE OF POCKET AND PENETRATIONS BEFORE INSTALLING POURABLE SEALER.

PENETRATION WITH

GENPOCKET E PENETRATION POCKET

GENFLEX™

ACCEPTABLE SYSTEMS: **SEAM2SEAM™ EPDM**

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

06/01/2020

DETAIL NO.

S2S-P-5



GENFLEX: (800) 443-4272 www.genflex.com

NOT TO SCALE