


NOTE:

1. REFER TO GENFLEX WEBSITE FOR THE MOST CURRENT INFORMATION.
2. REMOVE ALL EXISTING FLASHING, LEAD, ETC. PIPE SURFACE MUST BE FREE OF ALL RUST, GREASE, INSULATION, ETC.
3. GENFLEX POURABLE SEALER MOUNDED TO SHED WATER. (MINIMUM DEPTH OF 2" (51 mm), REMAINDER OF POCKET MAY BE FILLED WITH NON-SHRINKING GROUT.
4. DO NOT USE OVER EXISTING PENETRATION POCKET.

5. DO NOT USE WHEN SERVICE LINE TEMP. EXCEEDS 180 °F. (82 °C) REFER TO FF-P-4.
6. CUT PVC PIPE MINIMUM 2" (51 mm) HIGH AND OF SUFFICIENT WIDTH TO ALLOW 1" (25 mm) OF SPACE BETWEEN THE POCKET AND PENETRATIONS. FIELD MEMBRANE MUST EXTEND TO WITHIN 1/2"(13 mm) OF PENETRATION.
7. FIELD MEMBRANE MUST BE INSTALLED WITHIN 1/2" (13 mm) OF PENETRATION.
8. APPLY SEAM2SEAM SEALANT AROUND ENTIRE PERIMETER OF FLASHING. REFER TO S2S-LS-9 FOR PEEL & STICK EDGE TREATMENT.
9. PRIME INSIDE OF POCKET AND PENETRATIONS BEFORE INSTALLING POURABLE SEALER.

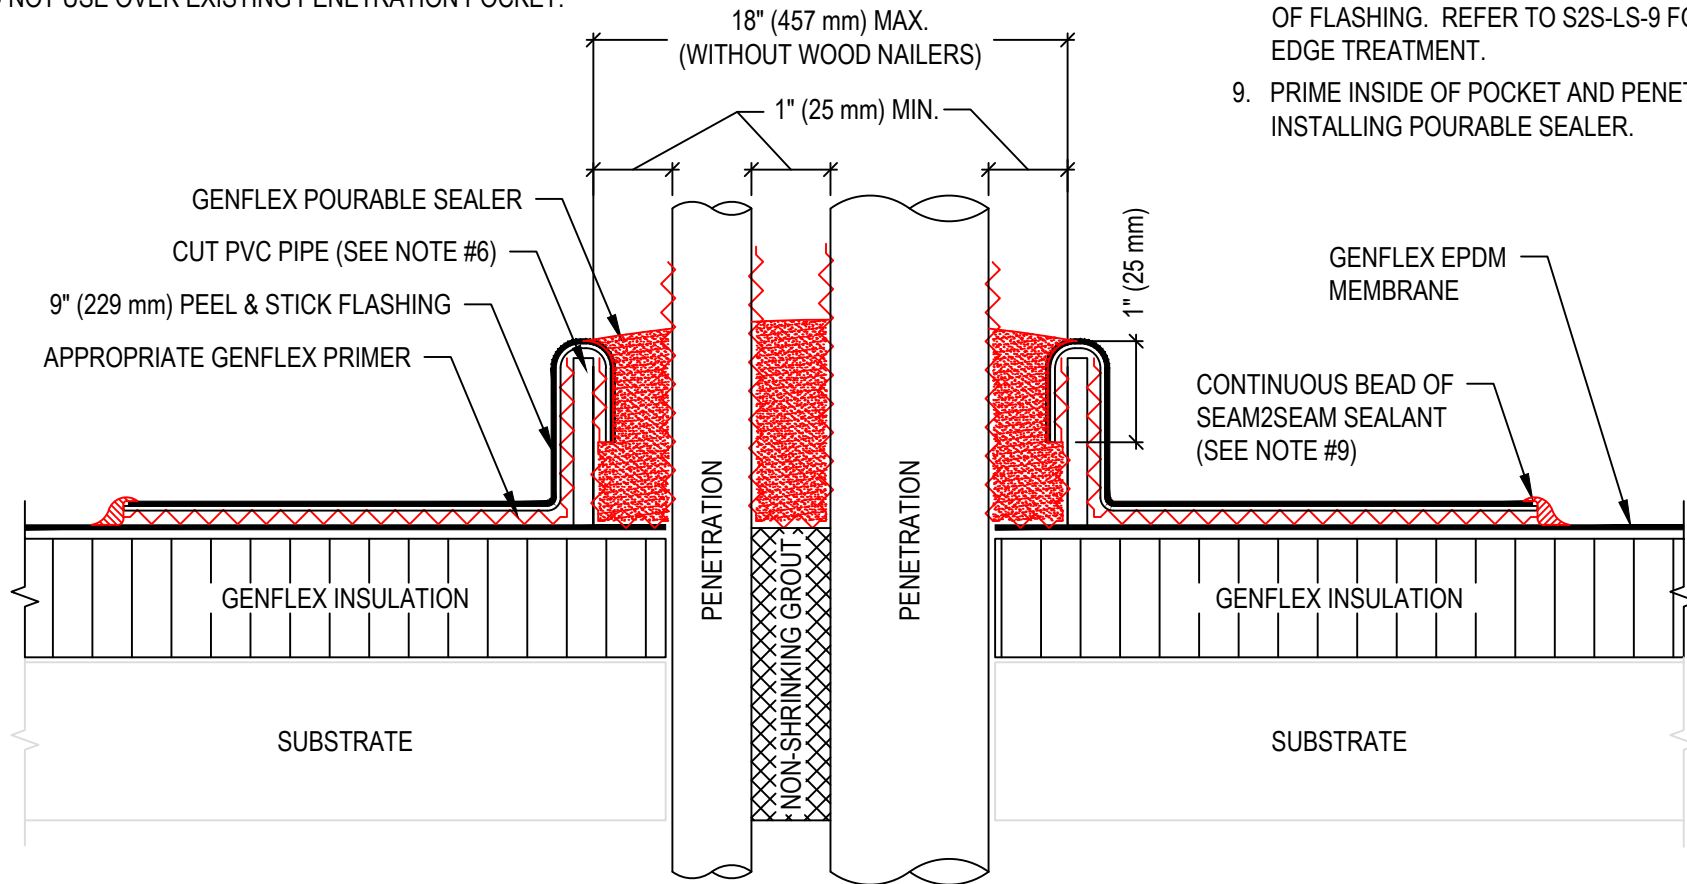

PENETRATION WITH FIELD FABRICATED ROUND PVC PENETRATION POCKET

GENFLEX™

ACCEPTABLE SYSTEMS: **SEAM2SEAM™ EPDM**

GENFLEX: (800) 443-4272 www.genflex.com

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION DATE:

04/06/2020

NOT TO SCALE

DETAIL NO.

S2S-P-6