



STEP #1

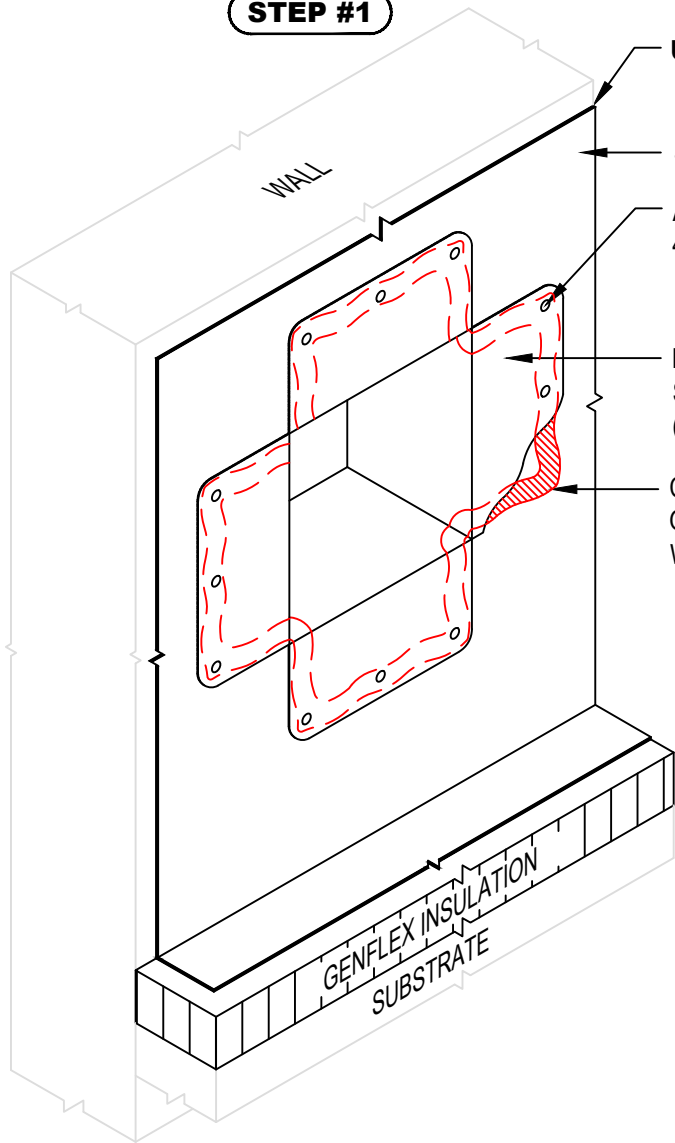

USE APPROPRIATE TERMINATION

- SEAM2SEAM EPDM MEMBRANE
- APPROPRIATE FASTENERS
4" (102 mm) O.C. MAX.
- NON-WELDED METAL
SCUPPER SLEEVE
(SEE NOTE #2)
- CONTINUOUS
GENFLEX
WATERSTOP

STEP #2

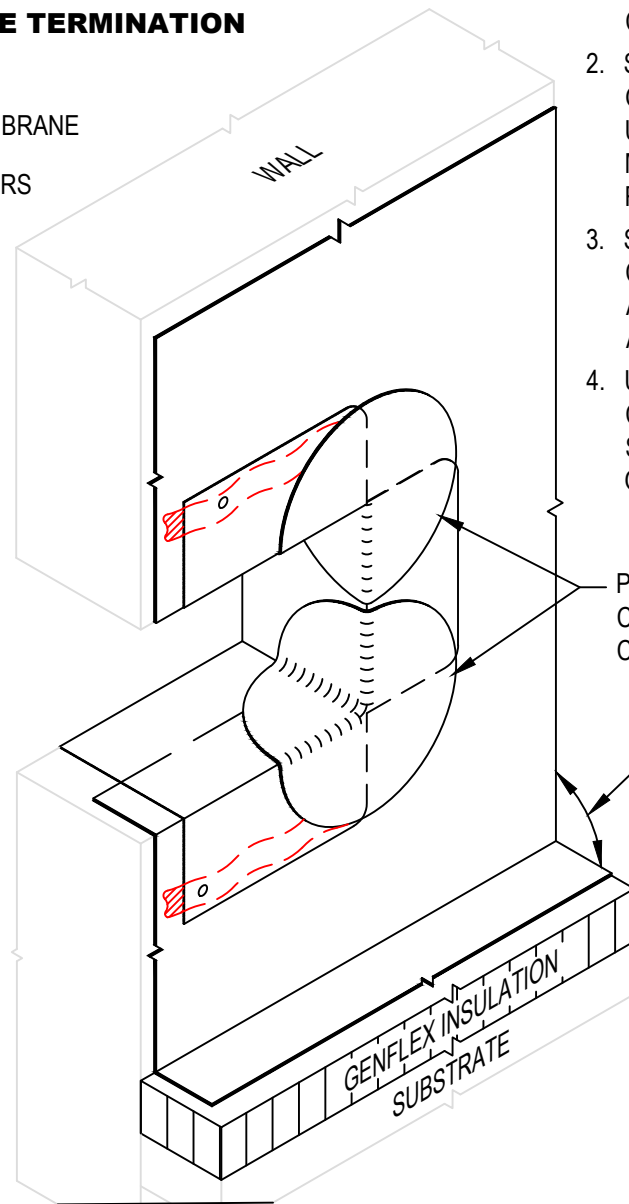

NOTE:

1. REFER TO GENFLEX WEBSITE FOR MOST CURRENT INFORMATION.
2. STEP #1 - APPLY CONTINUOUS BEAD OF GENFLEX WATERSTOP CENTERED UNDER FASTENERS. SECURE SCUPPER METAL WITH APPROPRIATE FASTENERS. ROUND ALL SHEET METAL CORNERS.
3. STEP #2 - CENTER PEEL & STICK CORNER OVER CORNER OF SCUPPER AND WRAP JOINT COVER TIGHTLY AROUND CORNER.
4. USE ACCEPTABLE GENFLEX PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO INSTALLATION OF PEEL & STICK PRODUCTS.

PEEL & STICK CORNER
CENTERED OVER SCUPPER
CORNER (SEE NOTE #3)

**USE APPROPRIATE
BASE TIE-IN DETAIL**



**OVERFLOW THRU-WALL SCUPPER
(NON-WELDED SLEEVE) INSTALLATION STEPS 1 & 2**

GENFLEX™

ACCEPTABLE SYSTEMS: SEAM2SEAM™ EPDM

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

04/06/2020

DETAIL NO.

S2S-S-4A

GENFLEX: (800) 443-4272 www.genflex.com

NOT TO SCALE