



STEP #1

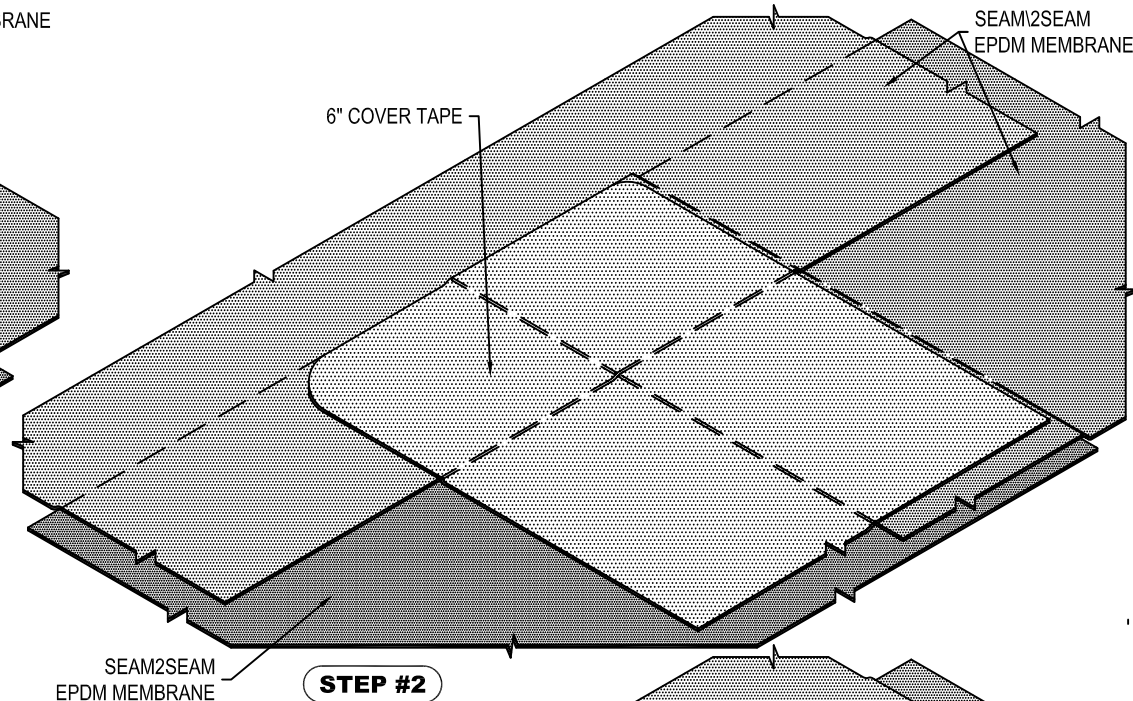

STEP #2

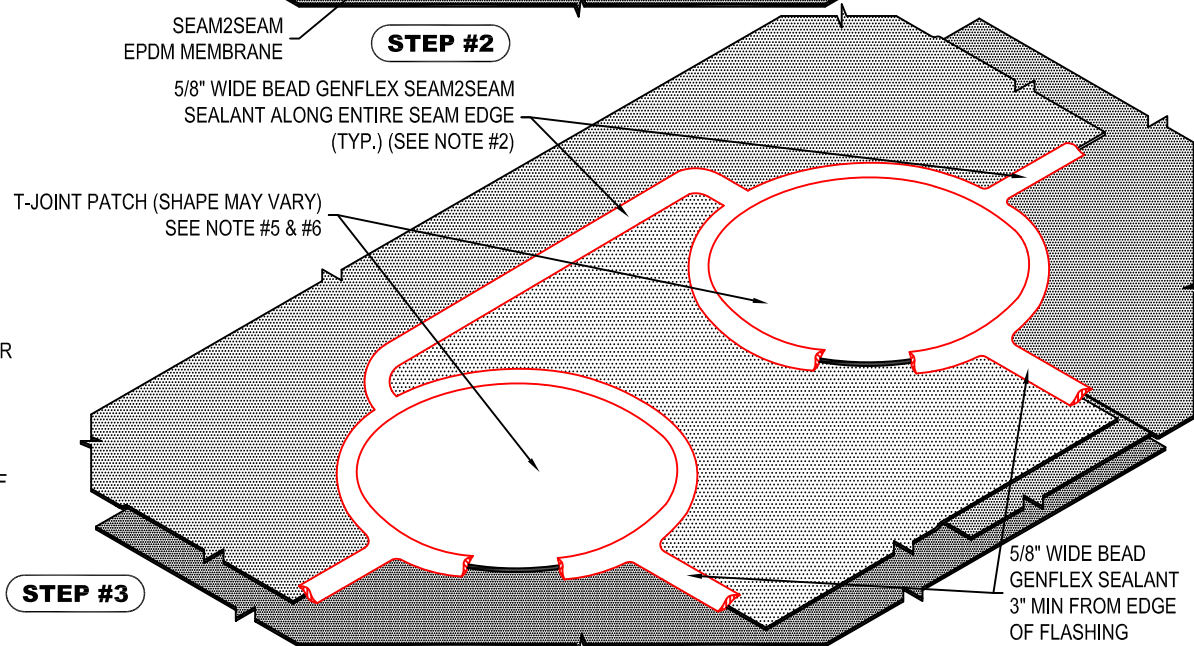

STEP #3

- NOTE:
1. REFER TO GENFLEX WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. GENFLEX SEALANT IS REQUIRED OVER ALL FIELD AND FLASHING SEAMS. REFERENCE S2S-LS-1 FOR SEAM EDGE TREATMENT. PRIME AREAS WHERE GENFLEX SEALANT IS REQUIRED PRIOR TO APPLICATION.
 3. USE ACCEPTABLE GENFLEX PRIMER TO CLEAN AND PRIME EPDM MATING SURFACES PRIOR TO SEAM SPLICING AND INSTALLATION OF PEEL & STICK PRODUCTS.
 4. EXTRA CLEANING IS REQUIRED AT FACTORY SPLICE AREAS AND OTHER AREAS WHERE EXCESS DUSTING AGENTS MAY HAVE ACCUMULATED.
 5. (2) T-JOINT COVERS - PLACE ONE OVER EACH T-JOINT BETWEEN 6 inch GENFLEX COVER TAPE.
 6. 7 inch PEEL & STICK FLASHING (5 inch X 5 inch MIN. WITH ROUNDED CORNERS) MAY BE USED IN LIEU OF PEEL & STICK T-JOINT COVER.



**LAP SPLICE WITH HEADLAP UNDER FIELD SEAM USING
PEEL & STICK T-JOINT COVER (INSTALLATION STEPS)**

GENFLEX™

ACCEPTABLE SYSTEMS: **SEAM2SEAM™ EPDM**

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

01/05/2023

DETAIL NO.

S2S-LS-3A

NOT TO SCALE

GENFLEX: (800) 443-4272 www.genflex.com