



Membrane Edge

GenFlex Primer Shown
As Dotted Line
6" Min.
(152 mm)

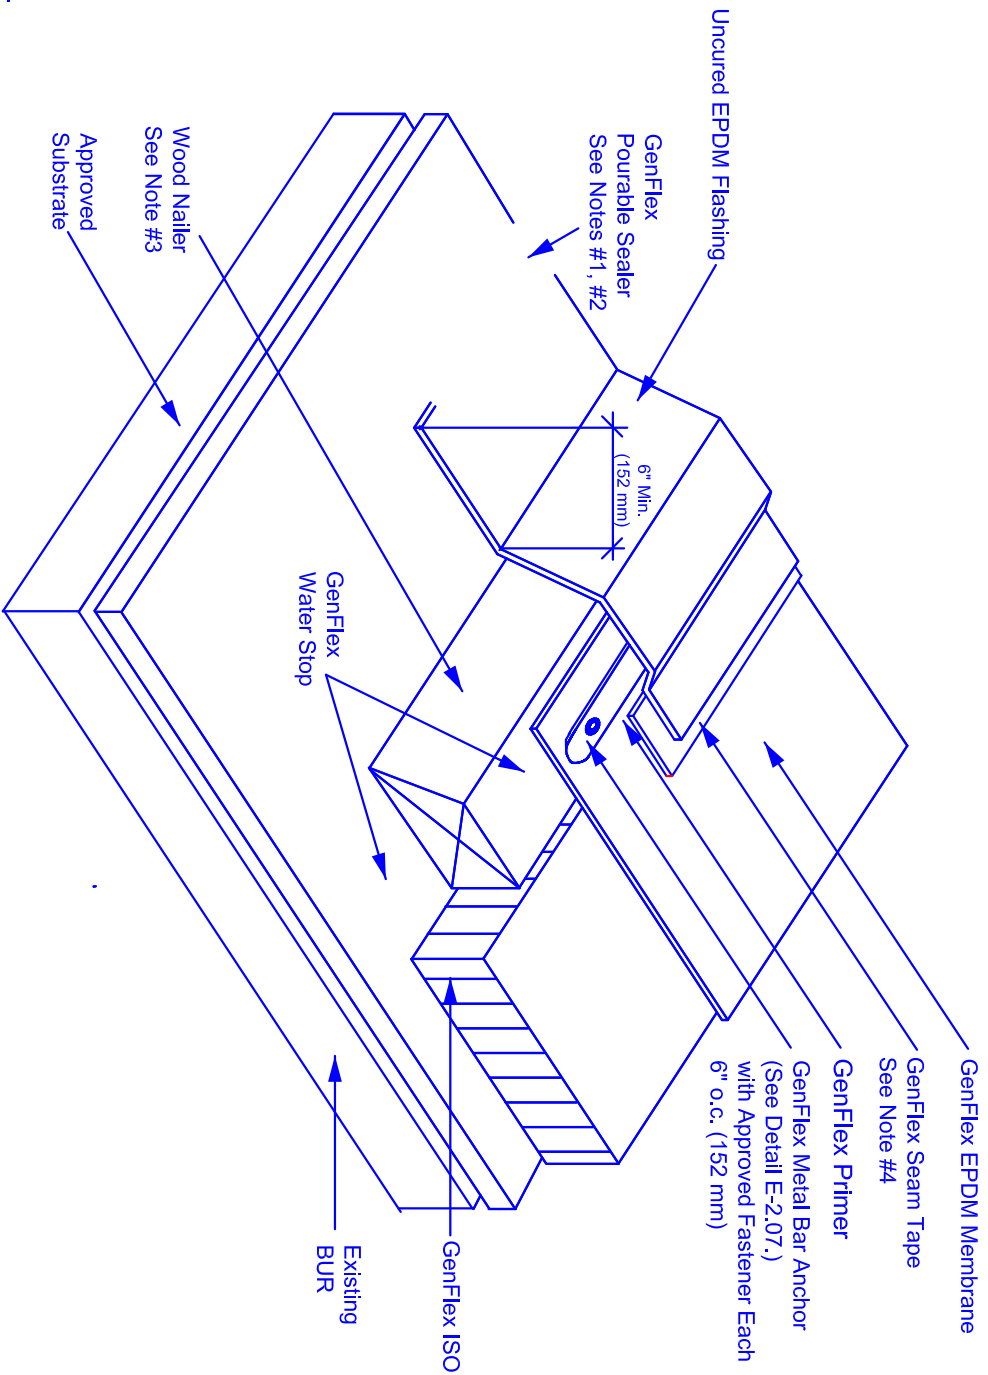

1. Remove all existing stone, and thoroughly clean.
2. GenFlex Roofing Systems is not responsible for damage to BUR.
3. All wood nailers to be approved material. Attachment of wood nailer to be accomplished by using fasteners providing no less than 200lb (556 N) of pullout. Fasteners shall be spaced no greater than 12" o.c. (305 mm).
4. When using GenFlex Seam Tape and GenFlex Bar Cover Tape, first clean the membrane with GenFlex Cleaner, then apply GenFlex Primer.

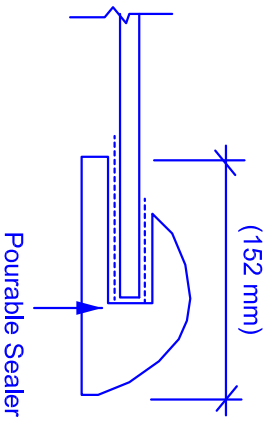

EPDM Systems

Tie-In to BUR with Pitch Pan Sealer

ACCEPTABLE SYSTEMS:
Fully Adhered & Mechanically Attached

MAXIMUM WARRANTY: **20 Years**

ISSUE / REVISION
DATE:
6-25-2015

DETAIL NO.
E-18.03

NOT TO SCALE