
NOTE:

- REFER TO THE GENFLEX™ WEBSITE FOR THE MOST CURRENT INFORMATION.
- 2. REFER TO DETAIL EZT-PS-LS-01 FOR WELD WIDTH.
- 3. REMOVE ALL EXISTING FLASHING, LEAD, ETC. PIPE SURFACE MUST BE FREE OF ALL RUST, GREASE, INSULATION, ETC.
- 4. GENFLEX POURABLE SEALER MOUNDED TO SHED WATER (MINIMUM DEPTH OF 2" (51 mm), REMAINDER OF POCKET MAY BE FILLED WITH A NON-SHRINKING GROUT.
- 5. DO NOT USE OVER EXISTING PENETRATION POCKETS.

- 6. WOOD NAILER MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES.
- 7. DO NOT USE WHEN SERVICE LINE TEMP. EXCEEDS 160 °F (71 °C).
- 8. APPROVED PRIMERS REQUIRED ON PENETRATIONS, INSIDE OF PENETRATION POCKET, AND WHERE GENFLEX EZ TPO PEEL & STICK IS INSTALLED OVER EZ TPO MEMBRANE.
- WHEN REINFORCEMENT OF MEMBRANE IS EXPOSED, REFER TO EZT-PS-LS-04 FOR CUT EDGE SEALANT APPLICATION.



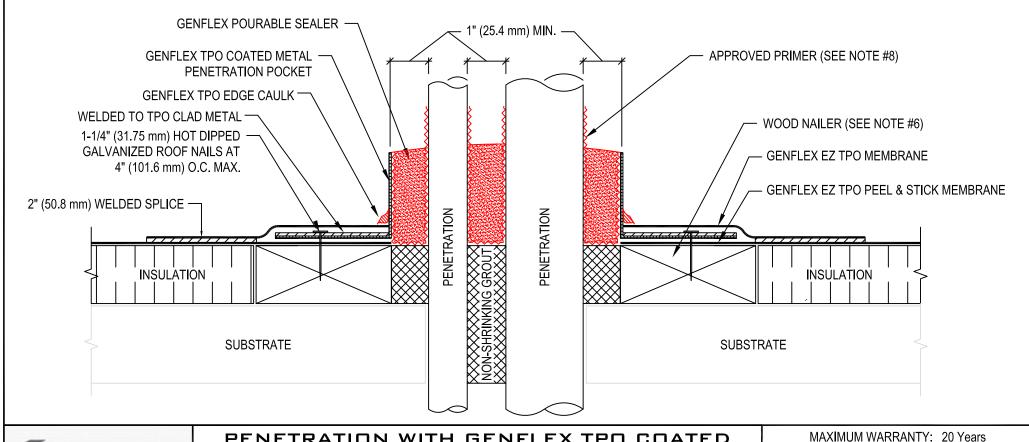

PENETRATION WITH GENFLEX TPO COATED METAL PENETRATION POCKET TO NAILER

ACCEPTABLE SYSTEMS: EZ TPO PEEL & STICK™

ACCEPTABLE SYSTEMS: EZ TPO PEEL & STICK $^{\text{\tiny{TM}}}$ SELF ADHERED

OUE / DEVIOLON

ISSUE / REVISION DATE:

05/01/2023

DETAIL NO.

EZT-PS-P-05

(800) 443-4272 www.genflex.com

NOT TO SCALE