


NOTE:

1. REFER TO WWW.GENFLEX.COM FOR MOST CURRENT INFORMATION.
2. WALKWAY SECTIONS SHOULD BE SPACED PROPERLY TO ALLOW FOR DRAINAGE. SPACING BETWEEN WALKWAY SECTIONS SHOULD BE 1" (25 mm) MIN.
3. REMOVE THE SELVAGE EDGE BEFORE APPLYING THE WALKWAY PROTECTION TO THE ROOF SURFACE.
4. HOLD WALKWAY PAD BACK FROM SEAMS A MIN. OF 3" (76.2 mm) OF EDGE ON BOTH SIDES.
5. MAXIMUM INSTALLATION LENGTH OF 10'.

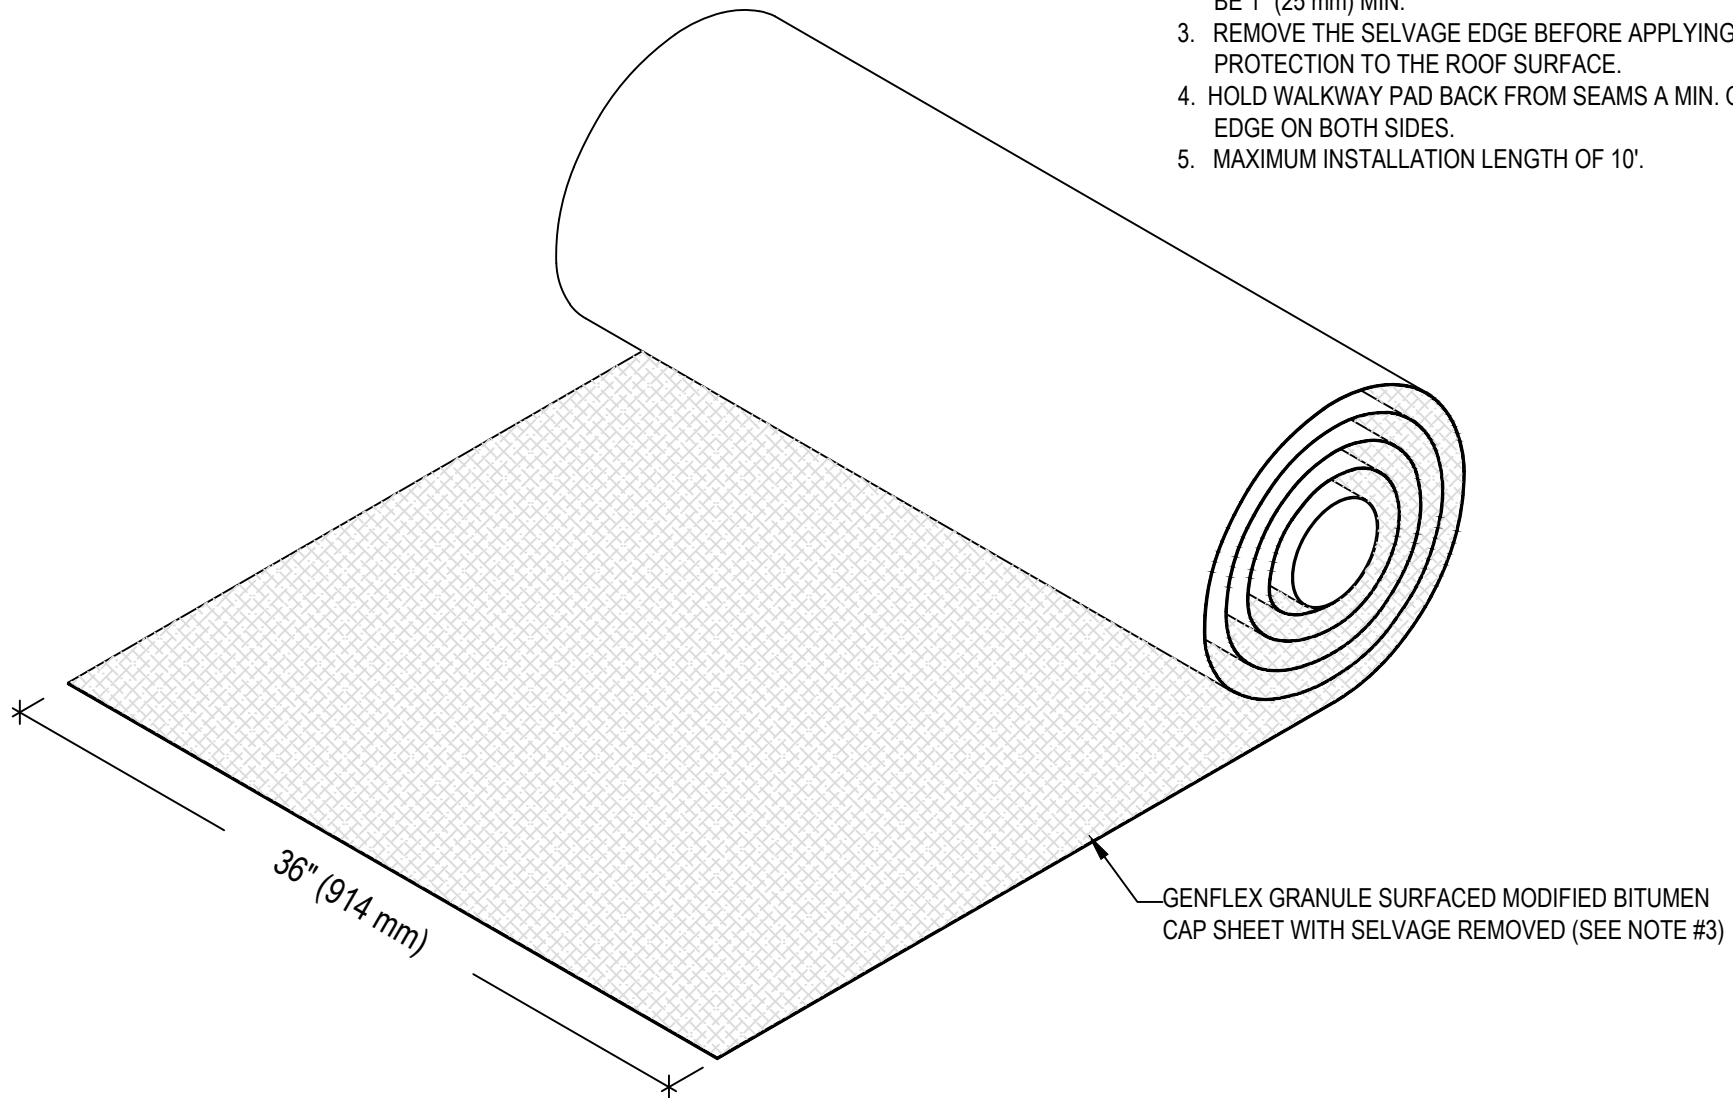

**WALKWAY PAD**

**GENFLEX™**

ACCEPTABLE SYSTEMS: **MODIFIED BITUMEN**

GENFLEX: (800) 443-4272 [www.genflex.com](http://www.genflex.com)

**MAXIMUM WARRANTY: 20 Years**

ISSUE / REVISION  
DATE:

**05/20/2025**

NOT TO SCALE

**DETAIL NO.**

**MB-M-8**