


1. REFER TO WWW.GENFLEX.COM FOR MOST CURRENT INFORMATION.
2. WOOD NAILERS MUST BE INSTALLED WITH SUITABLE FASTENERS TO MEET APPLICABLE BUILDING CODES.
3. ALL SHEET METAL MUST BE INSTALLED PER SMACNA GUIDELINES.

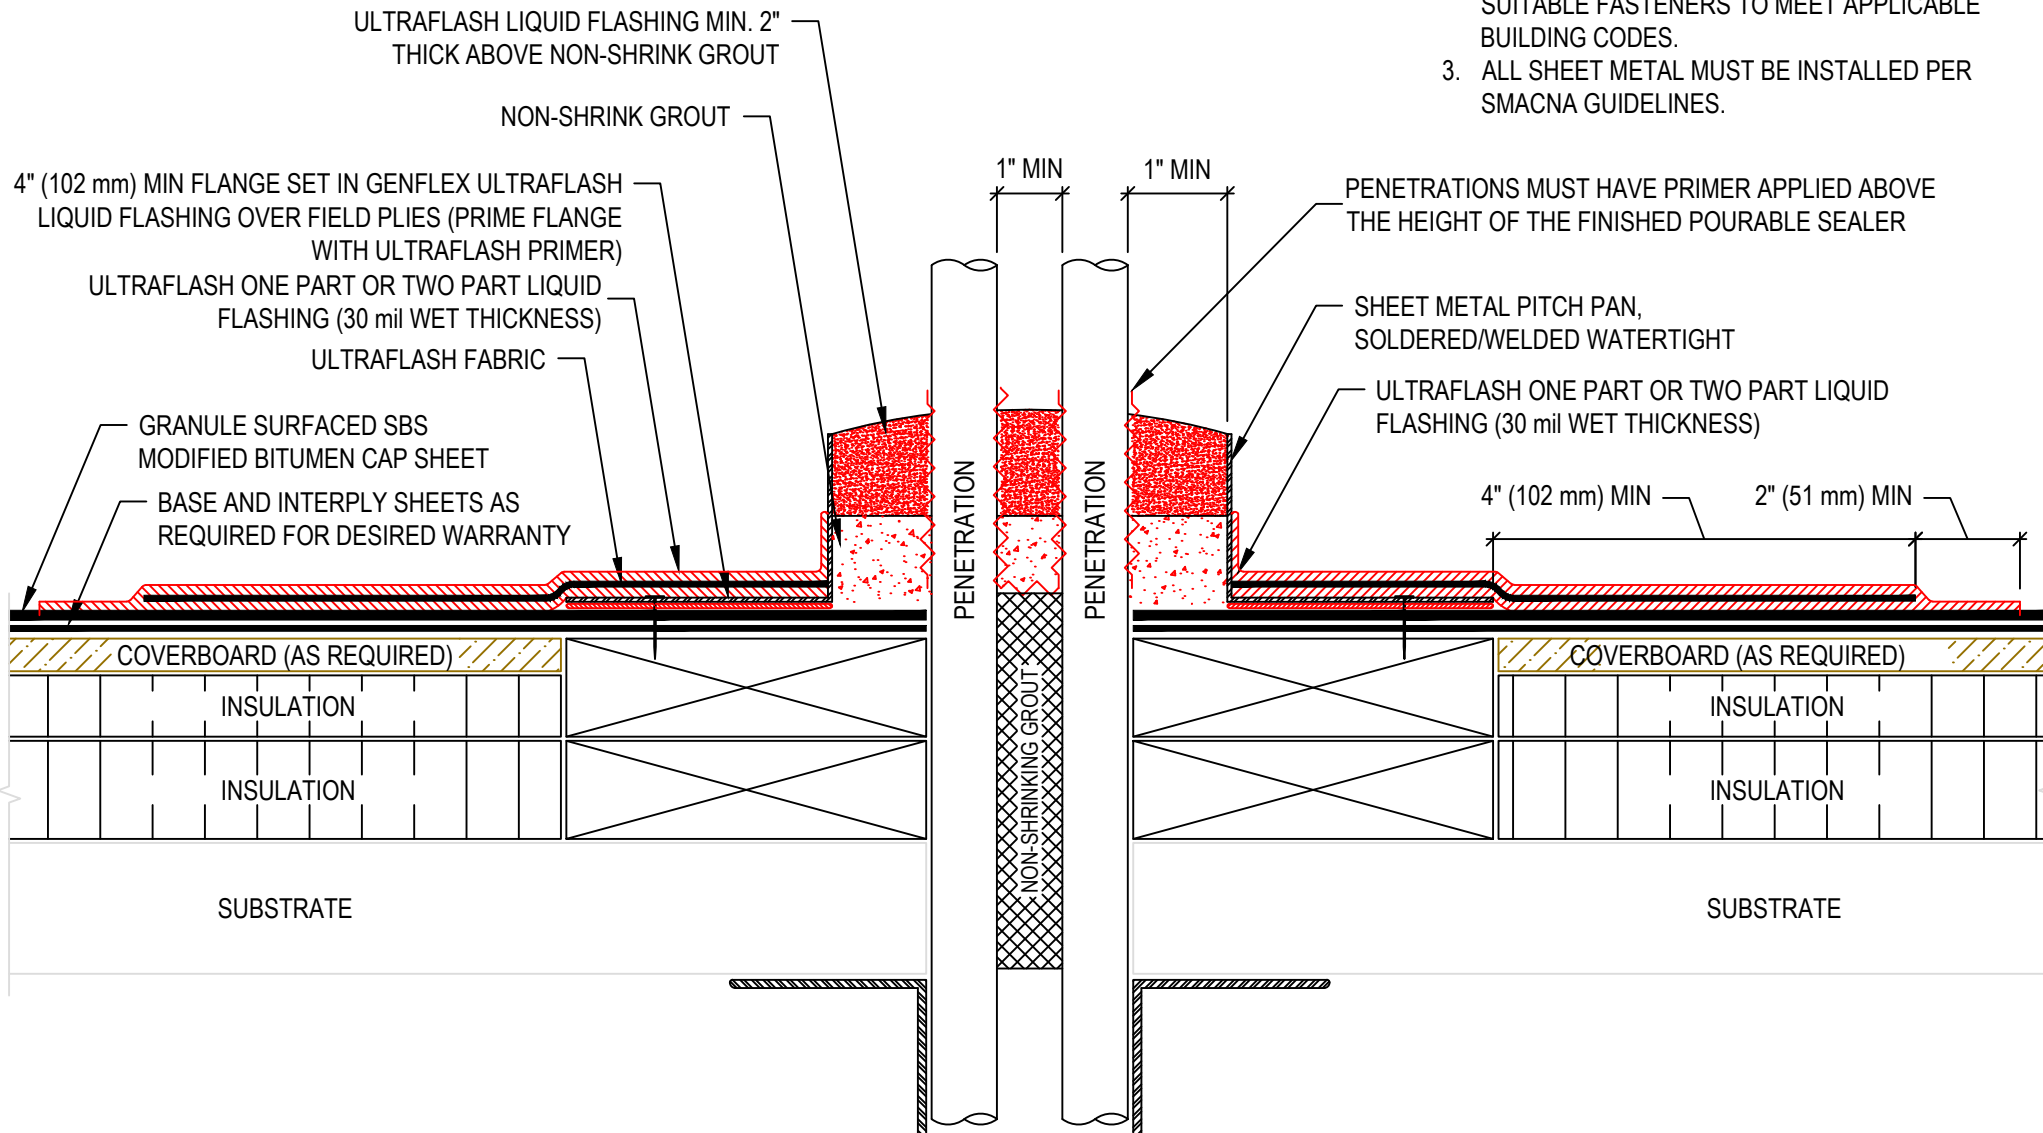

ULTRAFLASH PENETRATION POCKET

GENFLEX™

ACCEPTABLE SYSTEMS: **MODIFIED BITUMEN**

GENFLEX: (800) 443-4272 www.genflex.com

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

05/21/2025

NOT TO SCALE

DETAIL NO.

MB-P-8