

NOTE:

1. REFER TO THE GENFLEX™ WEBSITE FOR THE MOST CURRENT INFORMATION.
2. PROPERLY CLEAN SURFACE OF LOOSE GRAVEL AND OTHER CONTAMINANTS PRIOR TO APPLYING NEW MEMBRANE.
3. MAXIMUM 10" (254 mm) LONG FASTENERS (NOTE: WOOD BLOCKING MAY BE SUBSTITUTED FOR INSULATION TO REDUCE FASTENER LENGTH REQUIREMENT).
4. WOOD NAILER, WHEN USED, MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES.
5. APPLY EDGE CAULK AROUND ENTIRE PERIMETER OF FLASHING. REFER TO LS-09 FOR SEAM EDGE TREATMENT. EDGE CAULK REQUIRED IF PEEL & STICK PRODUCTS ARE USED.
6. APPROPRIATE GENFLEX MEMBRANE ADHESIVE REQUIRED BETWEEN MEMBRANE AND INSULATION FOR ADHERED SYSTEMS.

WARRANTY MEMBRANE REQUIREMENTS:

15-YEAR


EPDM - 45 mil

20-YEAR

EPDM SA - 60 mil

20-YEAR

EPDM - 60 mil

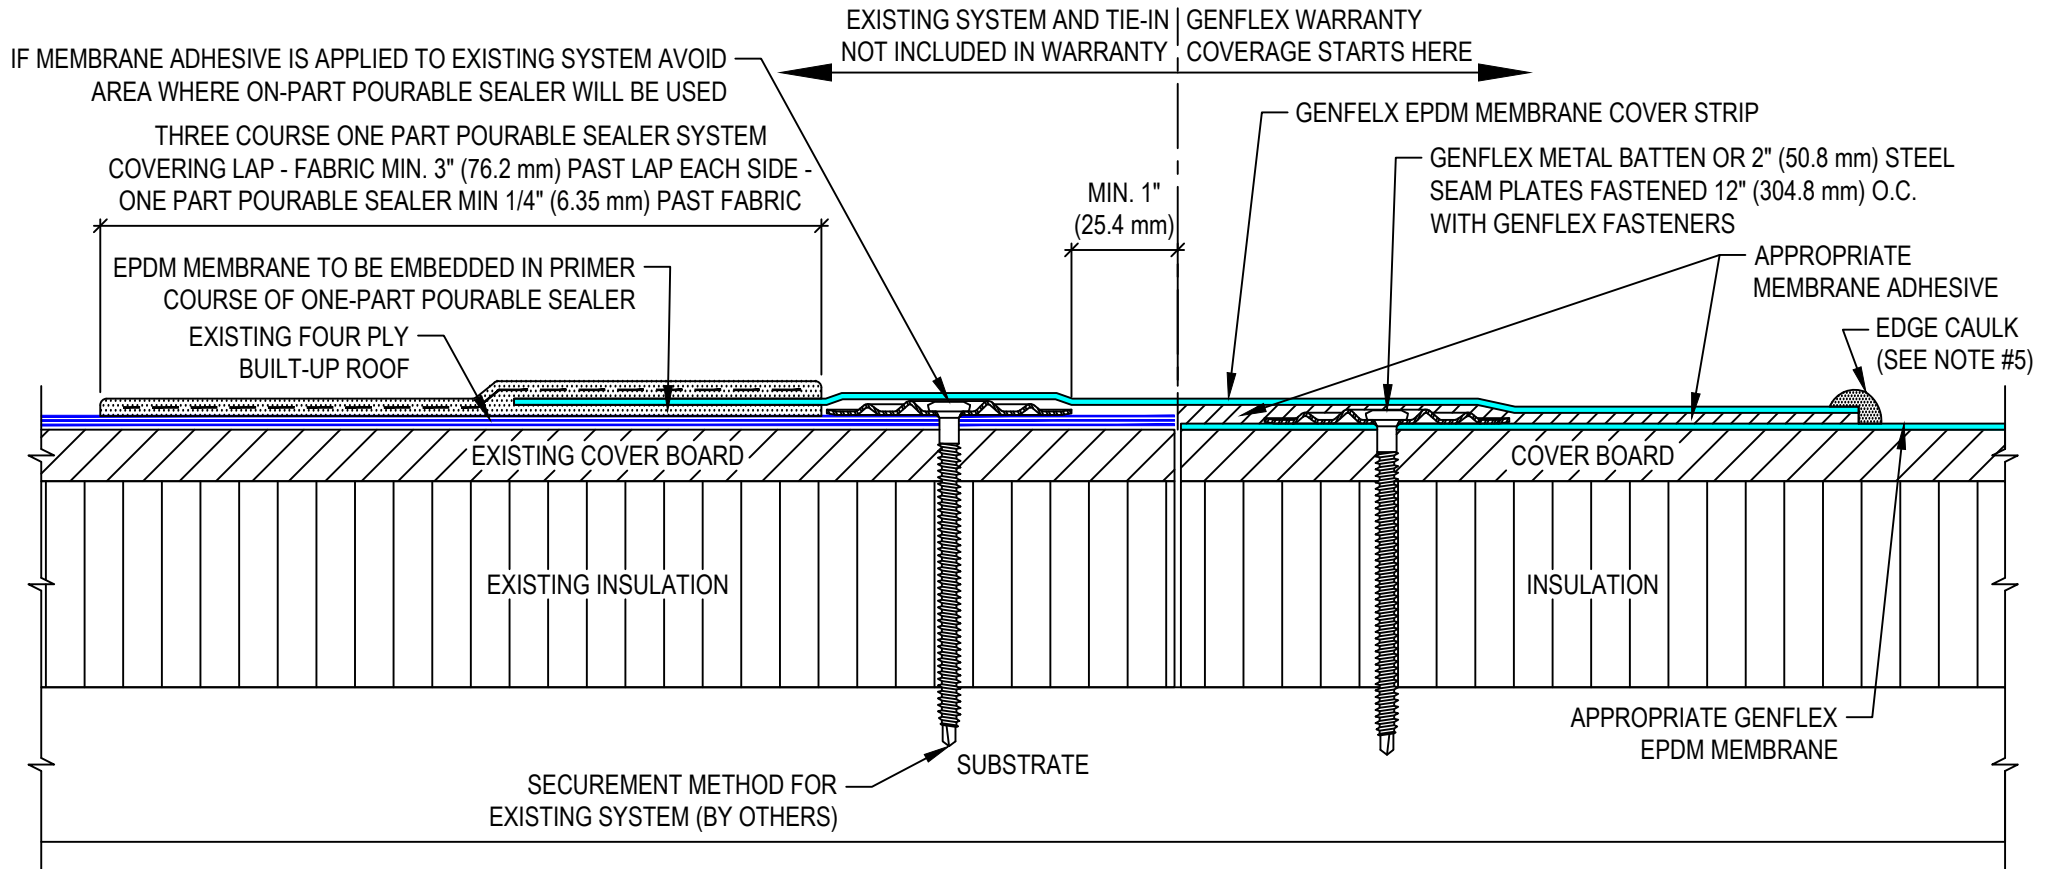

**NEW GENFLEX EPDM SYSTEM TIE-IN
TO EXISTING ASPHALT OR BUR SYSTEM**

MATERIAL: EPDM

ACCEPTABLE SYSTEMS: ALL

MAXIMUM WARRANTY: SEE TABLE

ISSUE / REVISION
DATE:

05/01/2026

DETAIL NO.

BT-25

GENFLEX: (800) 443-4272 www.genflex.com

NOT TO SCALE