


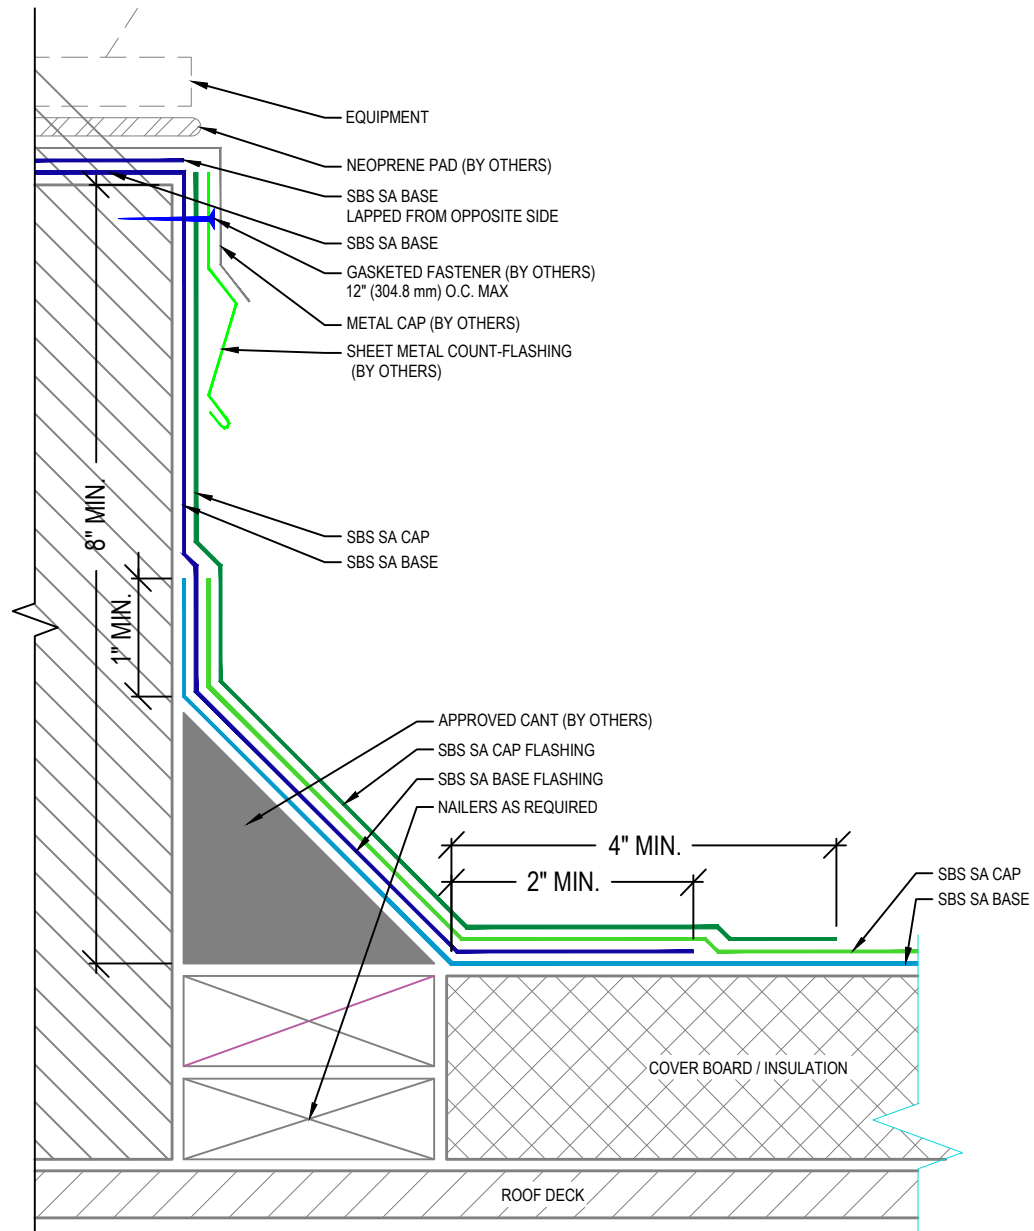

NOTE:

1. REFER TO THE GENFLEX™ WEBSITE FOR THE MOST CURRENT INFORMATION.
2. METAL EDGE FLASHING, WOOD BLOCKING AND ATTACHMENTS SHALL COMPLY WITH ANSI/SPRI ES-1.
3. WOOD NAILERS MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES.
4. ALL SHEET METAL IS TO BE INSTALLED PER SMACNA GUIDELINES.
5. FOR HEAT FUSED MEMBRANE APPLICATIONS, SET METAL FLASHING ONTO HEATED SOFTENED MEMBRANE.
6. MEMBRANE END LAPS ARE TO BE A MINIMUM 6" (152.4 mm) AND ADHERED AT ALL MEMBRANE TO MEMBRANE SEAMS.
7. MEMBRANE LAPS AT FLANGED METAL TO BE 3" (76.2 mm) MINIMUM AND FULLY BONDED TO PRIMED METAL SURFACE.
8. EXTENSION OF FIELD BASE/PLIES 1" MIN. ABOVE TOP OF CANT, REQUIRED (NOT SHOWN FOR CLARITY).
9. IF THE FLASHING MUST EXTEND 36" (914 mm) OR GREATER ABOVE ROOF, SEE DETAIL MB-BT-09 OR MB-BT-10 FOR MEMBRANE TRANSITION OPTIONS.
10. USE ONLY WHEN ROOF DECK IS SUPPORTED BY THE WALL.



CURB DETAIL - EQUIPMENT SUPPORT

SBS SA APPLICATION

GENFLEX

ACCEPTABLE SYSTEMS: **SBS SELF-ADHERED**

GENFLEX: (800) 443-4272 www.genflex.com

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

06/10/2026

NOT TO SCALE

DETAIL NO.

MBSA-BT-1