


- NOTE:
- 1. REFER TO THE GENFLEX™ WEBSITE FOR THE MOST CURRENT INFORMATION.
 - 2. WOOD BLOCKING MAY BE REQUIRED AT DRAIN, DEPENDING ON INSULATION THICKNESS AND TYPE (NOT SHOWN FOR CLARITY). WOOD NAILERS MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES.
 - 3. ALL SHEET METAL IS TO BE INSTALLED PER SMACNA GUIDELINES.
 - 4. FOR HEAT FUSED MEMBRANE APPLICATIONS, SET METAL FLASHING ONTO HEATED SOFTENED MEMBRANE.
 - 5. MEMBRANE END LAPS ARE TO BE A MINIMUM 6" (152.4 mm) AND ADHERED AT ALL MEMBRANE TO MEMBRANE SEAMS.
 - 6. MEMBRANE LAPS AT FLANGED METAL TO BE 3" (76.2 mm) MINIMUM AND FULLY BONDED TO PRIMED METAL SURFACE.
 - 7. DRAIN INSTALLATION AND RE-EQUIPMENT BY OTHERS.
 - 8. WHEN DRAIN SUMP EXCEEDS 1:12, THE USE OF A DRAIN INSERT IS RECOMMENDED.
 - 9. THE MEMBRANE SHOULD EXTEND A MIN. OF 1/2" (12.7 mm) BEYOND THE CLAMPING RING AND SHOULD NOT BE SMALLER THAN THE DIAMETER OF THE LEADER PIPE.
 - 10. IF A FIELD SEAM IS BETWEEN 6" - 9" (152.4 mm - 228.6 mm) OF DRAIN COMPRESSION RING, A TARGET PATCH IS REQUIRED.
 - 11. NO SEAM CAN BE LESS THAN 6" (152.4 mm) FROM THE CLAMPING RING.
 - 12. ALL PLIES/SHEETS ENTERING DRAIN AREA TO BE SET IN APPROPRIATE ADHESIVE/SEALANT OR HEAT WELDED. NO "DRY PLIES" TO ENTER DRAIN.

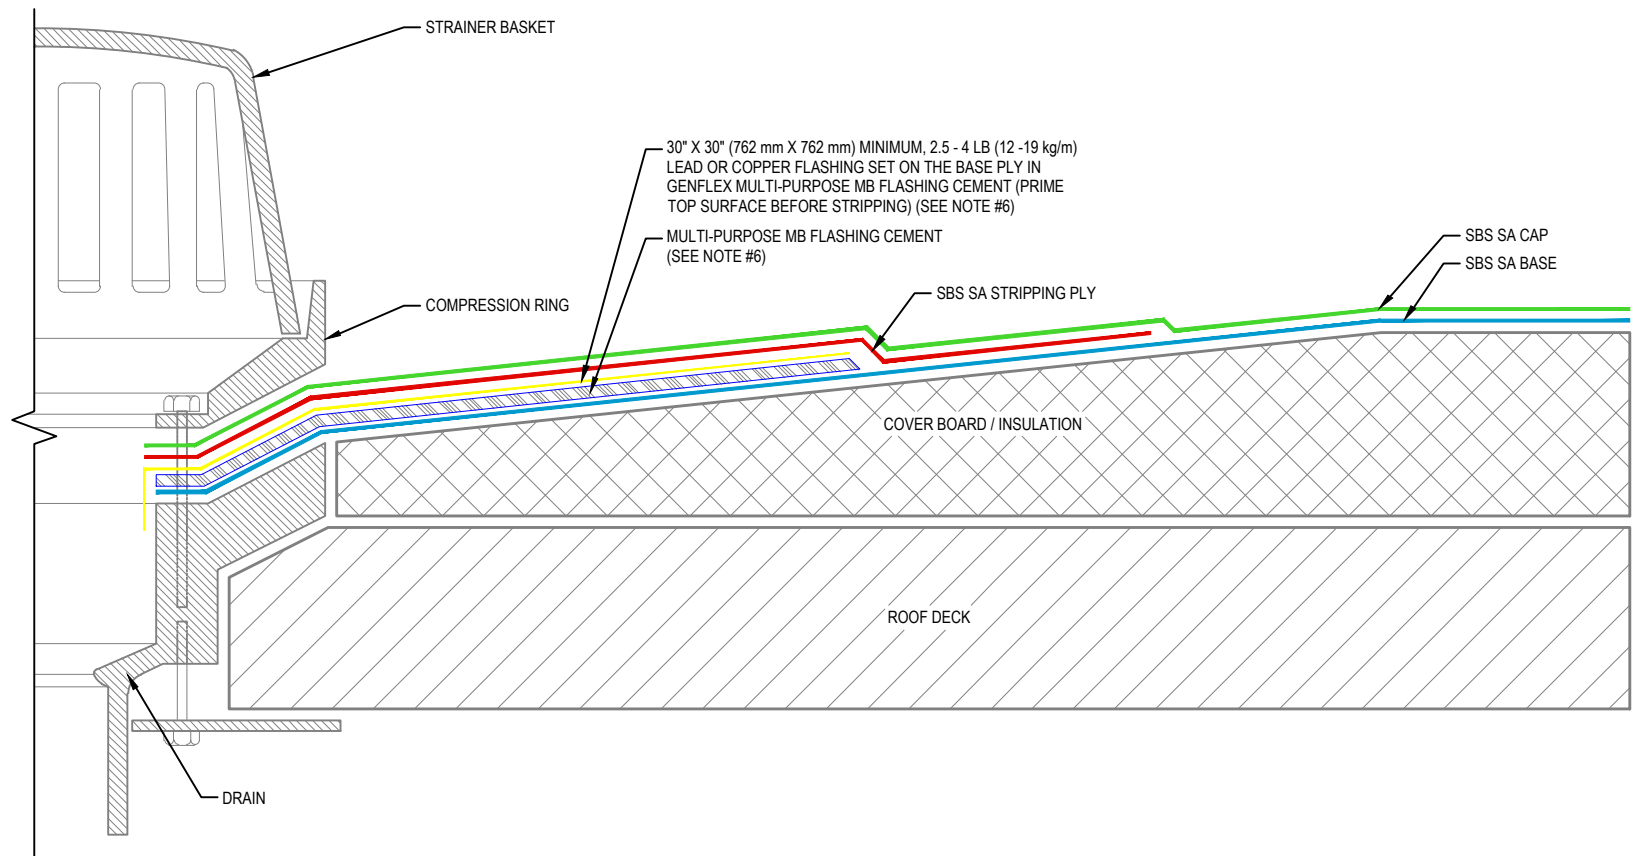

ROOF DRAIN SBS SA APPLICATION

GENFLEX

ACCEPTABLE SYSTEMS: **SBS SELF-ADHERED**

GENFLEX: (800) 443-4272 www.genflex.com

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

06/10/2026

NOT TO SCALE

DETAIL NO.

MBSA-D-1