


NOTE:

1. REFER TO THE GENFLEX™ WEBSITE FOR THE MOST CURRENT INFORMATION.
2. WOOD NAILERS MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES.
3. ALL SHEET METAL IS TO BE INSTALLED PER SMACNA GUIDELINES.
4. FOR HEAT FUSED MEMBRANE APPLICATIONS, SET METAL FLASHING ONTO HEATED SOFTENED MEMBRANE.
5. MEMBRANE END LAPS ARE TO BE A MINIMUM 6" (152.4 mm) AND ADHERED AT ALL MEMBRANE TO MEMBRANE SEAMS.
6. MEMBRANE LAPS AT FLANGED METAL TO BE 3" (76.2 mm) MINIMUM AND FULLY BONDED TO PRIMED METAL SURFACE.
7. USE ONLY WHEN ROOF DECK IS SUPPORTED BY THE WALL.
8. EXTENSION OF FIELD BASE/PLIES 1" (25.4 mm) MIN. ABOVE TOP OF CANT.
9. FLASHING LAPS MUST BE OFFSET FROM FIELD LAPS A MINIMUM OF 12" (304.8 mm).
10. IF WALL HEIGHT EXCEEDS 36" (914.4 mm), REFER TO DETAILS MB-BT-09 OR MB-BT-10 FOR MEMBRANE TRANSITION OPTIONS.

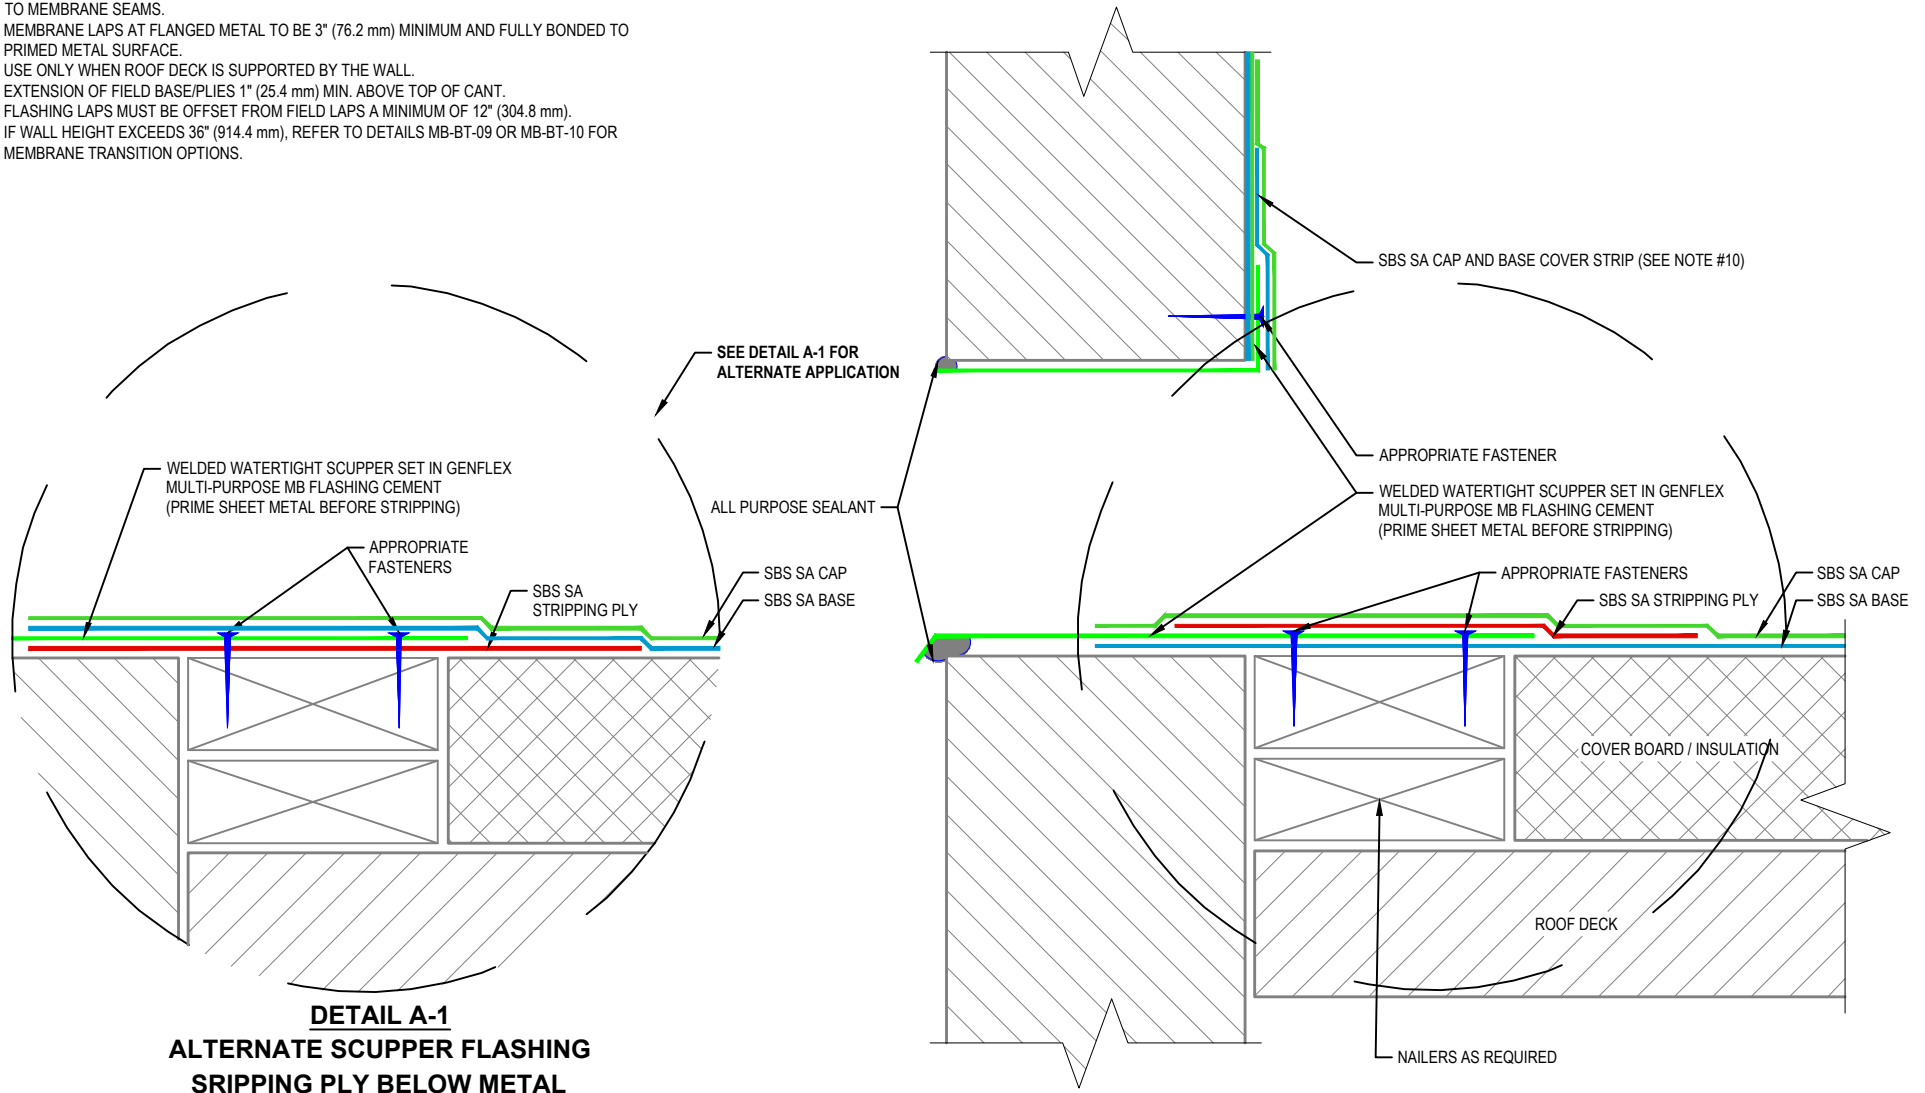

THROUGHWALL SCUPPER SBS SA APPLICATION

GENFLEX

ACCEPTABLE SYSTEMS: **SBS SELF-ADHERED**

GENFLEX: (800) 443-4272 www.genflex.com

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

06/10/2026

NOT TO SCALE

DETAIL NO.

MBSA-S-1