


USE APPROPRIATE TERMINATION



NOTE:

1. REFER TO GENFLEX™ WEBSITE FOR MOST CURRENT INFORMATION.
2. SCUPPER MUST BE WELDED METAL SLEEVE, ROUND ALL SHEET METAL FLANGE CORNERS.
3. APPLY EPDM EDGE CAULK AROUND ENTIRE PERIMETER OF PEEL & STICK FLASHING. REFER TO EZE-PS-LS-09 FOR SEAM EDGE TREATMENT.
4. WOOD NAILER MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES.
5. FLANGE OF METAL MUST BE FULLY SUPPORTED BY WOOD AND TERMINATED AT LEAST 1/2" (12.7 mm) FROM EDGE OF WOOD.
6. APPROVED PRIMER REQUIRED ON ALL VERTICAL SURFACES.

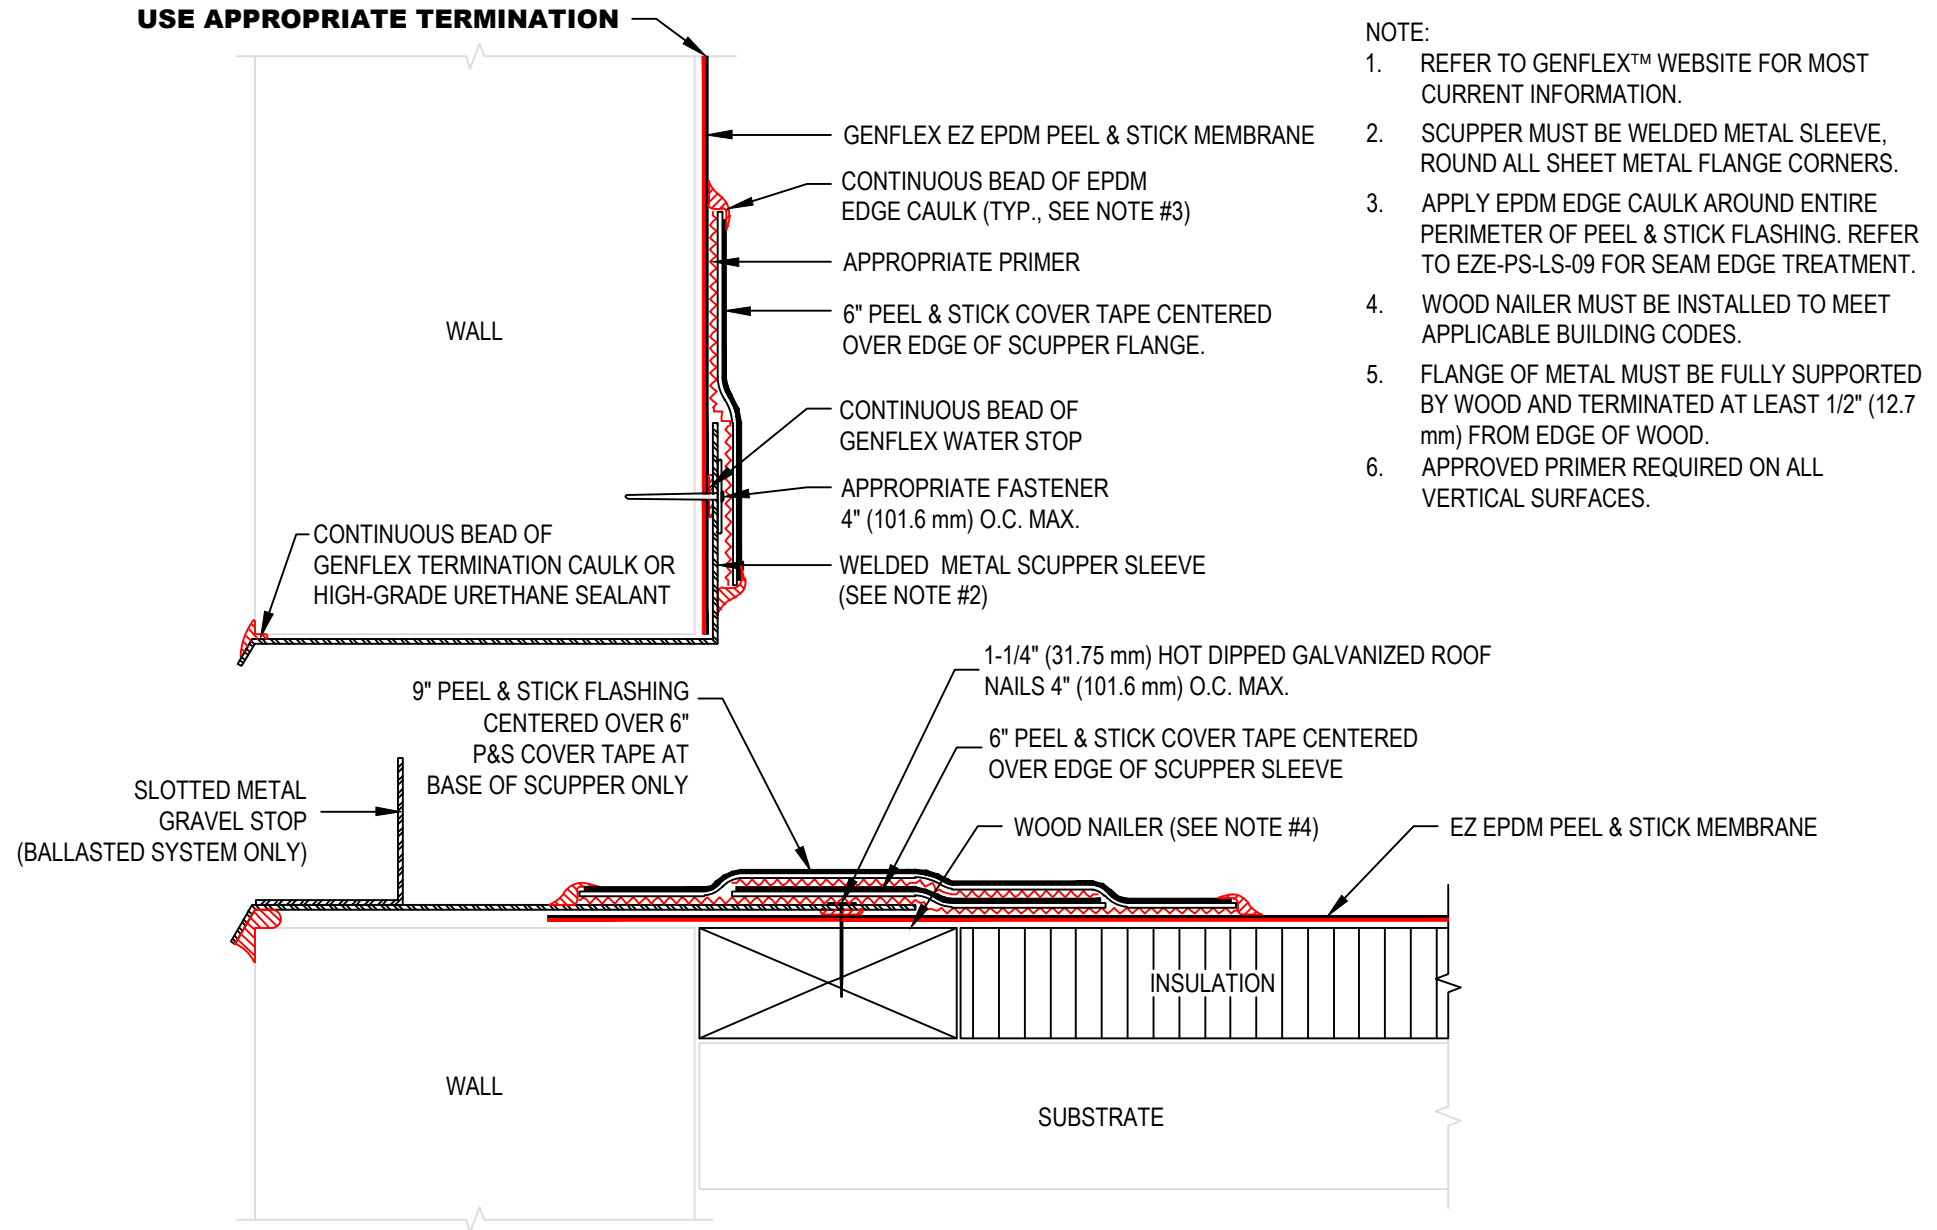

THRU-WALL SCUPPER (WELDED SLEEVE)

GENFLEX

ACCEPTABLE SYSTEMS: EZ EPDM PEEL & STICK™ SELF ADHERED

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

01/30/2026

DETAIL NO.

EZE-PS-S-01

NOT TO SCALE

(800) 443-4272 www.genflex.com