


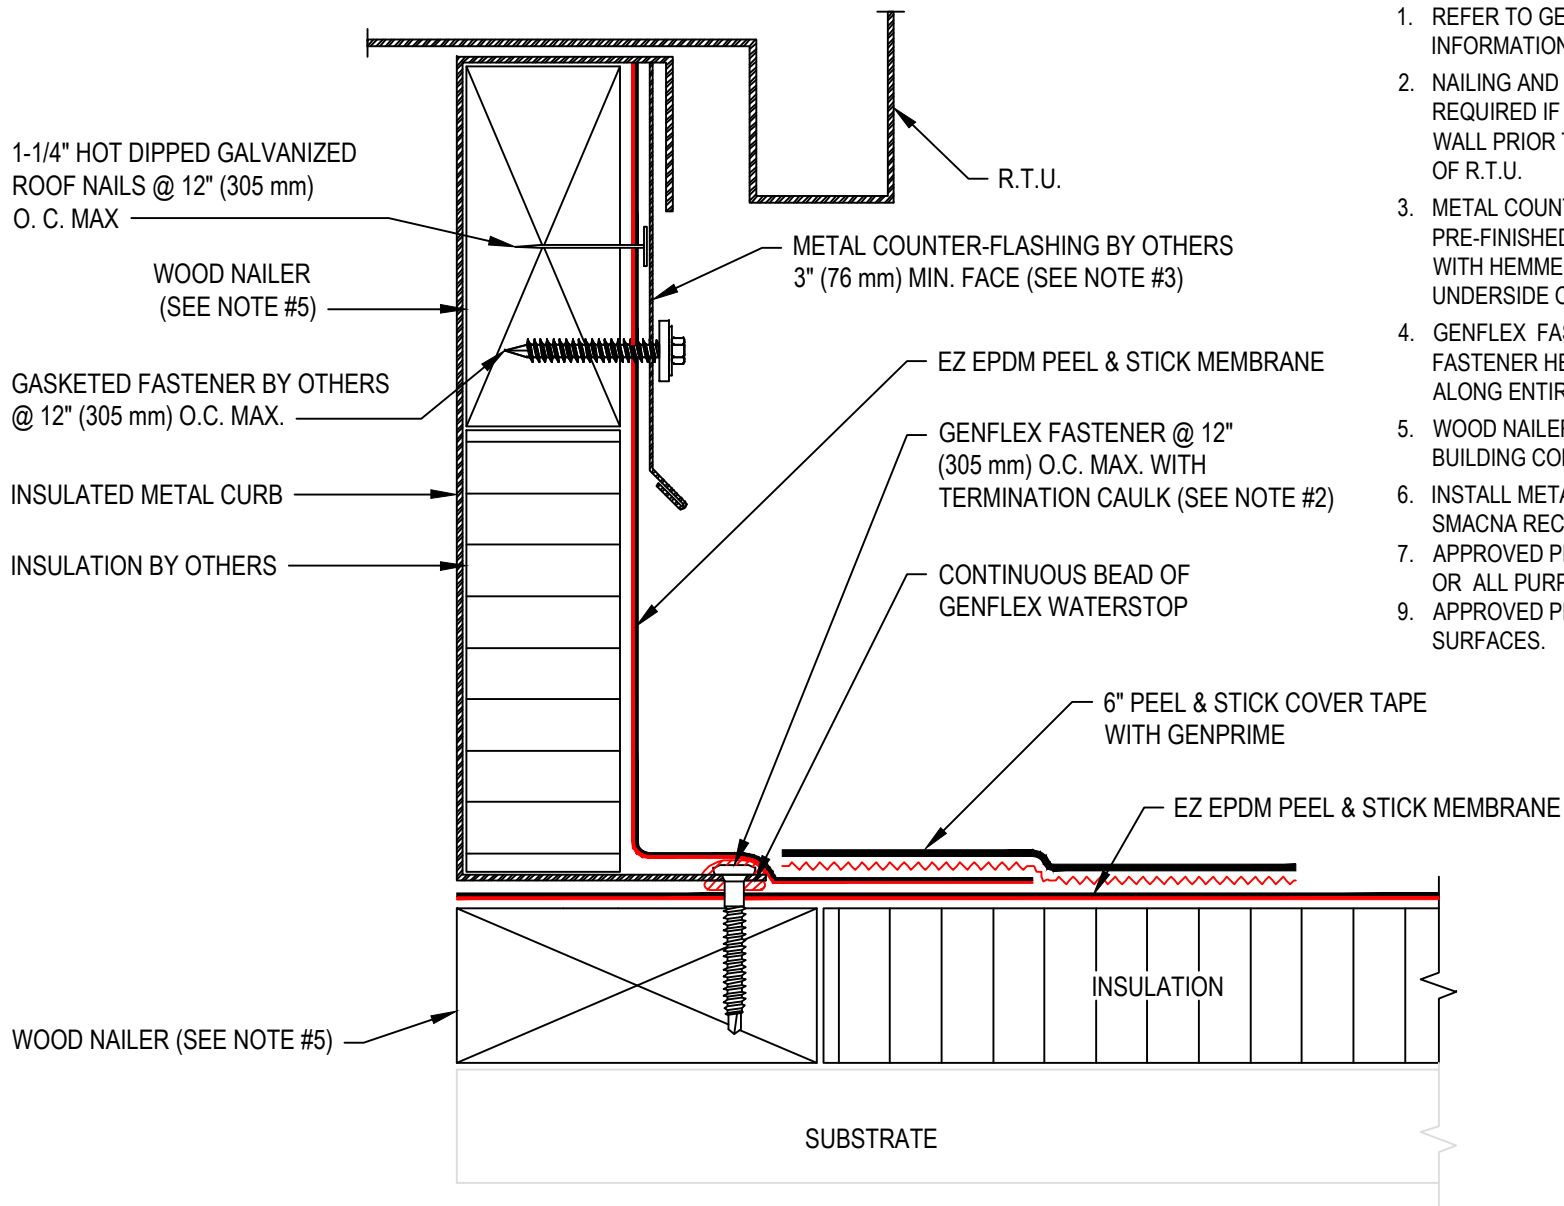

NOTE:

1. REFER TO GENFLEX™ WEBSITE FOR MOST CURRENT INFORMATION.
2. NAILING AND METAL COUNTER-FLASHING ARE NOT REQUIRED IF MEMBRANE IS RUN UP AND OVER CURB WALL PRIOR TO INSTALLATION OF R.T.U.
3. METAL COUNTER-FLASHING SHALL BE 24 GAUGE PRE-FINISHED STEEL OR .032" MIN. ALUMINUM FORMED WITH HEMMED LOWER EDGE MOUNTED TIGHTLY TO UNDERSIDE OF MECHANICAL UNIT.
4. GENFLEX FASTENER WITH TERMINATION CAULK OVER FASTENER HEADS. TERMINATION CAULK ALSO REQUIRED ALONG ENTIRE EDGE OF CURB FLANGE.
5. WOOD NAILER MUST BE INSTALLED TO MEET APPLICABLE BUILDING CODES.
6. INSTALL METAL WORK IN ACCORDANCE WITH CURRENT SMACNA RECOMMENDATIONS.
7. APPROVED PRIMERS INCLUDE GENPRIME, CLEAR PRIMER OR ALL PURPOSE LVOC PRIMER.
9. APPROVED PRIMER REQUIRED ON ALL VERTICAL SURFACES.



**TERMINATION AT R.T.U. WITH COUNTER-FLASHING
(UNIT FLANGE ABOVE MEMBRANE)**

GENFLEX

ACCEPTABLE SYSTEMS: EZ EPDM PEEL & STICK™ SELF ADHERED

MAXIMUM WARRANTY: 20 Years

ISSUE / REVISION
DATE:

09/25/2026

DETAIL NO.

EZE-PS-T-07

NOT TO SCALE

(800) 443-4272 www.genflex.com