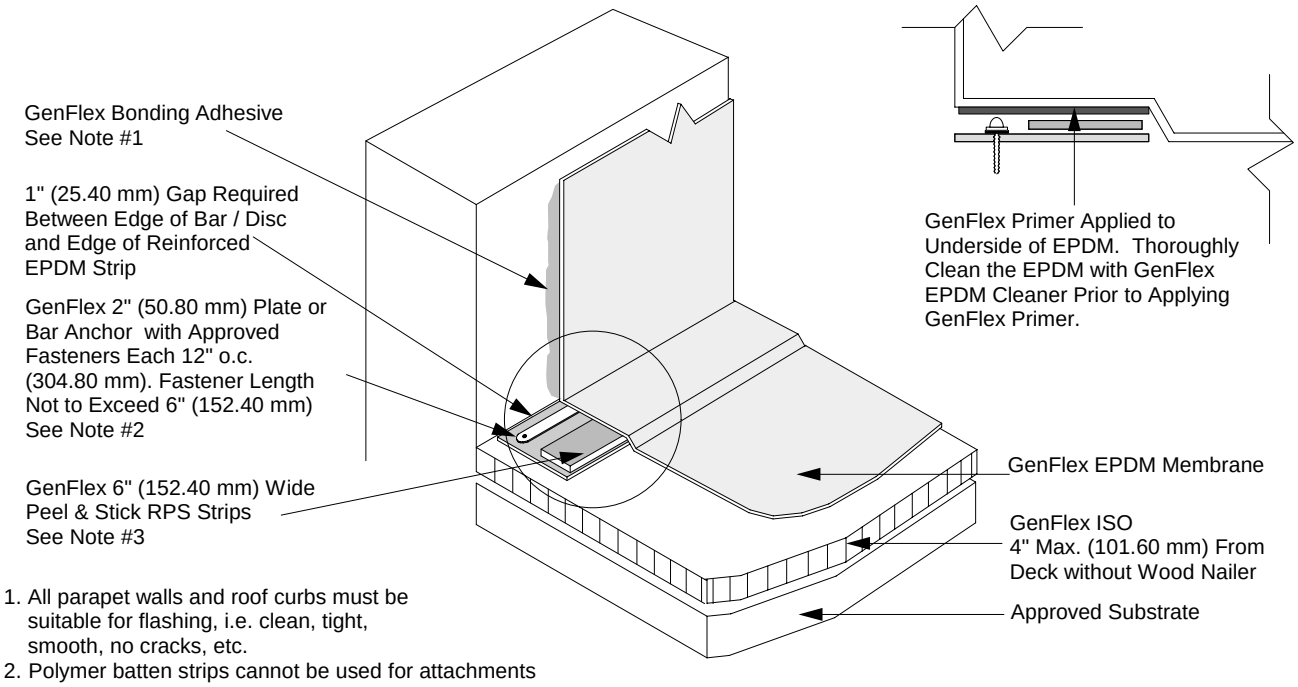

1. All parapet walls and roof curbs must be suitable for flashing, i.e. clean, tight, smooth, no cracks, etc.
2. Polymer batten strips cannot be used for attachments into masonry wall substrates. Use only on smooth surfaces, e.g. wood or insulation.
3. Instead of Peel & Stick RPS strip, standard RPS strip may be used in conjunction with GenFlex G-400 Seam Adhesive, following GenFlex Seam Adhesive application methods.

GenFlex Roofing Systems

10/06

Horizontally Secured Peel & Stick RPS	**Detail #: E-2.08**	**EPDM Systems**