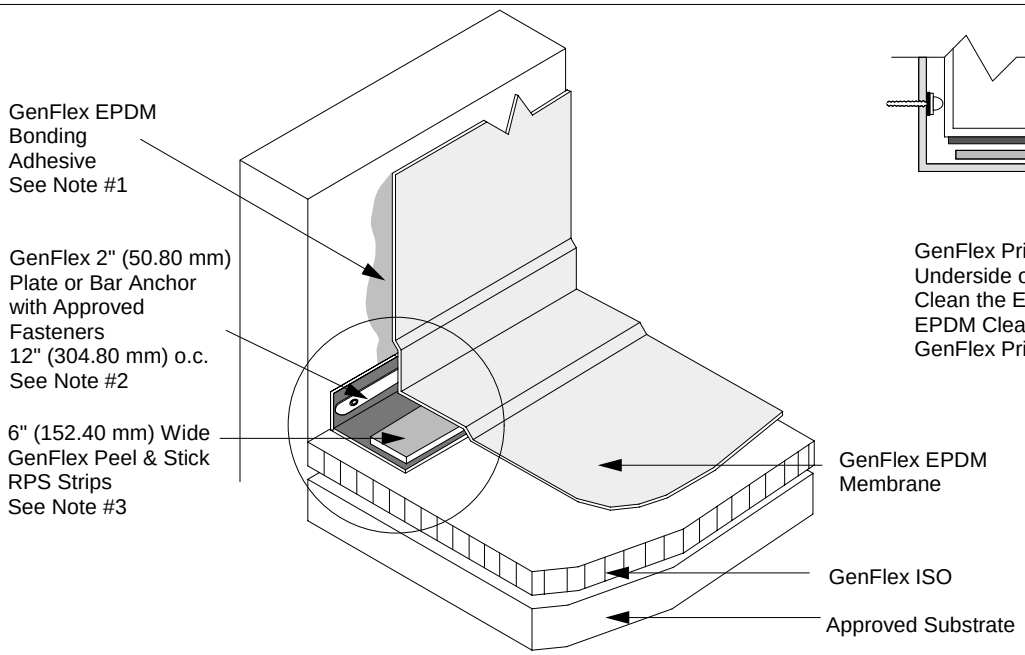

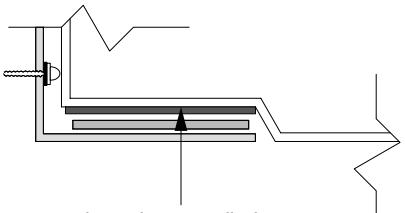

GenFlex Primer Applied to Underside of EPDM. Thoroughly Clean the EPDM with GenFlex EPDM Cleaner Prior to Applying GenFlex Primer.

1. All parapet walls and roof curbs must be suitable for flashing, clean, tight, smooth, no cracks, etc.
2. Polymer batten strips cannot be used for attachments into masonry wall substrates. Use only on smooth surfaces, e.g. wood or insulation.
3. Instead of Peel & Stick RPS strip, standard RPS strip may be used in conjunction with G-400 Seam Adhesive following GenFlex Splice application methods.

GenFlex Roofing Systems

10/06

Vertically Secured Peel & Stick RPS	Detail #: E-2.09	EPDM Systems