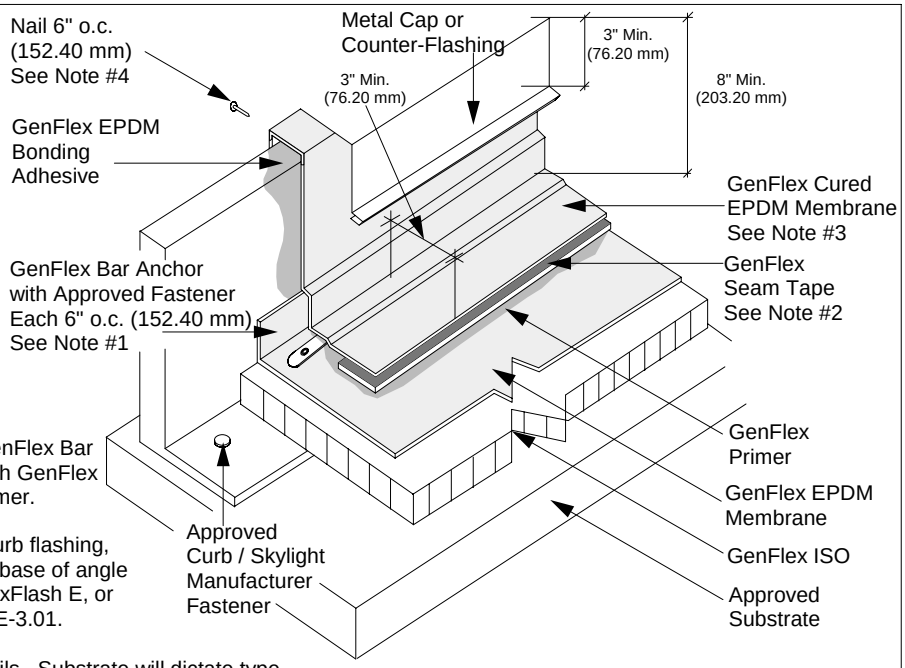

1. Polymer batten strips cannot be used for attachments into masonry wall substrates. Use only on smooth surfaces, e.g. wood or insulation.

2. When using GenFlex Seam Tape and GenFlex Bar Cover Tape, first clean the membrane with GenFlex EPDM Cleaner. Then apply GenFlex Primer.

3. When cured flashing is used on wall or curb flashing, vertical seams must be stripped-in at the base of angle change with a 6" (152.40 mm) strip of FlexFlash E, or 7" (177.80 mm) Peel & Stick. See Detail E-3.01.

4. Nails are approved where shown on details. Substrate will dictate type of nail used. Any nail type used must be corrosion resistant.

5. Metal coping cap, expansion joint, and edge details are typical only. All metalwork should be installed to sheet metal codes (SMACNA). Clean all metal prior to installation of GenFlex materials.

GenFlex Roofing Systems

10/06

Horizontally Secured Curb / Skylight Flashing	Detail #: E-3.08	EPDM Systems